

Rear Door - SuperCab

Special Tool(s) / General Equipment

Door Lift


Removal

NOTICE: The rear door should only be removed and installed to the vehicle at 90° door open position. Detaching and reattaching the rear door at full open (170°) could possibly release an internal spring in the hinge mechanism and therefore disable the hinge function completely.


NOTE: Removal steps in this procedure may contain installation details.

NOTE: LH shown, RH similar.


1. Open the front door.

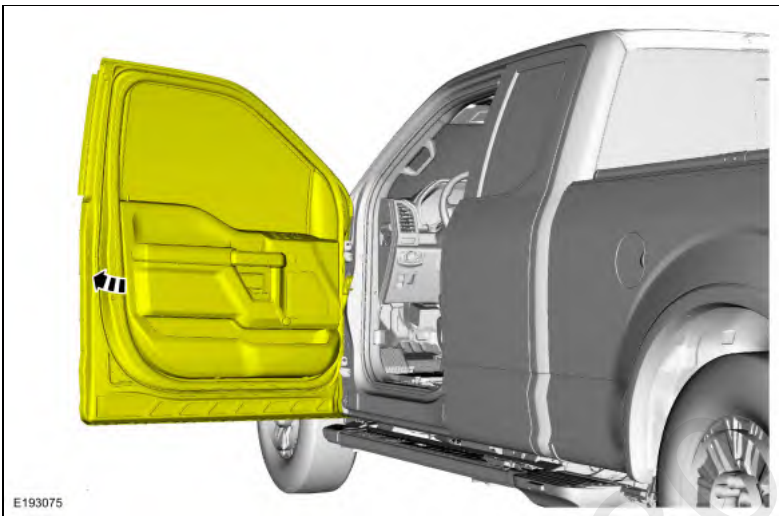


2. Open the rear door.

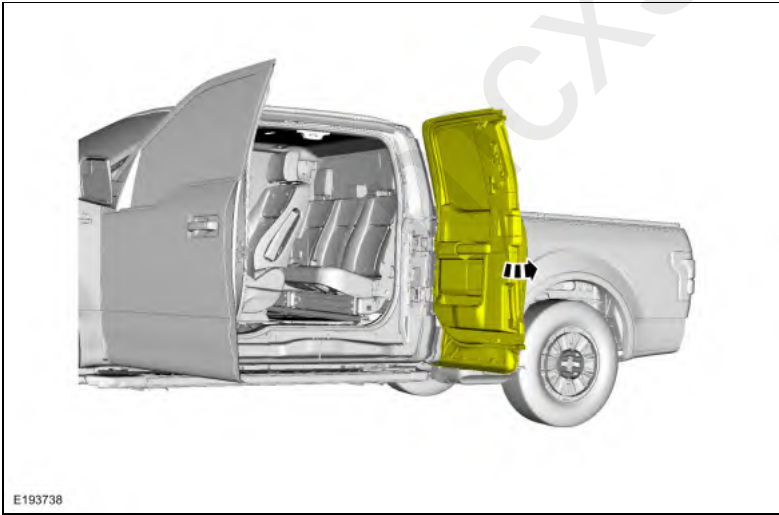


3. Remove the rear body access trim panel.

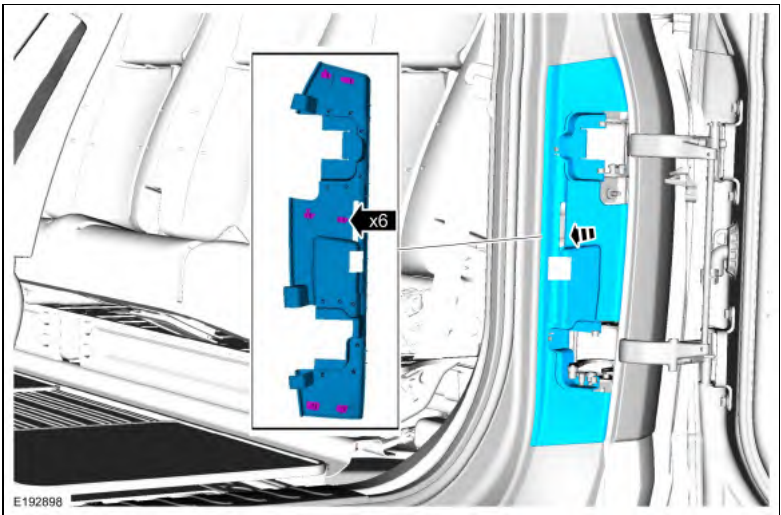

4. Disconnect the rear door electrical connector.

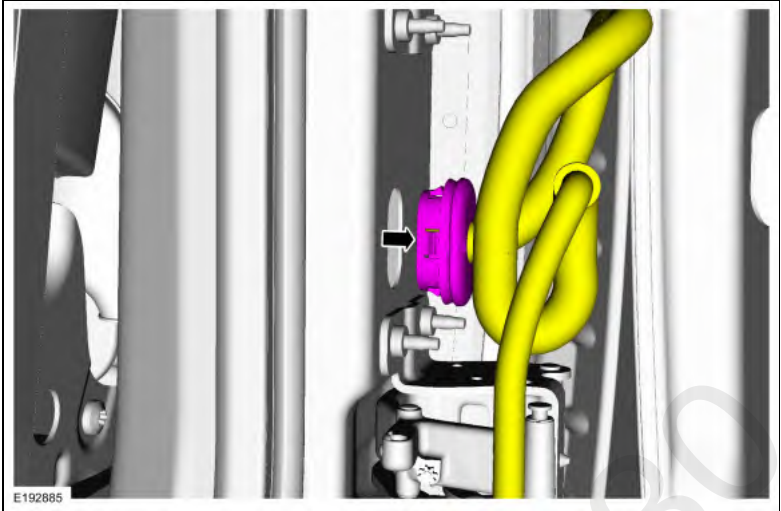

5. Remove the bolts.
Use the General Equipment: Door Lift
Torque: 20 lb.ft (27.5 Nm)

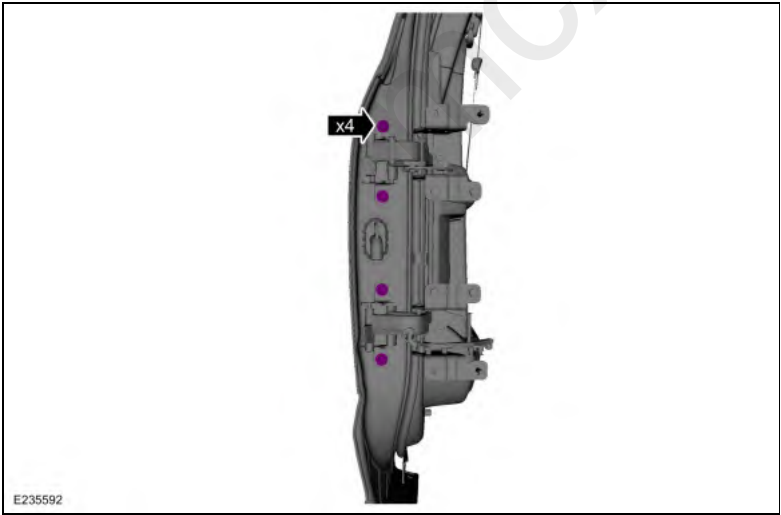

6. Remove the door.
Use the General Equipment: Door Lift





Installation

NOTICE: The rear door should only be removed and installed to the vehicle at 90° door open position. Detaching and reattaching the rear door at full open (170°) could possibly release an internal spring in the hinge mechanism and therefore disable the hinge function completely.

1. To install, reverse the removal procedure.
2. Check the door-to-body alignment. Align the door as necessary.
Refer to: Rear Door Alignment - SuperCab (501-03 Body Closures, General Procedures).

mcx30.com