

Tailgate Damper

Special Tool(s) / General Equipment


Flat-Bladed Screwdriver

Removal

NOTE: Pay particular attention to the tailgate damper orientation to aid in installation.


1. Remove the RH tail lamp assembly.
Refer to: Rear Lamp Assembly (417-01 Exterior Lighting, Removal and Installation).
2. **NOTE:** The lower tailgate damper retainer is accessed from below the vehicle.

Release the retainer clips and remove the tailgate damper.
Use the General Equipment: Flat-Bladed Screwdriver

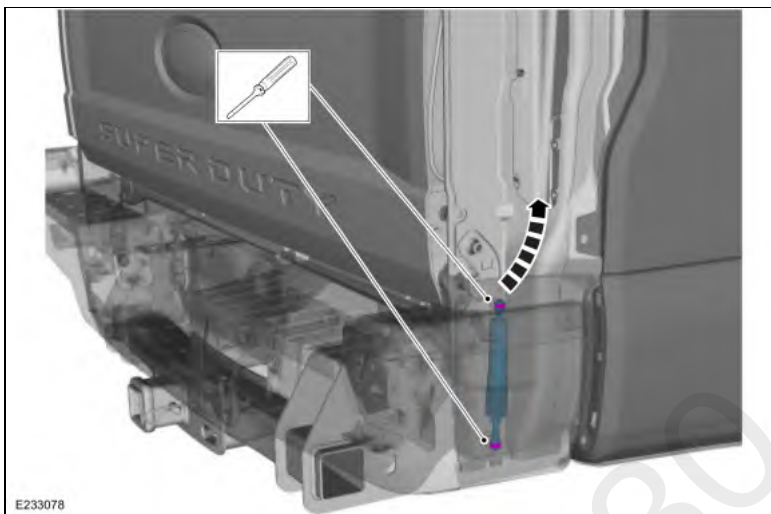


Installation

1. Install the tailgate damper retainer clips on the damper.

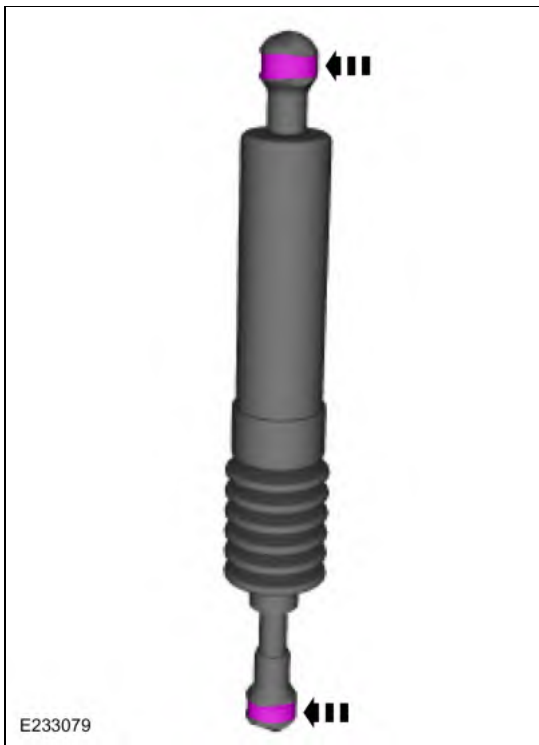

2. Install the tailgate damper and press the ball sockets on to the pivot bolts until fully seated.

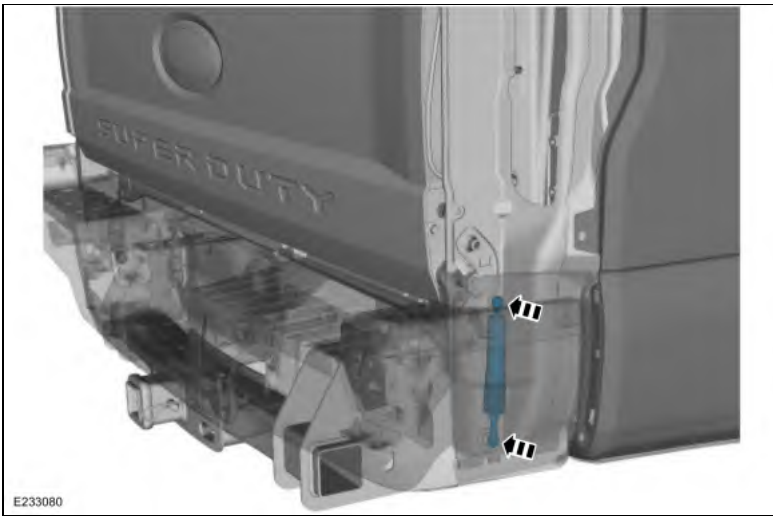

3. Install the RH tail lamp assembly.
Refer to: Rear Lamp Assembly (417-01 Exterior Lighting, Removal and Installation).