


Tailgate Step


Removal

NOTE: Removal steps may contain installation information.


- 1. Lower the tailgate.

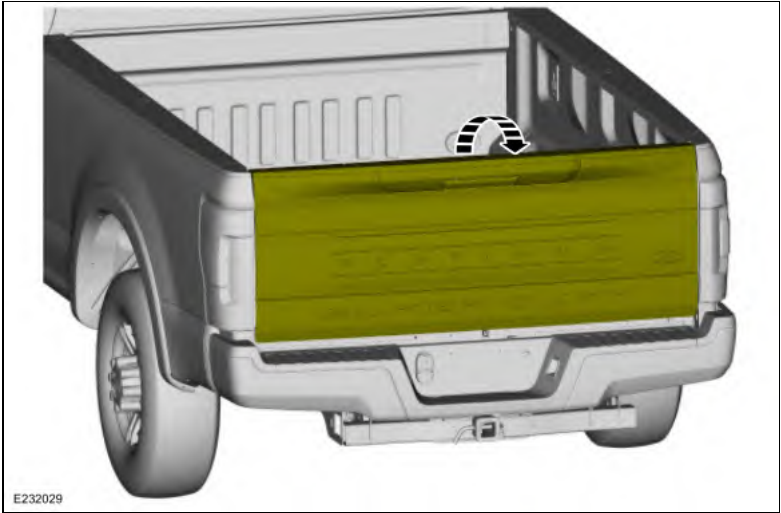


- 2. Push the tailgate step release button.

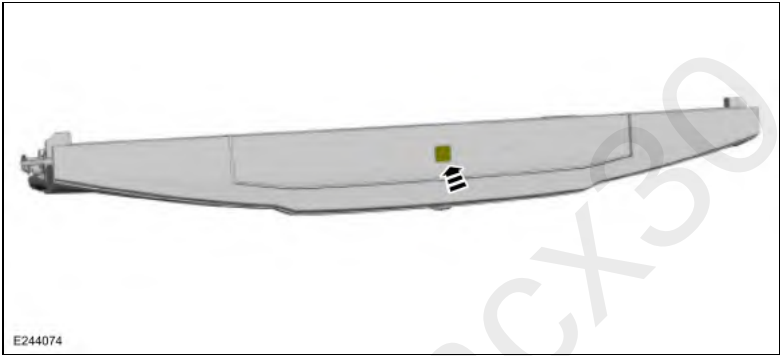


- 3. Open the tailgate step.

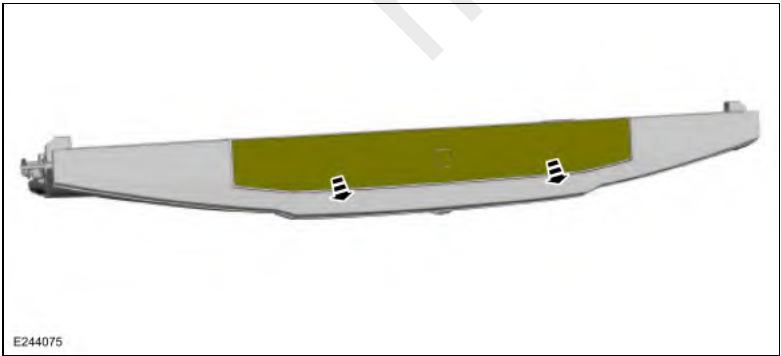

- 4. Remove the tailgate step inside bolts.
Torque: 17 lb.ft (23 Nm)

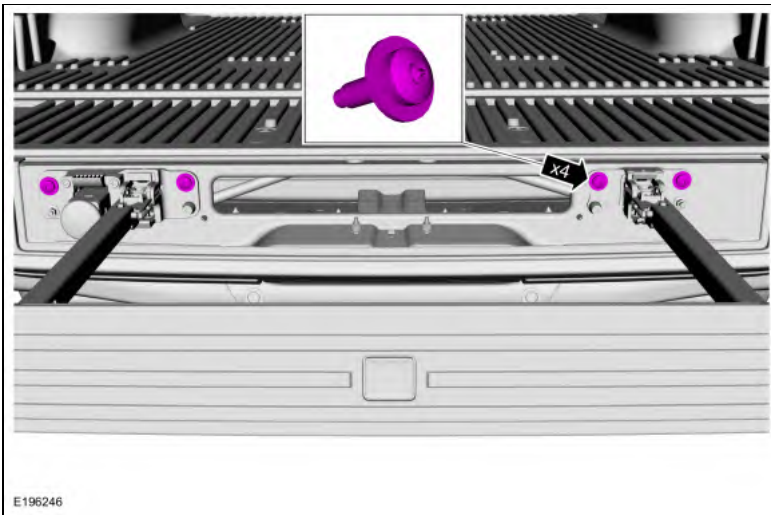

7. Remove the tailgate step.

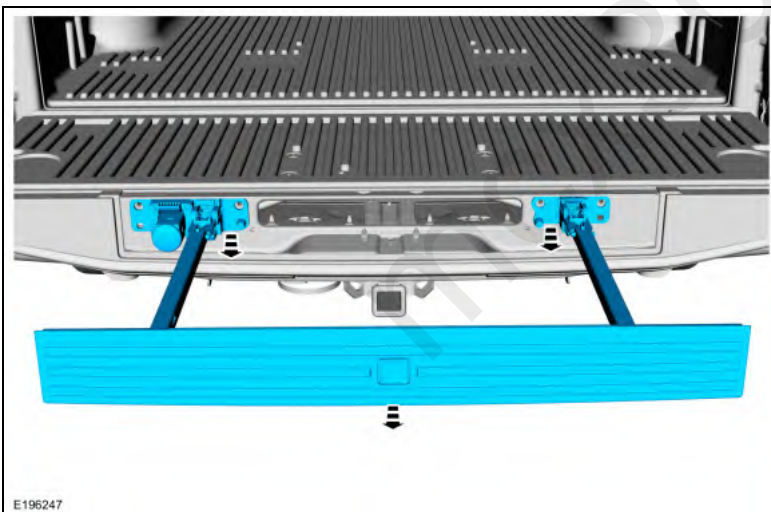

Installation

1. To install, reverse the removal procedure.
 - Adjust as necessary.
Refer to: Tailgate Step Adjustment (501-04 Pickup Bed and Platform Body, General Procedures).

