


A-Pillar Trim Panel

Removal


NOTE: RH side shown, LH side similar.

NOTE: Removal steps in this procedure may contain installation details.


1. Remove and discard the assist handle bolt covers.

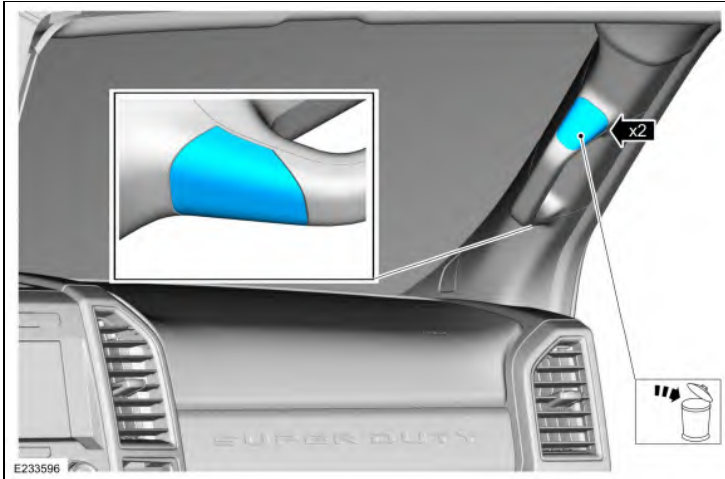

2. Remove the assist handle bolts.
Torque: 55 lb.in (6.2 Nm)

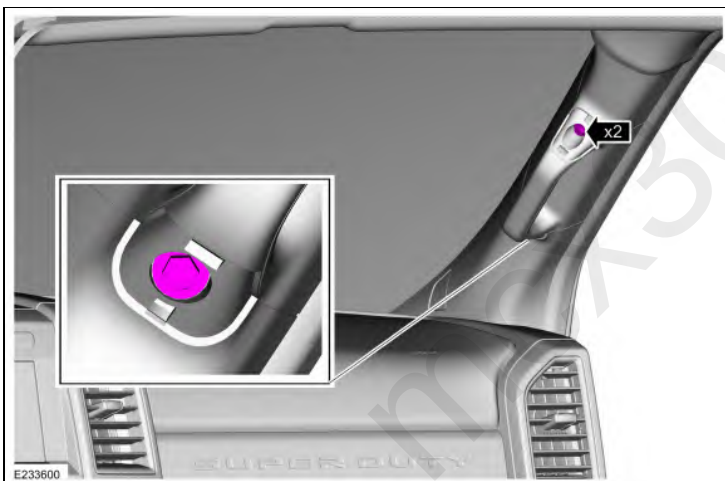

3. Remove the A-pillar trim panel.
 1. Release the clip.
 2. If equipped, Disconnect the speaker electrical connector.
 3. Lift up and outward and release the lower tabs.

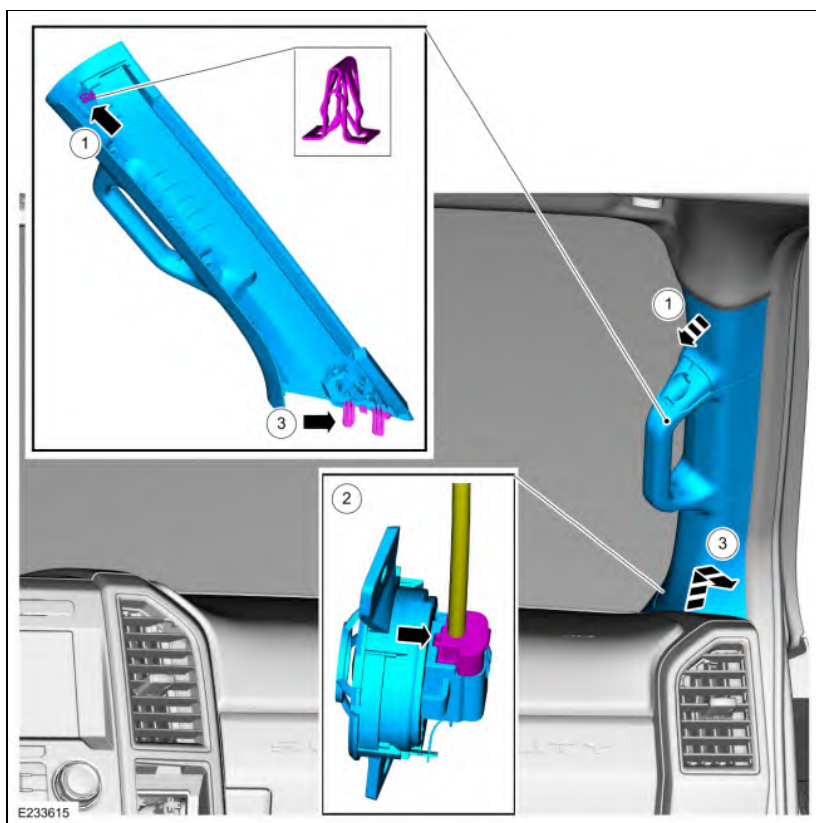

Installation

1. To install, reverse the removal procedure.