

Headliner - Lowering - Super Cab


1. Remove the following items:

1. On both sides.
Remove the A-pillar trim panels.
Refer to: A-Pillar Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. On both sides.
Remove the B-pillar trim panels.
Refer to: B-Pillar Trim Panel - Super Cab (501-05 Interior Trim and Ornamentation, Removal and Installation).

2. **NOTE:** LH side shown, RH side similar.

On both sides.

Release the clips and remove the upper striker covers.

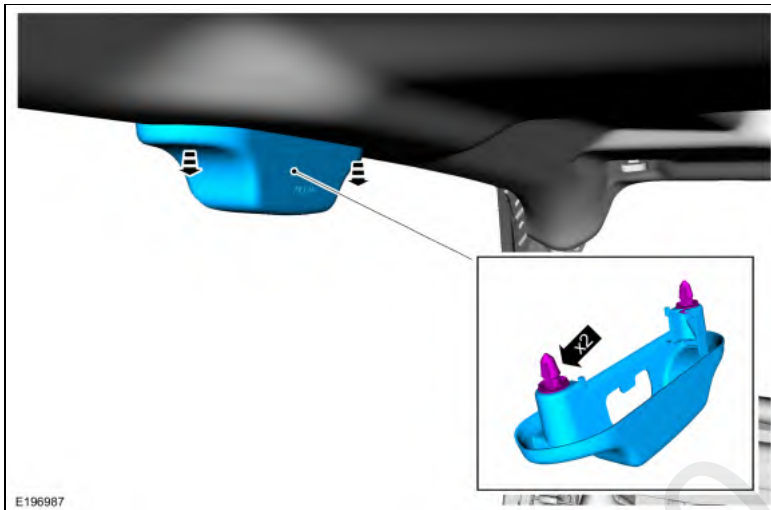


3. **NOTE:** LH side shown, RH side similar.

On both sides.


Remove the sun visor.

1. Remove the screw cover.
2. Remove the screw.
3. Remove the sun visor.
4. If equipped.
Disconnect the electrical connector.

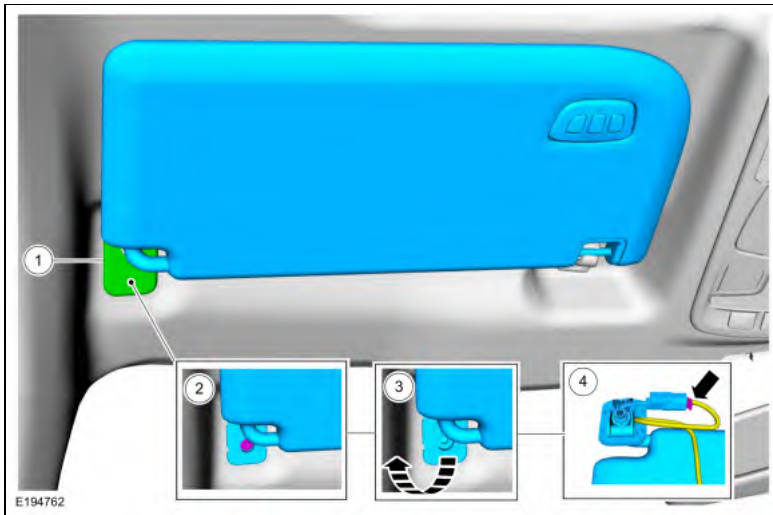


4. **NOTE:** *LH side shown, RH side similar.*


On both sides.
Remove the retainers and the sun visor clips.

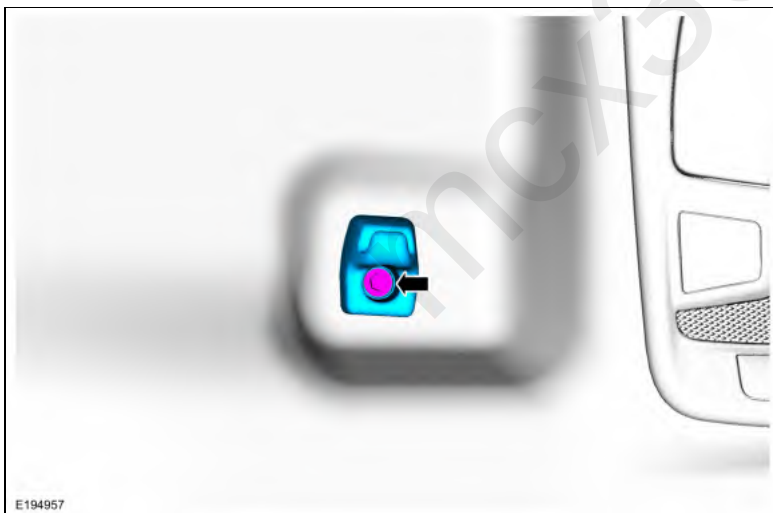


5. If equipped.
Release the clips and remove the rain sensor covers.

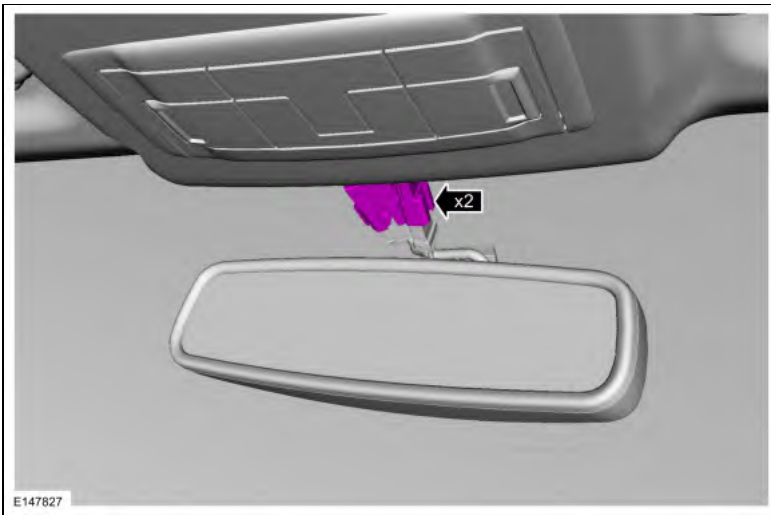

8. On both sides.
Remove and discard the garment hooks.
1. Open the garment hook cover.
 2. Remove the screw.

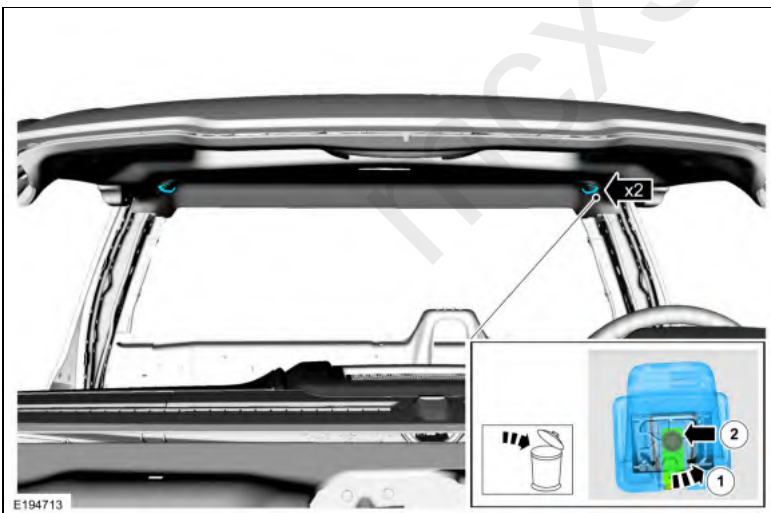

9. Disconnect the headliner wiring harness connectors, release the wiring harness retainer and position the wiring harness aside.

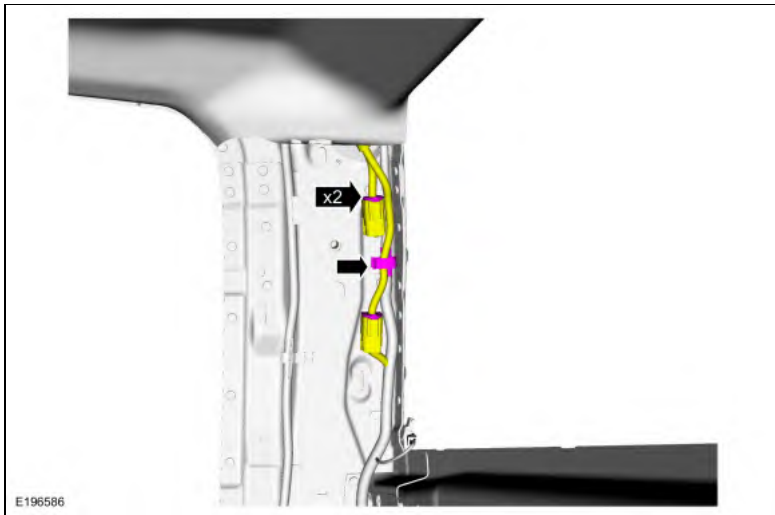

10. Release the clips and lower the headliner.

