

Loadspace Trim Panel - Regular Cab


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. On both sides.
Remove the upper and lower B-pillar trim panel.
Refer to: B-Pillar Trim Panel - Regular Cab (501-05 Interior Trim and Ornamentation, Removal and Installation).

2. **NOTE:** Front outboard seats removed for clarity.


If equipped.
Position the center seat backrest forward.

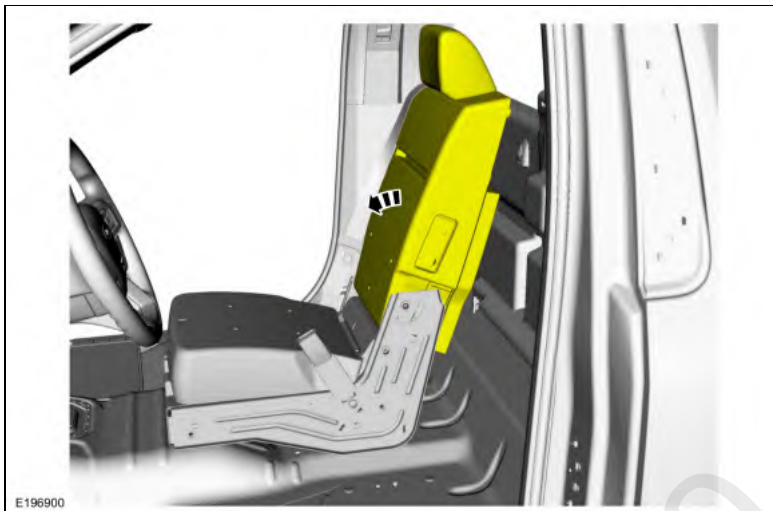


3. If equipped.
Remove the center seatbelt rear guide cover.

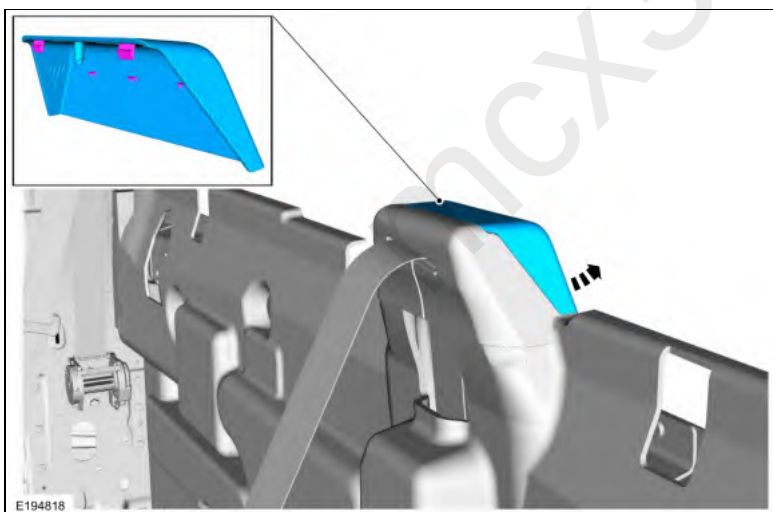

4. If equipped.
Remove the center seatbelt front guide cover.
 1. Remove the nut.
Torque: 42 lb.in (4.8 Nm)
 2. Position the seatbelt through the slot and remove the cover.

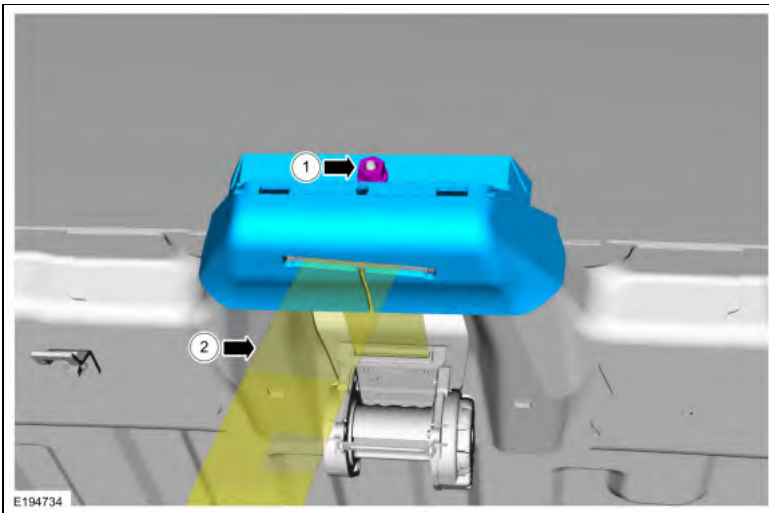

5. Remove the pin-type retainers and the loadspace trim panel.

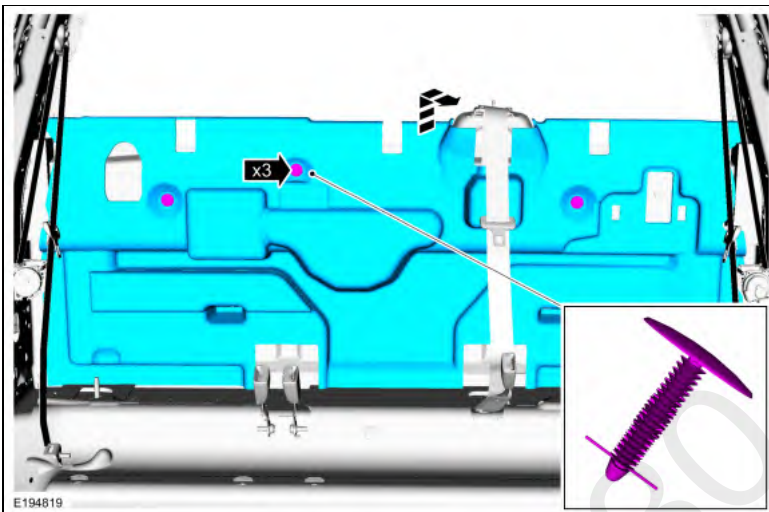

Installation

1. To install, reverse the removal procedure.