

Power Running Board (PRB)


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).

2. **NOTE:** RH side shown, LH side similar.


Disconnect the electrical connector.

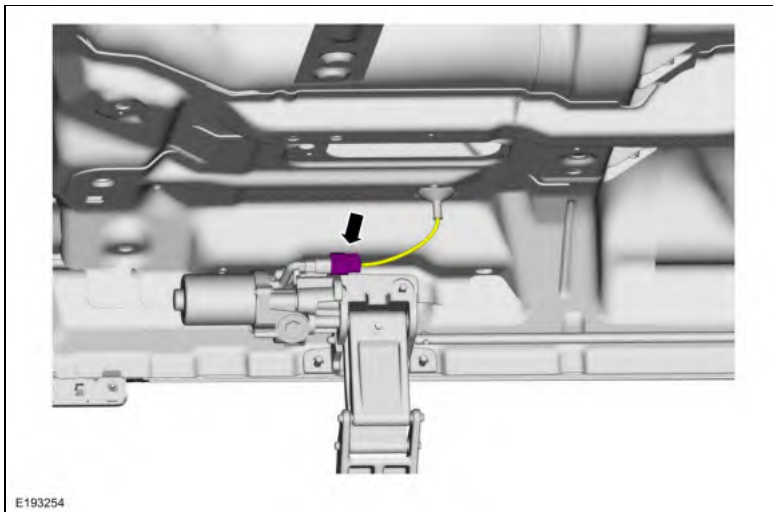

3. Remove the nuts from the attachment brackets.
Torque: 16 lb.ft (22 Nm)

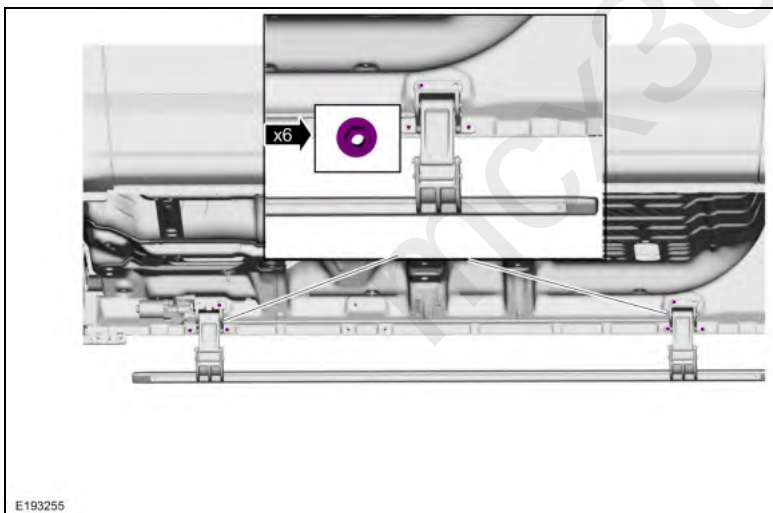

4. With the help of an assistant, remove the power running board assembly.

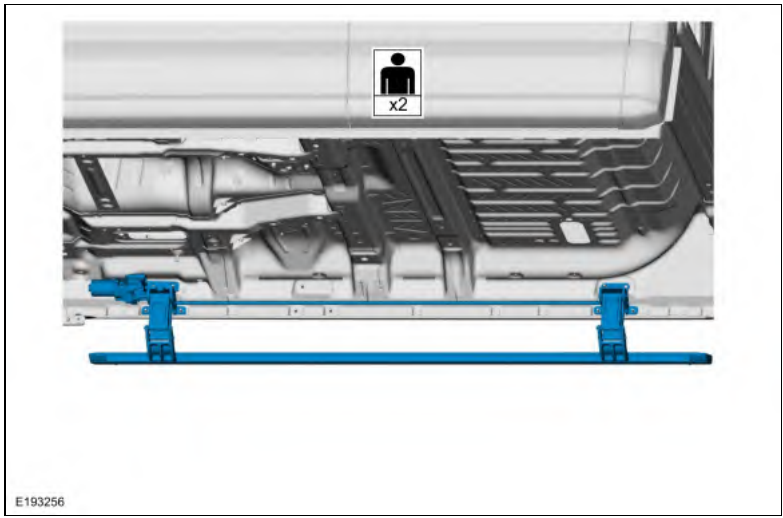

Installation

1. To install, reverse the removal procedure.

mcx30.com