

Power Running Board (PRB) Hinge

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).


2. **NOTE:** LH side shown, RH side similar.

NOTE: Support the running board with a jackstand.


Remove the screws.

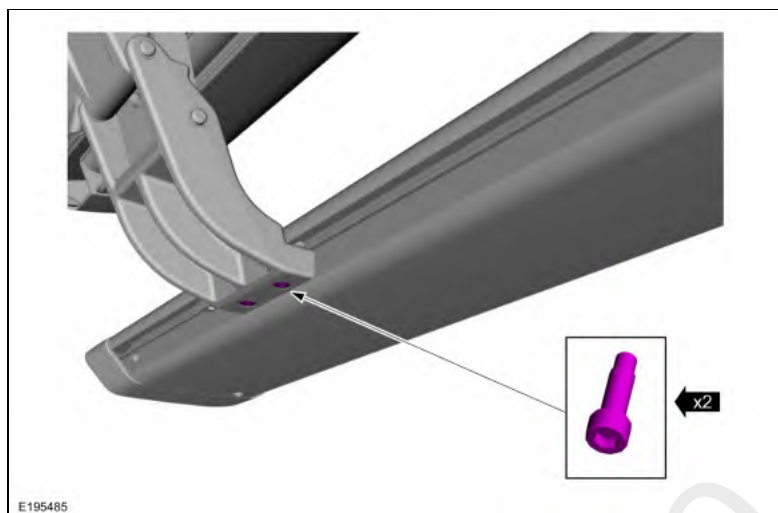

3. Remove the nuts and screw.
Torque: 16 lb.ft (22 Nm)

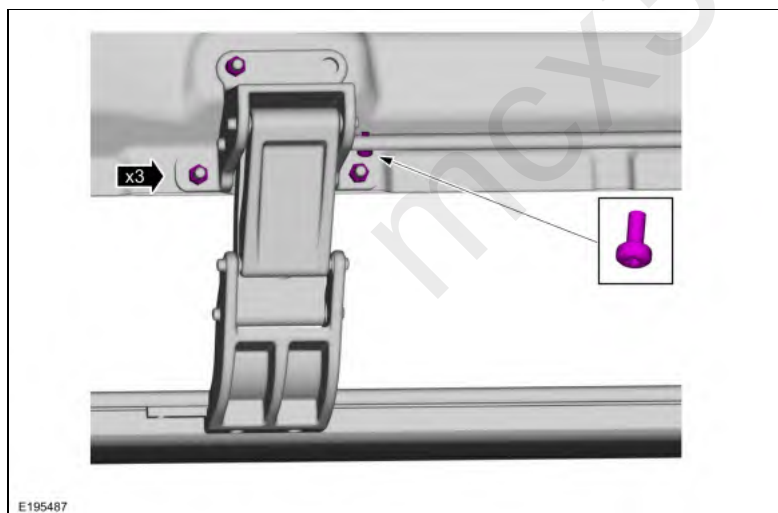

4. Disengage the torque rod and remove the bracket assembly.

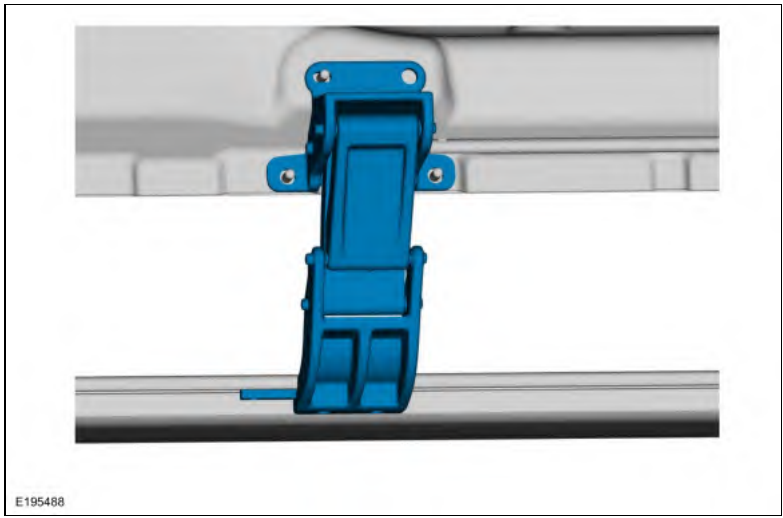

Installation

- 1. To install, reverse the removal procedure.

mcx30.com