




Power Running Board (PRB) Motor

Removal


- NOTE:** Removal steps in this procedure may contain installation details.
- NOTE:** The power running board motor and drive bracket are serviced as an assembly.
- 1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
 - 2. Disconnect the electrical connector.

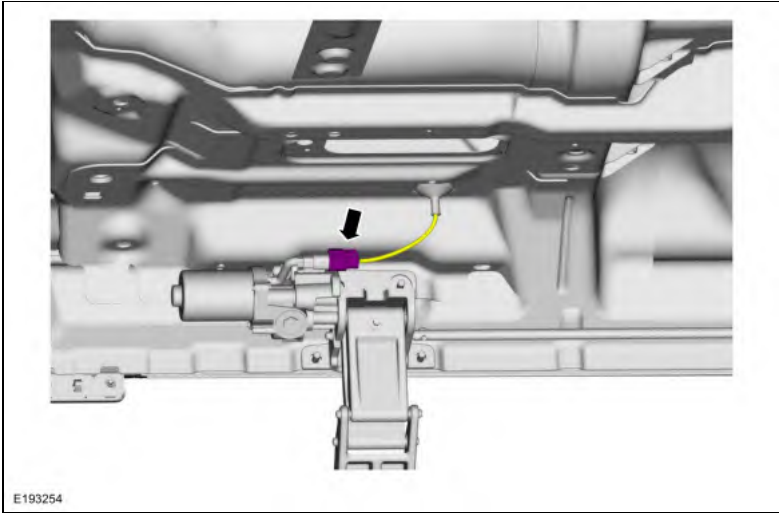

 
- 3. **NOTE:** Support the running board with a jackstand.
- Remove the screws.
Torque: 16 lb.ft (22 Nm)

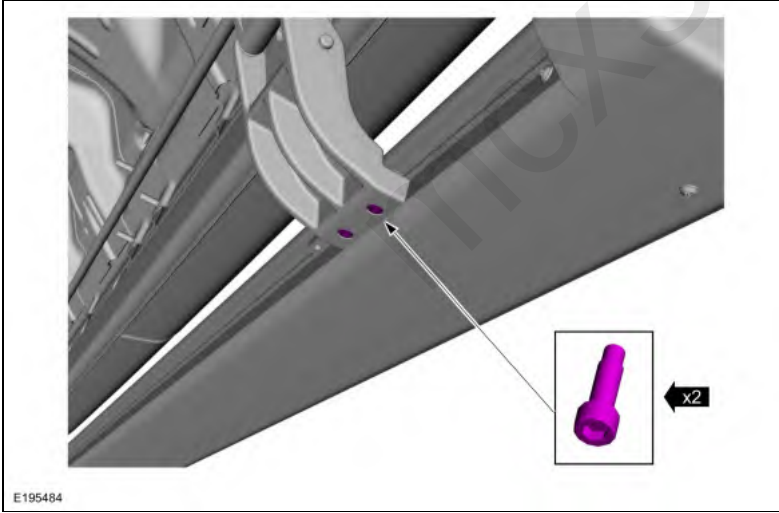

- 4. Remove the nuts and the screw.
Torque: 16 lb.ft (22 Nm)

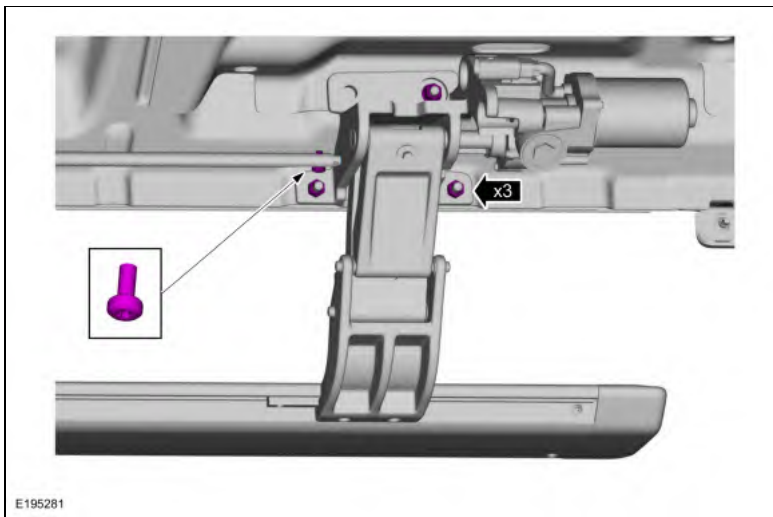

5. Disengage the motor drive shaft from the torque rod and remove the motor and bracket assembly.

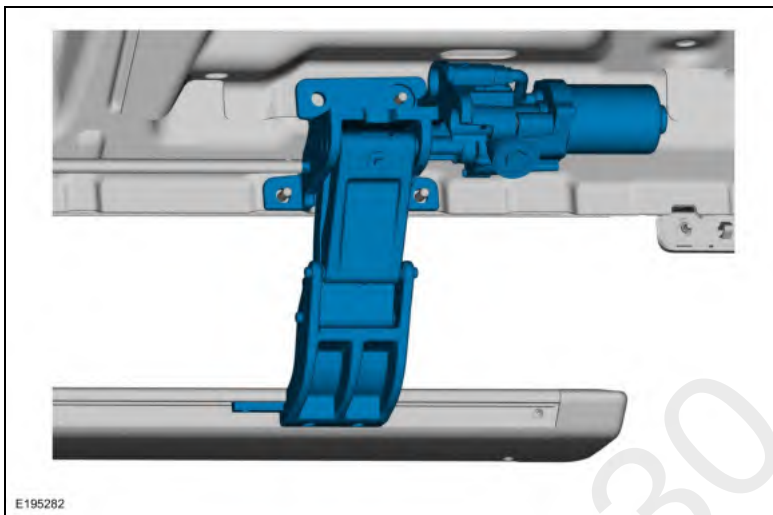

1. To install, reverse the removal procedure.