

Running Board


Removal

NOTE: Removal steps in this procedure may contain installation details.



LH side shown, RH similar.

1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: Jacking and Lifting - Overview (100-02 Jacking and Lifting, Description and Operation).
2. **NOTE:** Regular Cab shown, SuperCab and Crew Cab similar.

Remove the nuts from the attachment brackets.
Torque: 16 lb.ft (22 Nm)

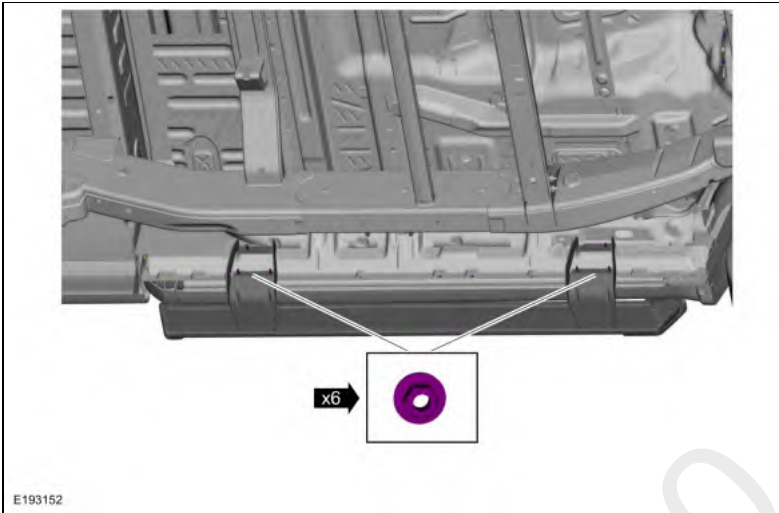

 3. Remove the running board assembly.

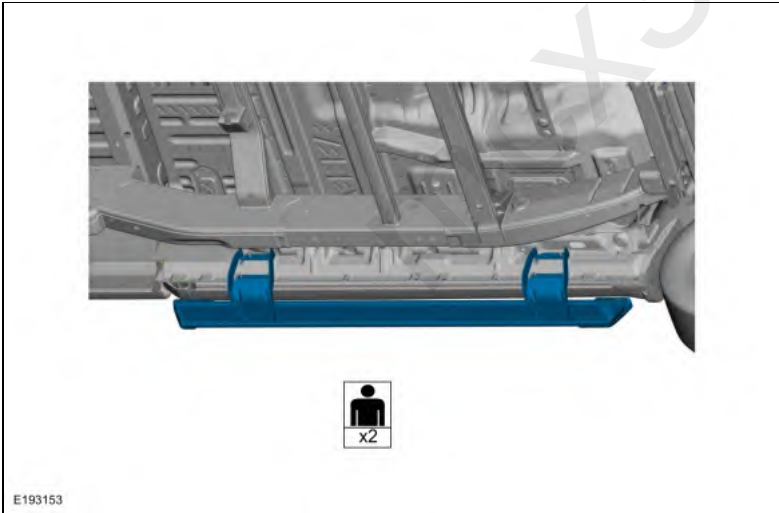

Installation

1. To install, reverse the removal procedure.

