


Running Board Control Module (RBM)


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Disconnect battery terminals.
Refer to: Battery Disconnect and Connect (414-01 Battery, Mounting and Cables, General Procedures).
2. Remove the floor console rear cup holder.

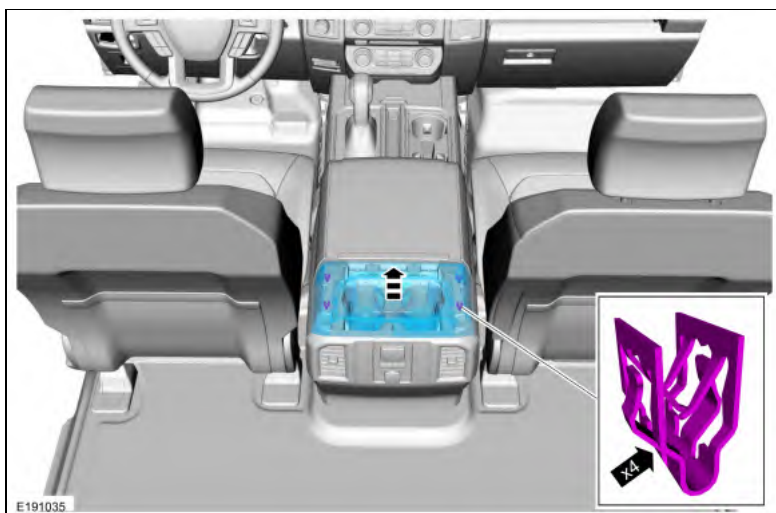


3. Remove the screws and the position the floor console rear trim panel.

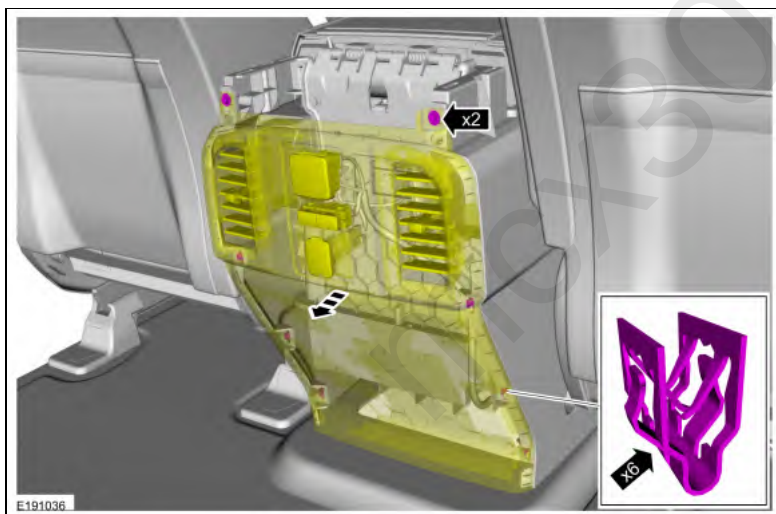

4. Disconnect the electrical connectors from the floor console rear trim panel.

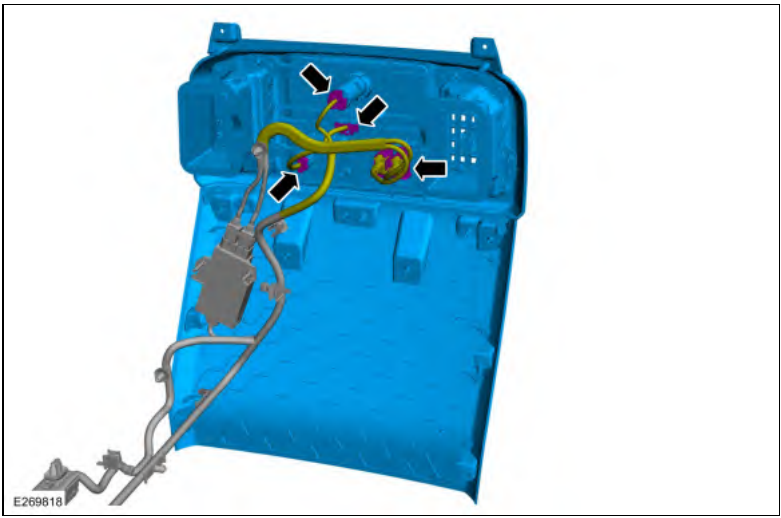

5. Disconnect the electrical connectors and remove the retainers..
Torque: 89 lb.in (10 Nm)

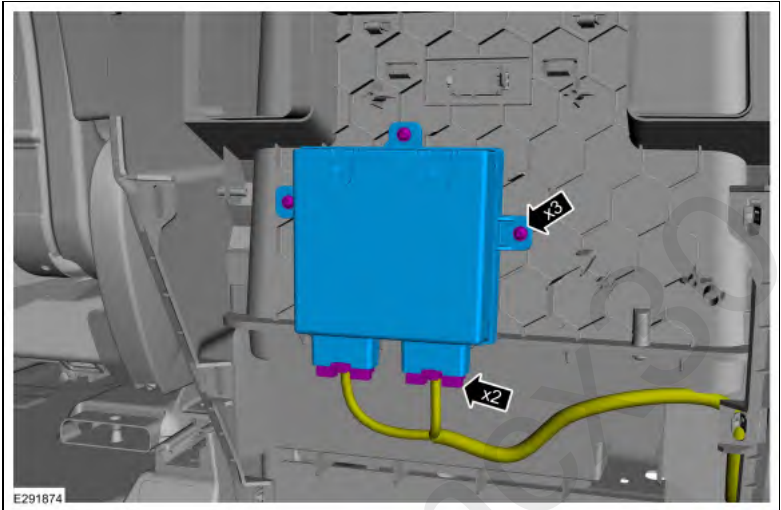

Installation

1. To install, reverse the removal procedure.