


Tailgate Moulding

Removal


NOTE: Removal steps in this procedure may contain installation details.

All vehicles


1. Remove the screws from the tailgate liner.
Torque: 28 lb.in (3.2 Nm)

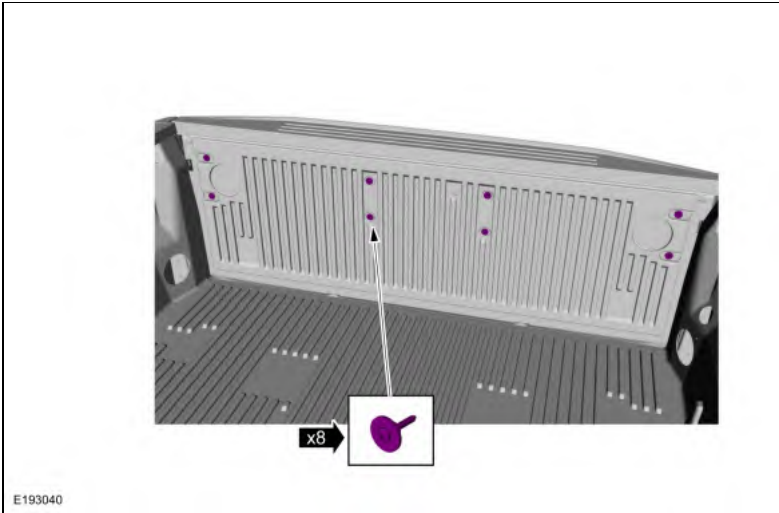


2. Remove the tailgate liner.

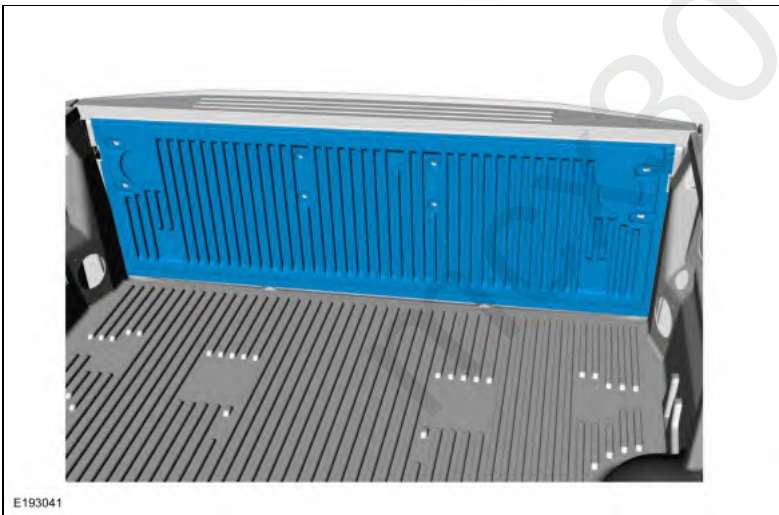

3. Remove the screws from the inner panel.
Torque: 28 lb.in (3.2 Nm)

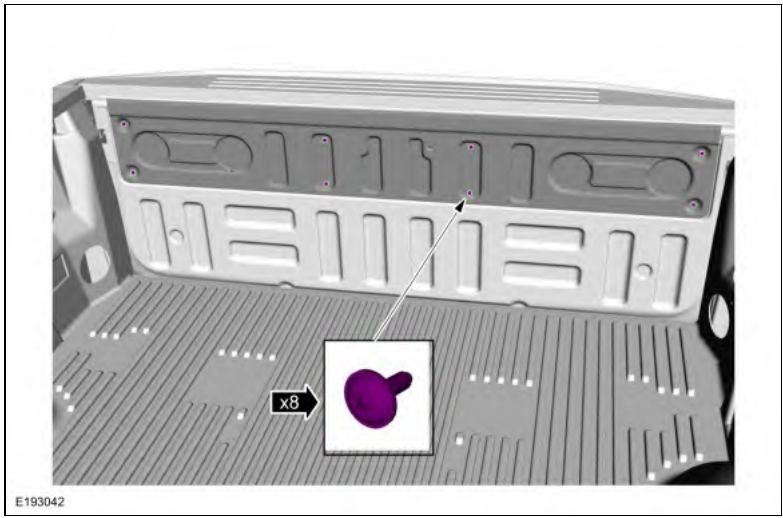


4. Remove the inner panel.

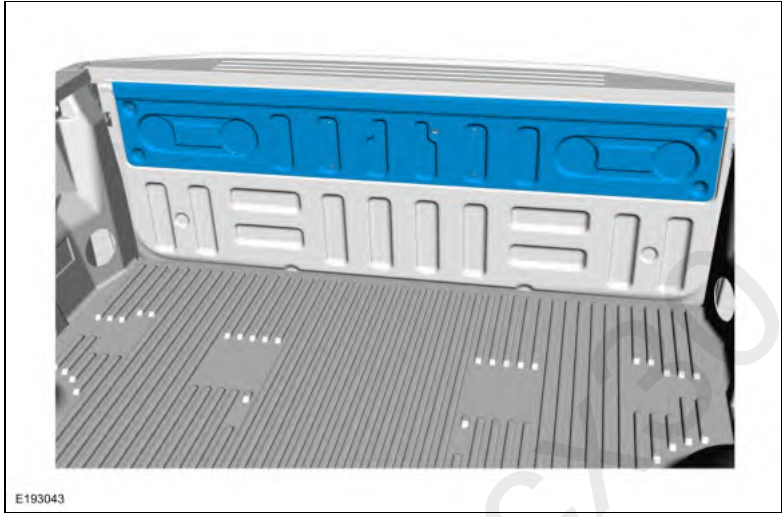


Vehicles without Flexible Step

5. Remove the push pin retainers.

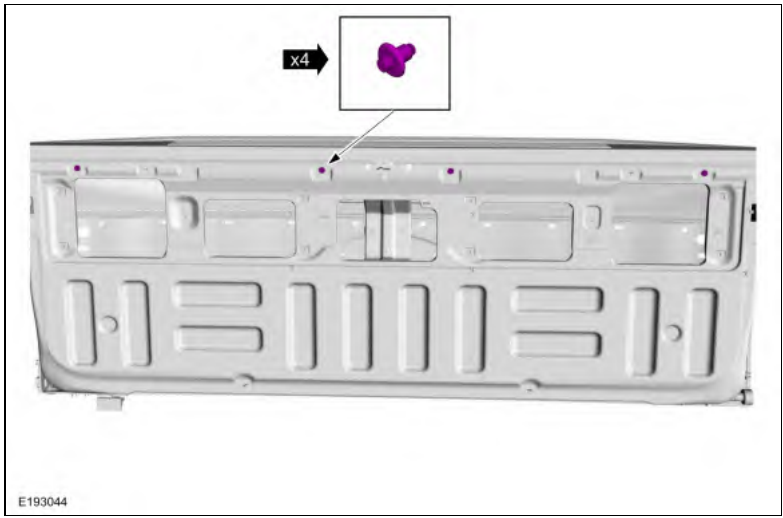


6. Using a non-marring trim tool, disengage the retainers from the tailgate and remove the moulding.

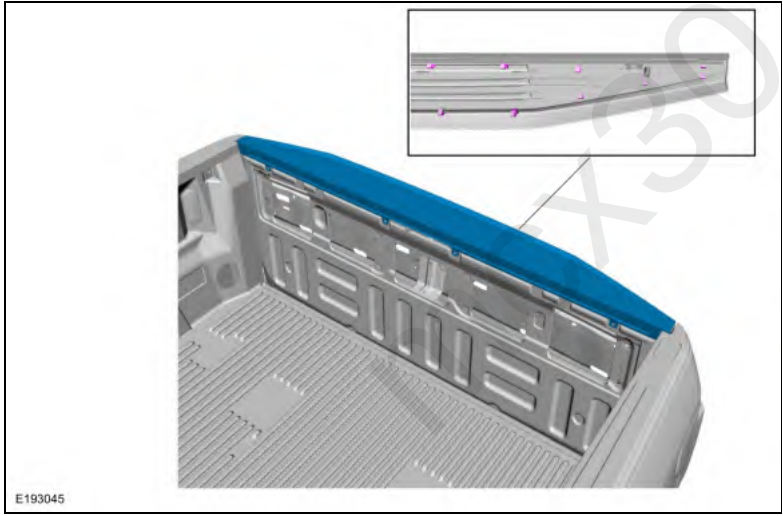


Vehicles with Flexible Step

7. Remove the push pin retainers.

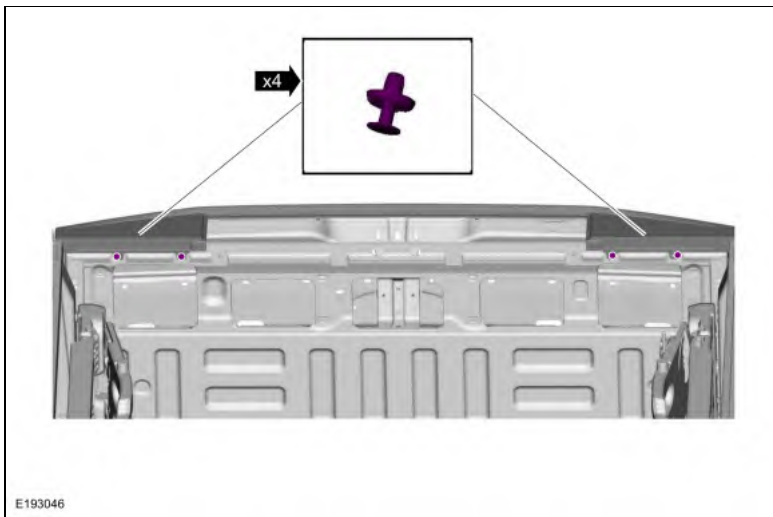


8. **NOTE:** Replace the tailgate handle if the tailgate moulding is replaced.

Using a non-marring trim tool, disengage the retainers from the tailgate and remove the moulding.

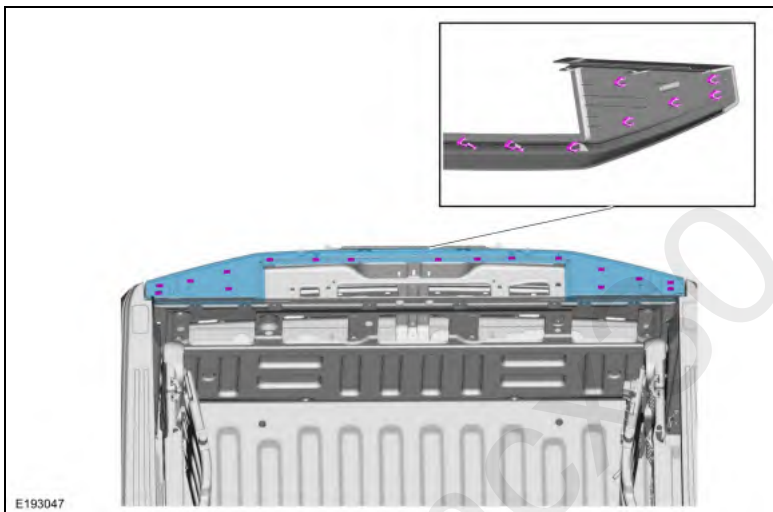


Vehicles with Tailgate Applique

9. Remove the 2 retainer nuts and washers.
Torque: 36 lb.in (4.1 Nm)

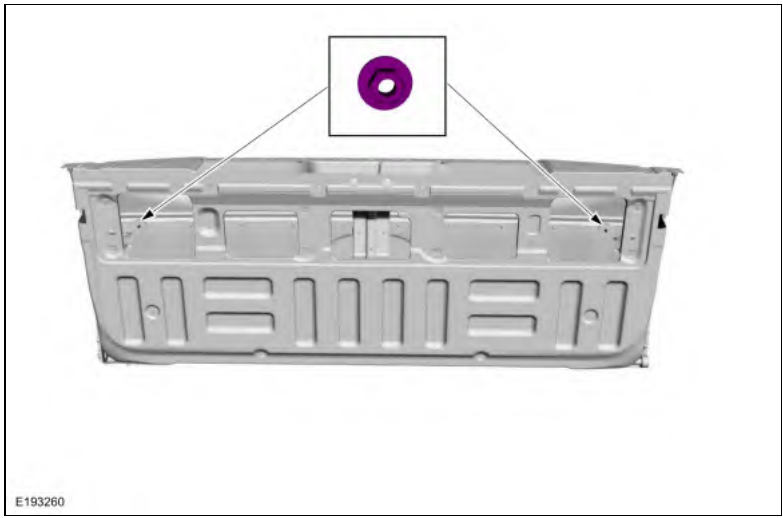

10. **NOTE:** Use care when disengaging push pins from tailgate to avoid damage to the applique.

Using a non-marring trim tool, disengage the push pin retainers from the tailgate and remove the applique.

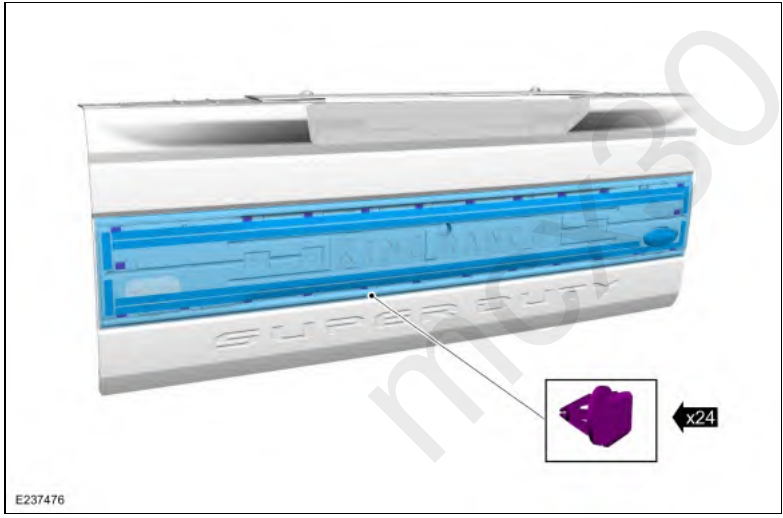

Installation

- 1. To install, reverse the removal procedure.