


Drive Pinion Seal

Special Tool(s) / General Equipment

 E232969	205-1018 Installation Tube
 E232982	205-1031 Installer, Pinion Seal


Removal

1. Remove the drive pinion flange.
Refer to: Drive Pinion Flange (205-02A Rear Drive Axle/Differential - Vehicles With: Dana M275, Removal and Installation).
2. Remove and discard the drive pinion seal.

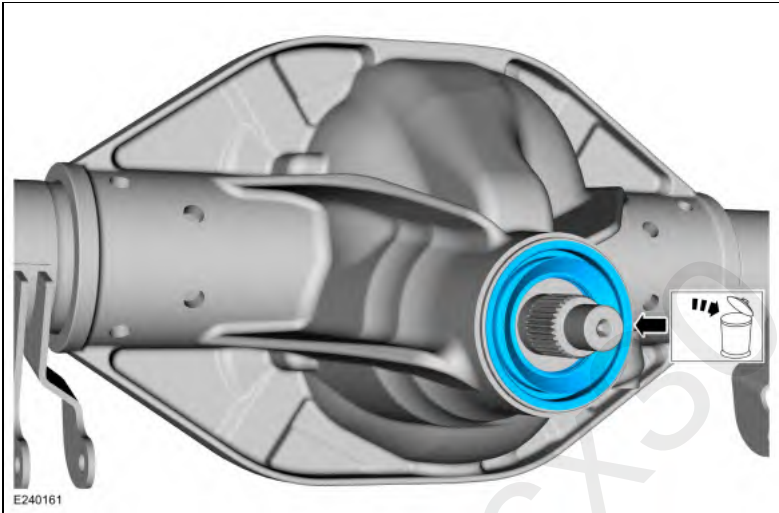

Installation

1. Using the special tools, install the drive pinion seal.
Use Special Service Tool: 205-1018 Installation Tube. , 205-1031 Installer, Pinion Seal.

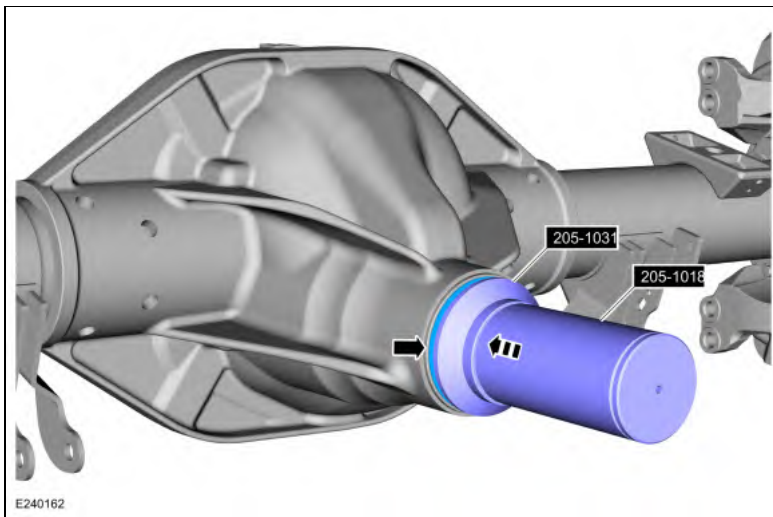

2. Install the drive pinion flange.
Refer to: Drive Pinion Flange (205-02A Rear Drive Axle/Differential - Vehicles With: Dana M275, Removal and Installation).