


## Front Center Seat Backrest Cover - Regular Cab

### Removal

**NOTE:** Removal steps in this procedure may contain installation details.

 

1. Remove the front center seat.  
Refer to: Front Center Seat (501-10A Front Seats, Removal and Installation).
2.  
Lift the front center seat cushion.
  1. Release the front center seat cushion latch.
  2. Lift the front center seat cushion.

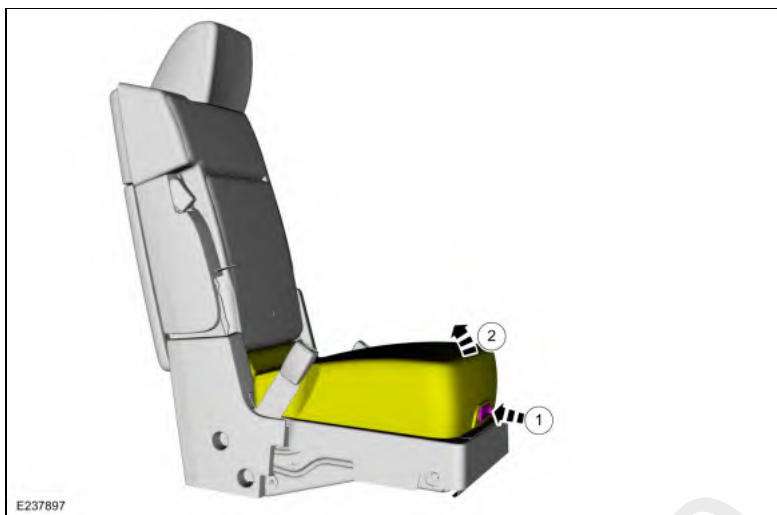


3. Remove the screws and the front center seat storage tray.




4. Position the front center seat cushion down.

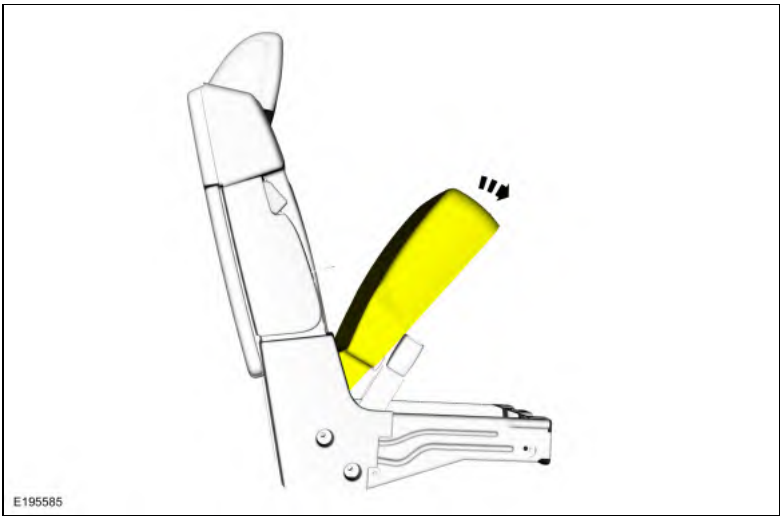


5. Release the front center seat latch and fold the front center seat backrest down.

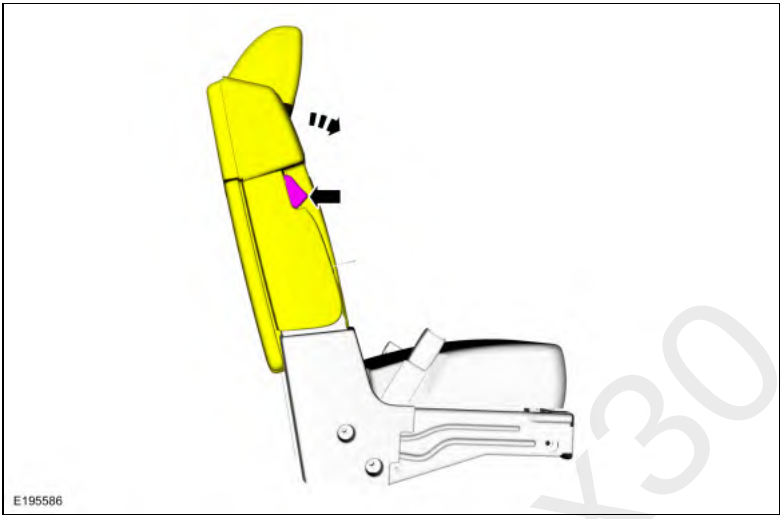


6. Remove the front center seat backrest latch cover.

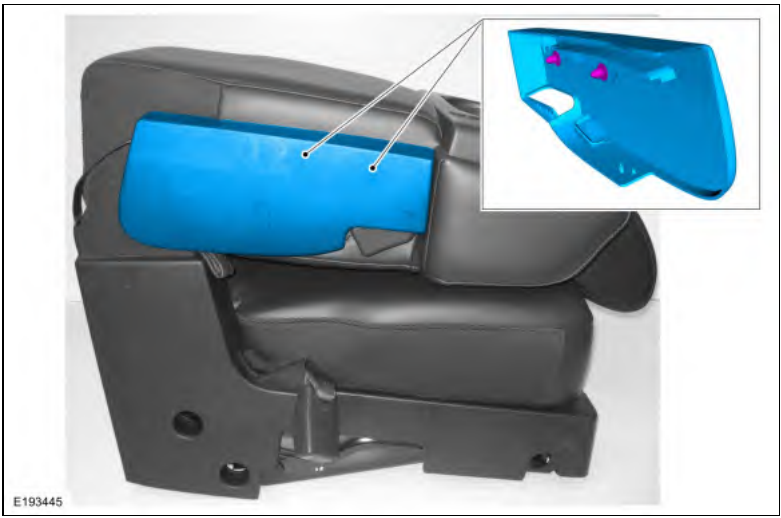


7. Remove the screws, release the retaining clip and remove the front center seat RH side shield.

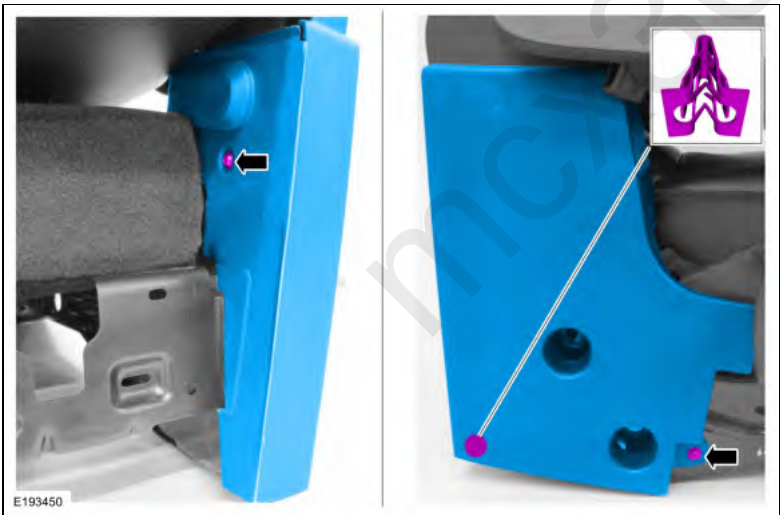

8. Remove the screws, release the retaining clips and remove the front center seat LH side shield.

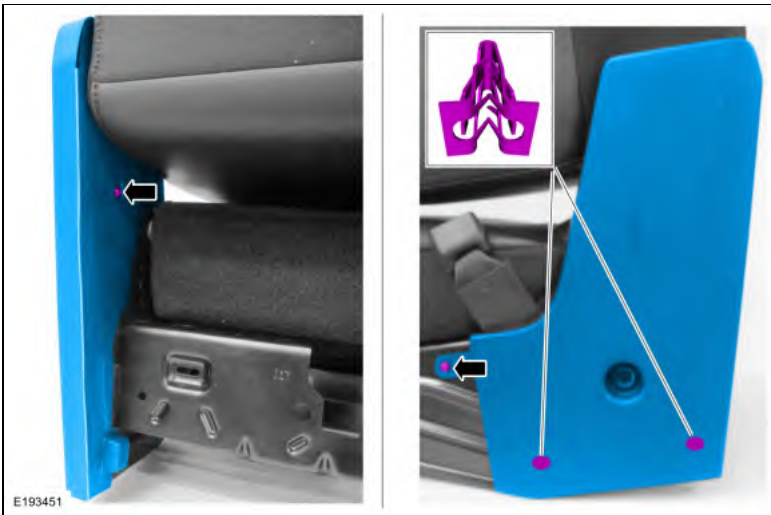


9. Release the front center seat latch and raise the front center seat backrest up.

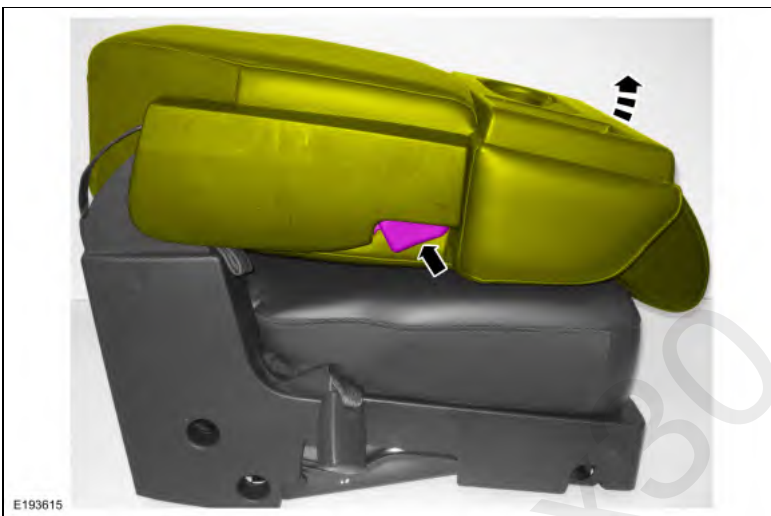


10. Remove the front head restraint guide sleeves.  
Refer to: Front Head Restraint Guide Sleeve (501-10A Front Seats, Removal and Installation).


11. Remove the front center seat backrest.
1. Remove the stop bolt.  
*Torque: 22 lb.ft (30 Nm)*
  2. Remove the pivot bolt.  
*Torque: 33 lb.ft (45 Nm)*
  3. Remove the front center seat backrest latch upper bolts.  
*Torque: 33 lb.ft (45 Nm)*

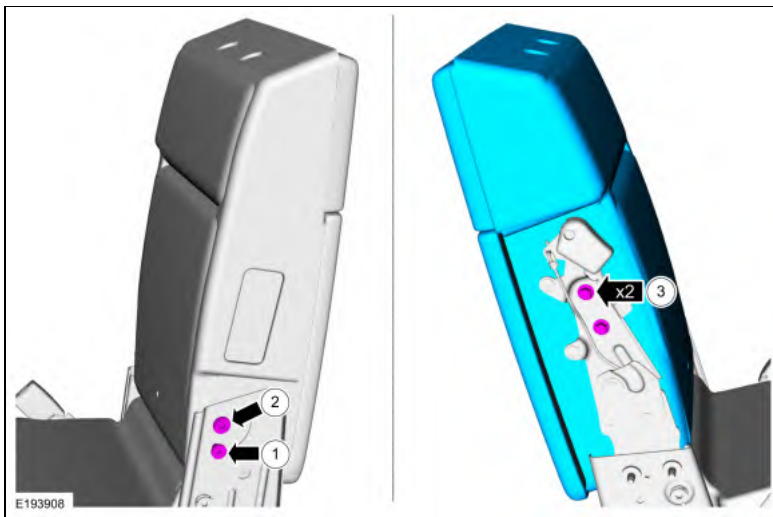

12. Remove the front center seat cup holder insert.

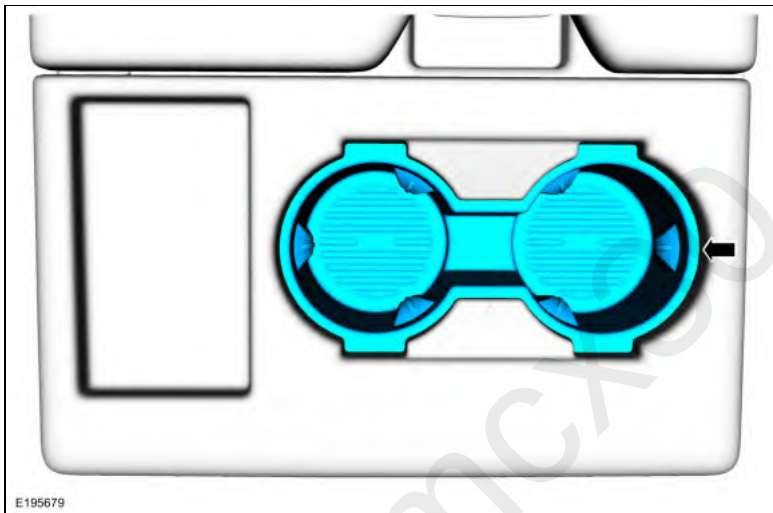


13. Remove the screw, release the retaining clips and remove the front center seat cup holder.

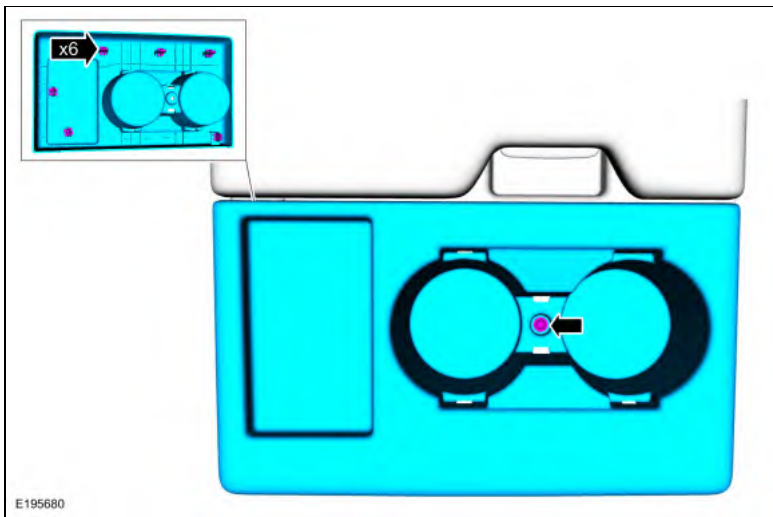


#### Seats with storage tray

14. Remove the insert.

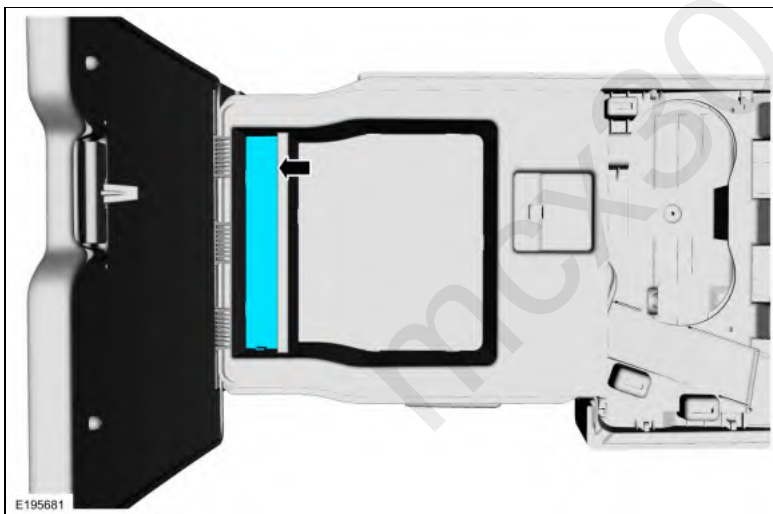


15. Remove the front center seat armrest storage tray.
  1. Remove the screws.
  2. Release the retainers.
  3. Remove the front center seat storage tray.

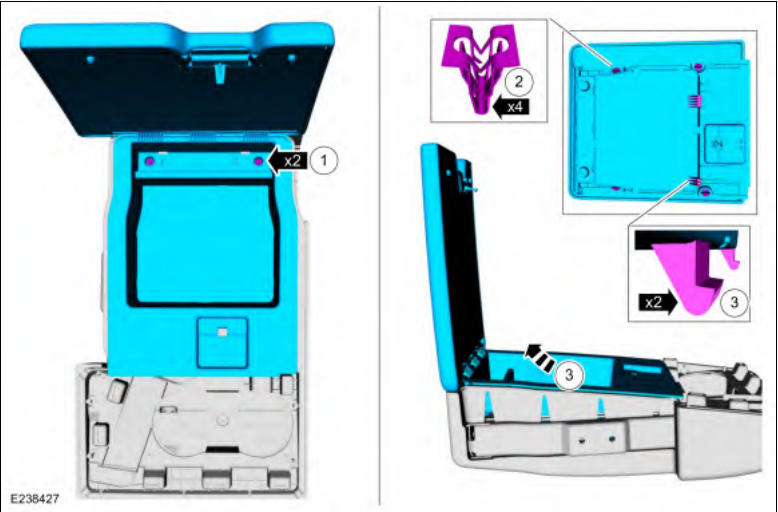


16. **NOTE:** Front center seat backrest with seatbelt retractor shown, front center seat backrest without seatbelt retractor similar.

Release the front center seat cover from the J-hooks and remove the front center backrest cover.

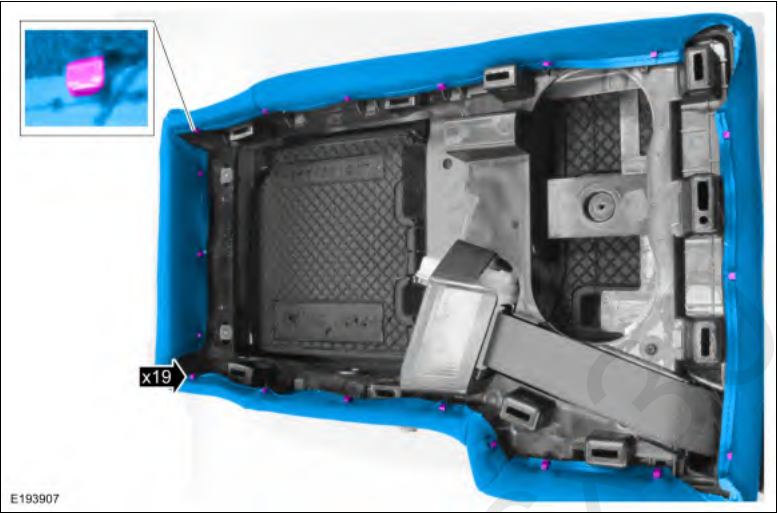

**Seats without storage tray**

17. Position the front center seat backrest cover flap aside.

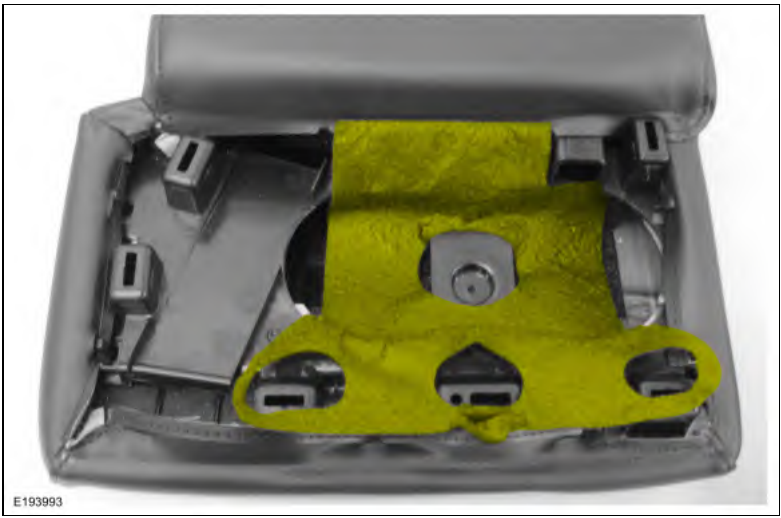

18. Release the cover from the J-hooks and position the backrest cover aside.



19. **NOTICE:** Use care when separating the front center seat backrest trim cover from the hook-and-loop strip or the hook-and-loop strip may be torn from the front seat backrest foam.

Release the hook-and-loop strip and remove the front center seat backrest cover.



**Installation**

1. To install, reverse the removal procedure.

mcx30.com