


Front Center Seat Cushion Cover


Removal

NOTE: Removal steps in this procedure may contain installation details.



1. Remove the front center seat.
Refer to: Front Center Seat (501-10A Front Seats, Removal and Installation).
2.
Lift the front center seat cushion.
 1. Release the front center seat cushion latch.
 2. Lift the front center seat cushion.

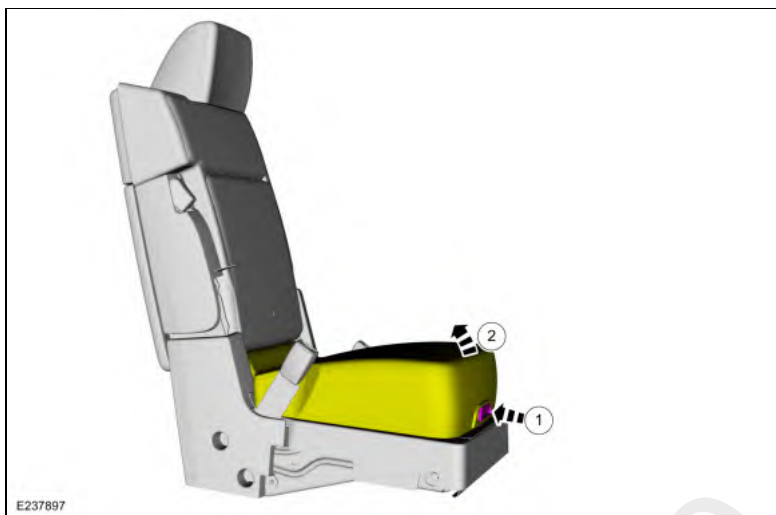


3. Remove the screws and the front center seat storage tray.

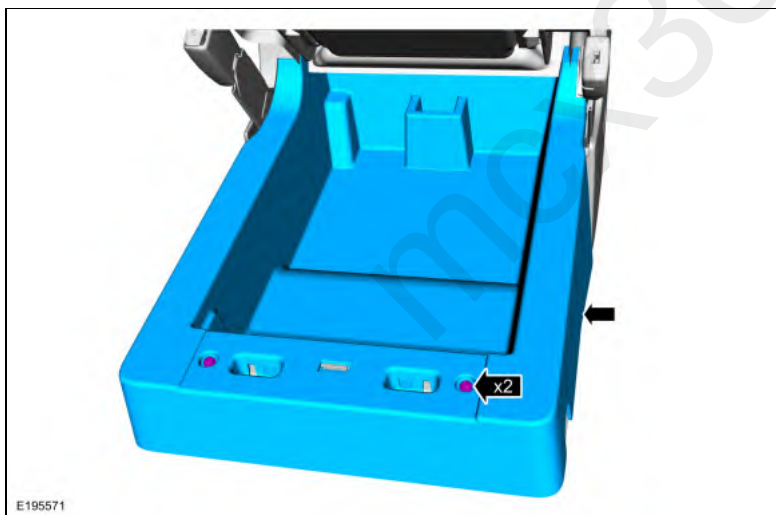

 4. Position the front center seat cushion down.

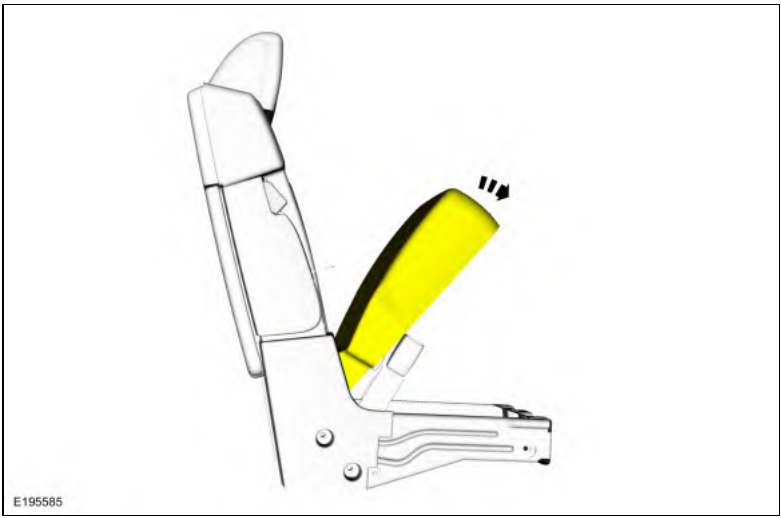


5. Release the front center seat latch and fold the front center seat backrest down.

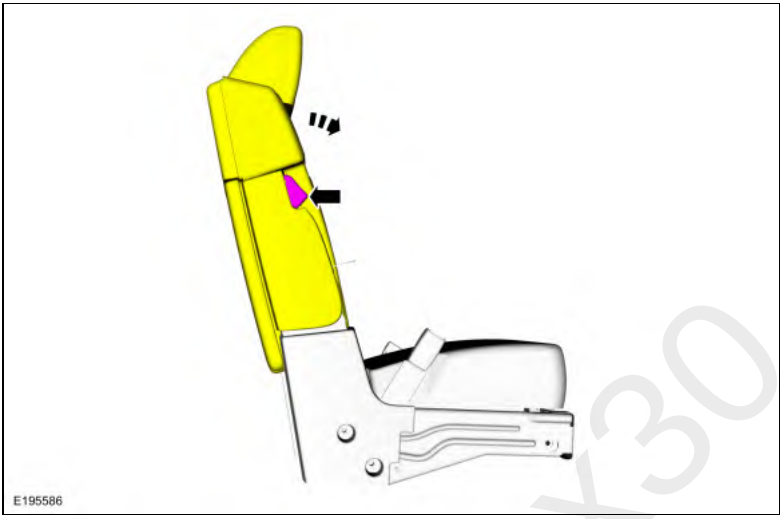


Regular cab

6. Remove the front center seat backrest latch cover.

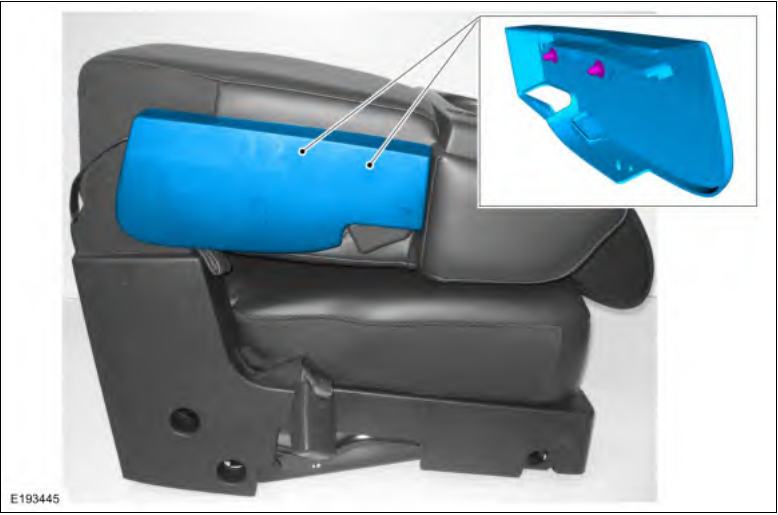


7. Remove the screws, release the retaining clip and remove the front center seat RH side shield.

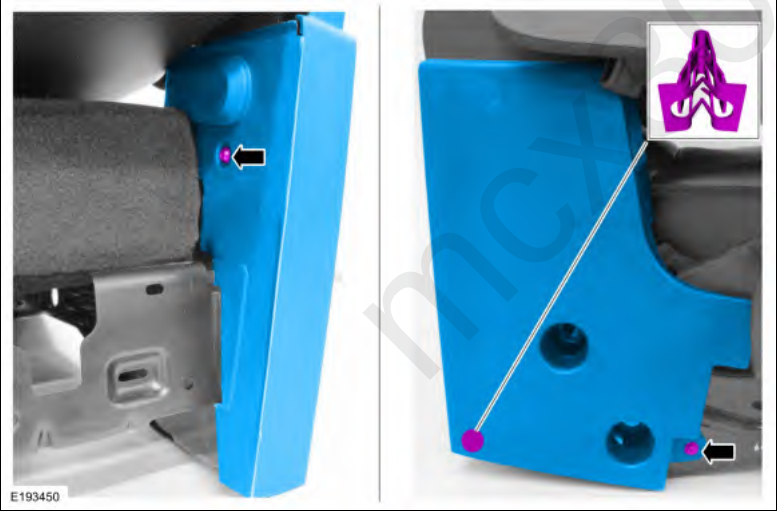


8. Remove the screws, release the retaining clips and remove the front center seat LH side shield.




10. Remove the front center seat rear cup holder assembly.
 1. Release the front center seat rear cup holder retainers.
 2. Disconnect the auxiliary power point electrical connector.

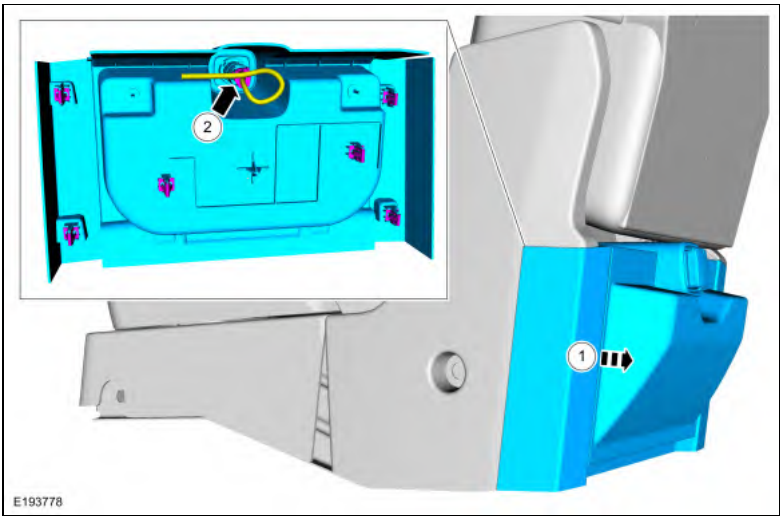


11. If equipped.
Lift the front center seat armrest storage compartment lid.

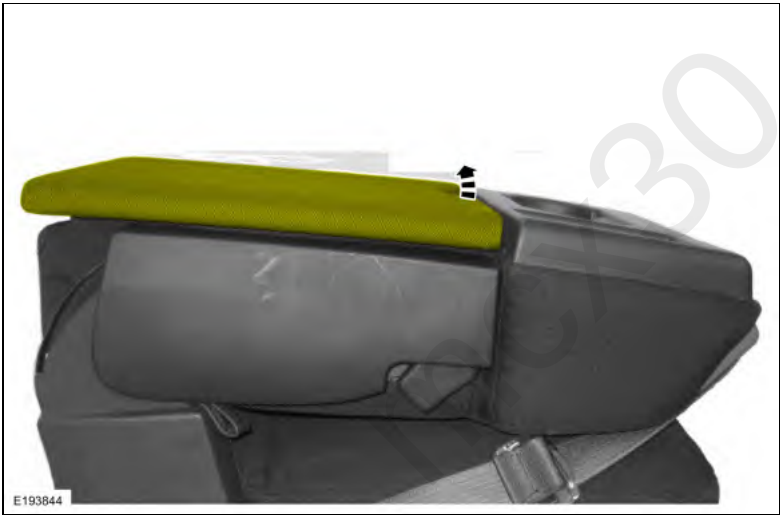


12. Remove the front center seat backrest latch cover.

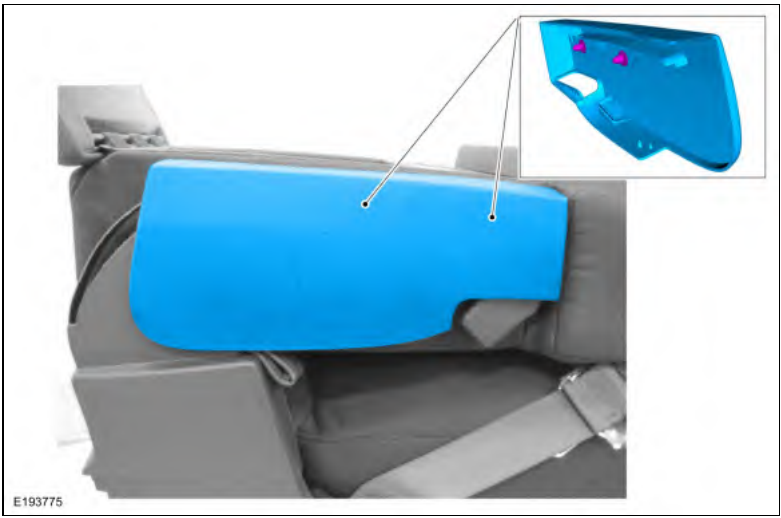

13. Remove the screws, release the retaining clip and remove the front center seat RH side shields.

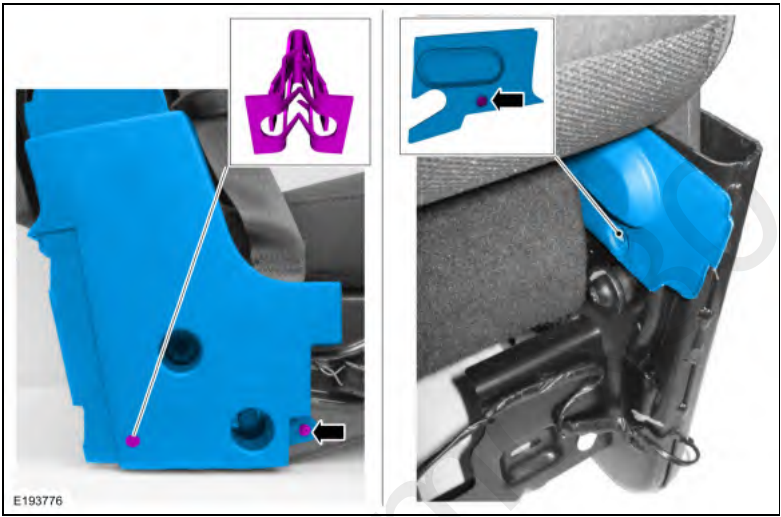

14. Remove the screws, release the retaining clips and remove the front center seat LH side shield.

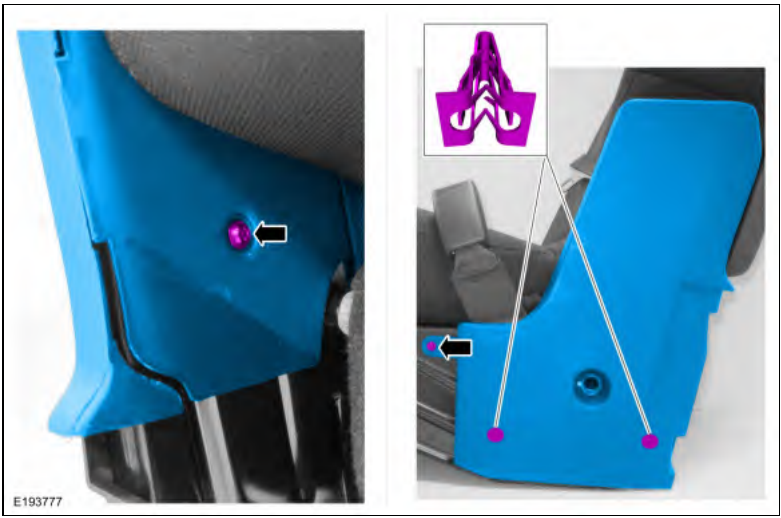


15. Release the front center seat latch and raise the front center seat backrest up.




All vehicles


16. Remove the front center seat cushion pivot bolts.
Torque: 26 lb.ft (35 Nm)

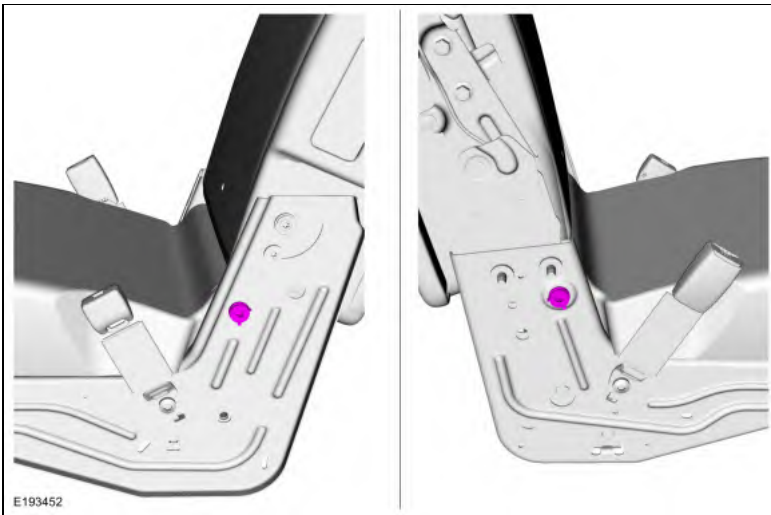

17. Release the LH side of the front center seat cushion from the cushion base and remove the front center seat cushion.

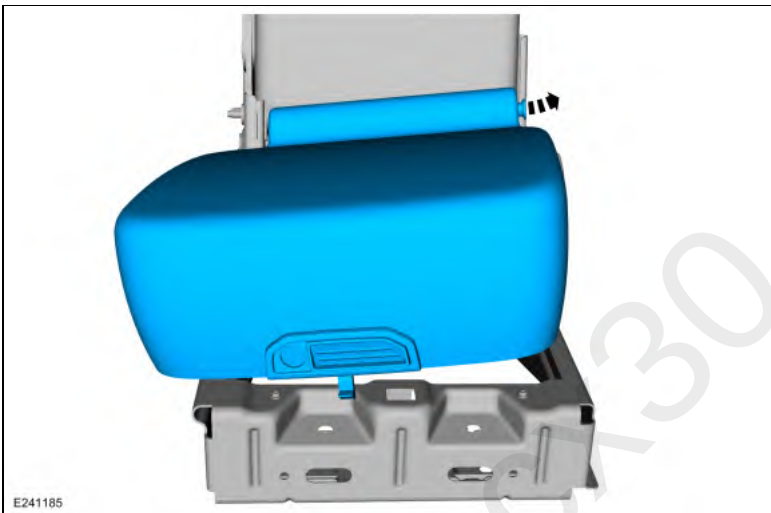

- 18.
1. Lift the front center seat cushion cover over the front center seat cushion latch catch.
 2. Detach the front center seat cushion cover tabs.

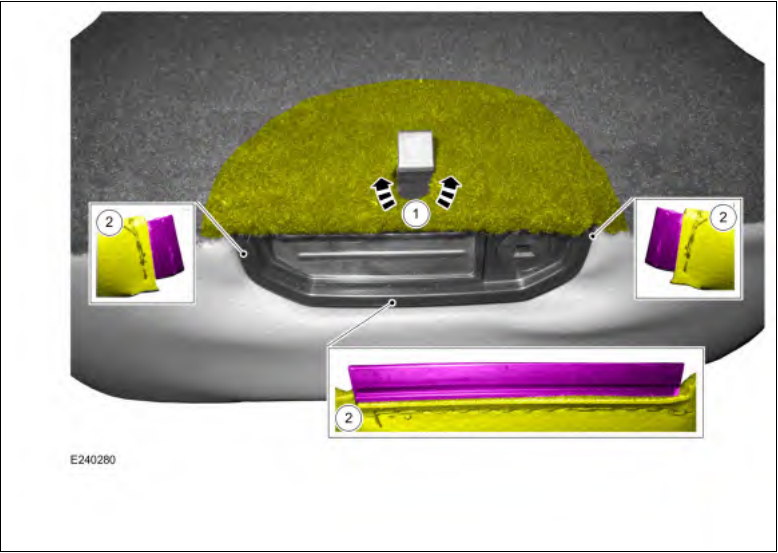

19. Release the J-hook and position the front center seat cushion cover upward.



20. Release the hook-and-loop retainer and position the front center seat cushion cover strap aside.



21. **NOTICE:** Use care when separating the seat cushion trim cover from the hook-and-loop strip or the hook-and-loop strip may be torn from the seat cushion foam.

Release the hook-and-loop strip and position the cushion cover upward.



22. Remove the front center seat cushion cover.



Installation

1. To install, reverse the removal procedure.