

Front Head Restraint Guide Sleeve


Special Tool(s) / General Equipment

Flat Headed Screw Driver

Removal

NOTE: Driver seat shown, passenger seat similar.


1. Remove the front head restraint.
 1. Depress the locking tabs.
 2. Remove the front head restraint.

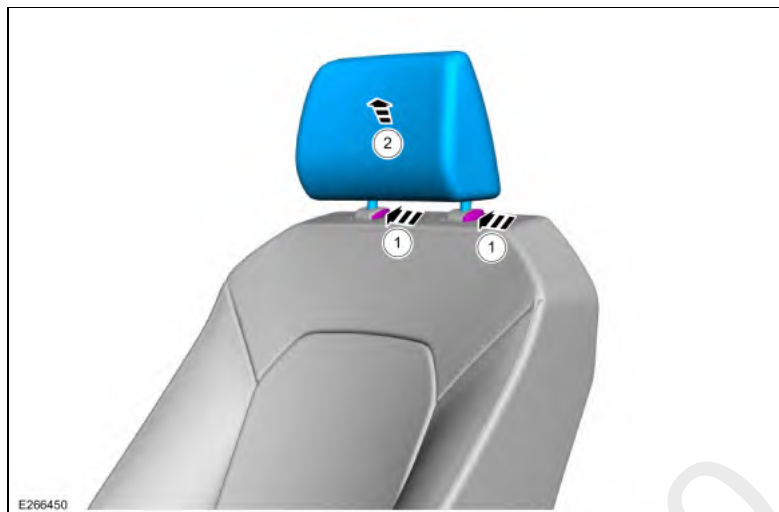

2. **NOTE:** Follow the unique instructions or graphics for this step in installation.

Remove the head restraint guide sleeve(s).

1. Release the tab.
Use the General Equipment: Flat Headed Screw Driver
2. Remove the front head restraint guide sleeve.

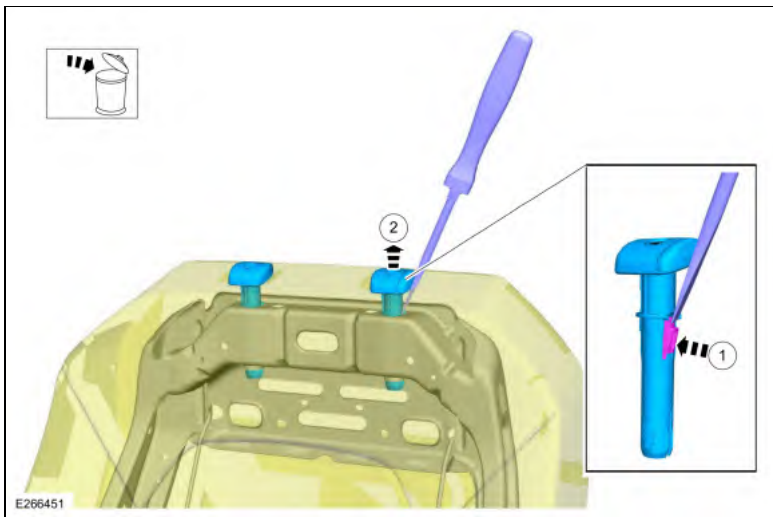


Installation

1. **NOTICE:** Always install new head restraint guide sleeves. Difficult adjustment of the head restraint may occur. Failure to follow these instructions may result in component failure.

NOTICE: The head restraint guide sleeves are not interchangeable. Failure to install the correct head restraint guide sleeves at the correct position may result in component failure.

Allow the head restraint guide sleeve to slide freely through the backrest foam and backrest trim cover. Using hand pressure, twist the head restraint guide sleeve while pushing it into the backrest frame until the tab is locked into place.

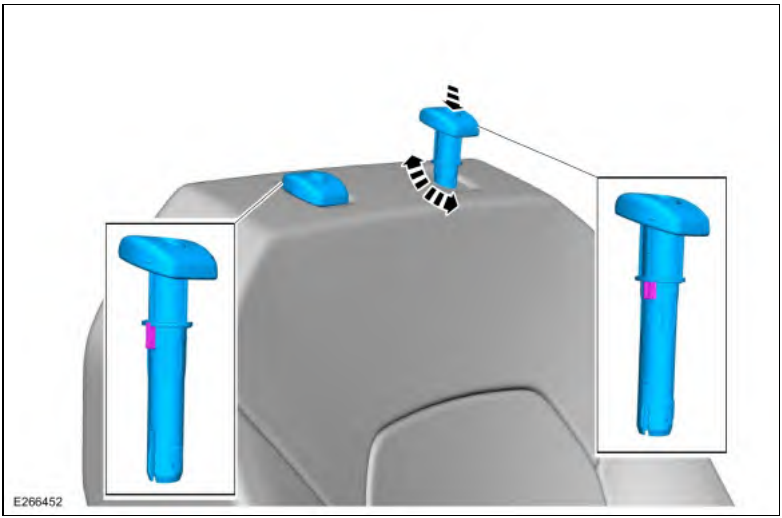

2. Install the front head restraint.
1. Depress the locking tabs.
 2. Install the front head restraint.

