

Front Seat Backrest Blower Motor


Removal

NOTE: Driver seat shown, passenger seat similar.

1. Move the front seat to the full upward position.




2. Depower the SRS.
Refer to: Supplemental Restraint System (SRS) Depowering (501-20B Supplemental Restraint System, General Procedures).
3. Detach the front seat electrical connector retainers and position the front seat wiring harnesses aside.

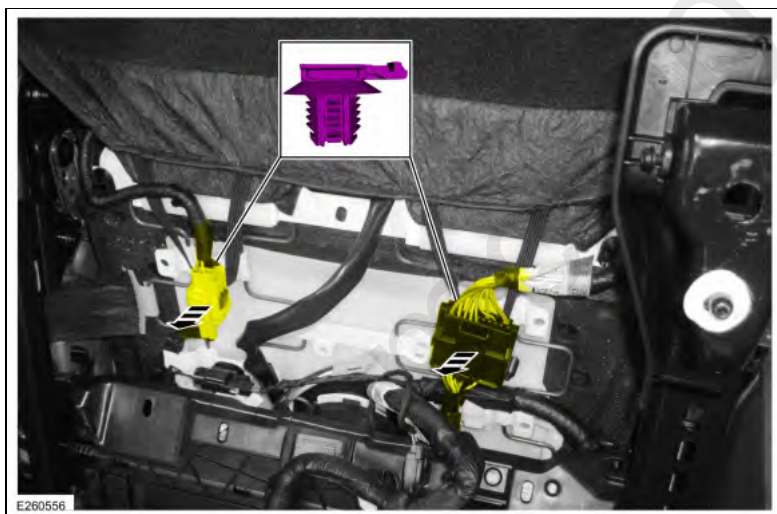


4. Detach the front seat backrest cover straps and position the front seat backrest cover aside.



5. Detach the front seat backrest cover lower J-clip.

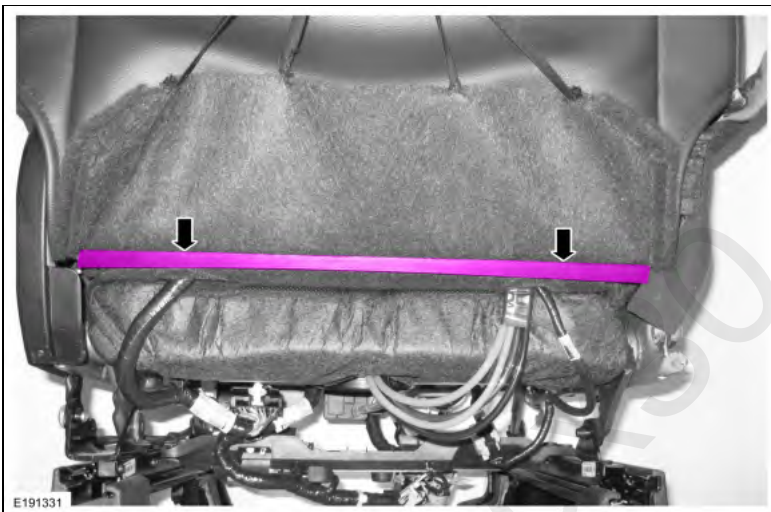


6. Detach the hook-and-loop retainer and position the front seat backrest cover strap aside.

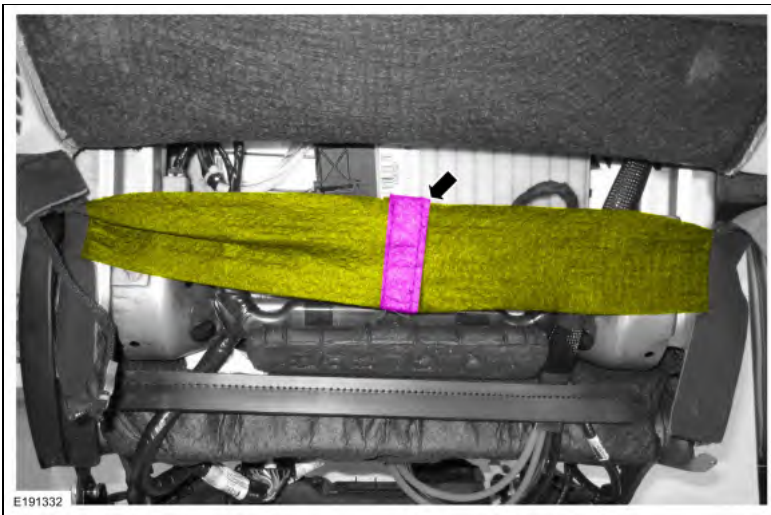


7. **NOTE:** To install, gradually alternate the left and right front seat backrest cover zippers to prevent damage to the front seat backrest cover.

1. Unzip the front seat backrest cover zippers.
2. Position the front seat backrest cover upward.
3. Detach the front seat backrest cover J-clips from the front seat lumbar wire.

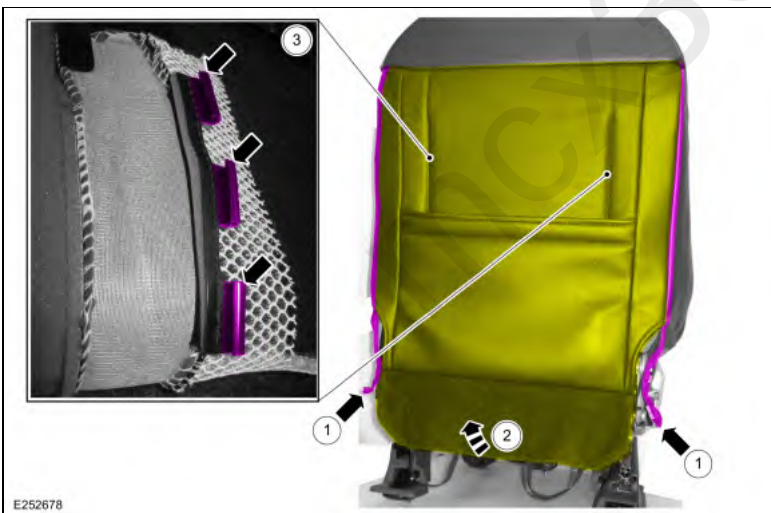


8.
 1. Detach and disconnect the front seat backrest blower motor electrical connector.
 2. Detach the retainer and position the front seat backrest blower motor wiring harness aside.
 3. Detach the front seat backrest blower motor strap J-hooks.

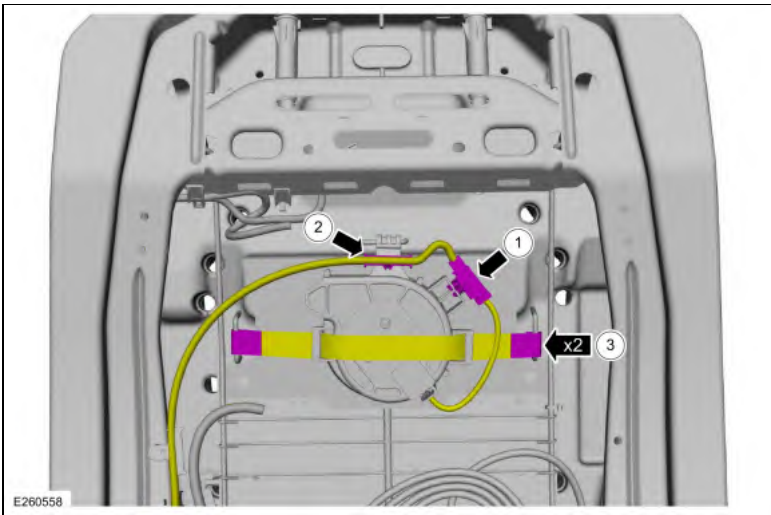

9. **NOTICE:** Use care when detaching the front seat backrest blower motor retaining clips from the vent bag or the vent bag may tear from the front seat backrest foam.

Remove the front seat backrest blower motor.

1. Detach the J-hook.
2. Detach the retaining clips.

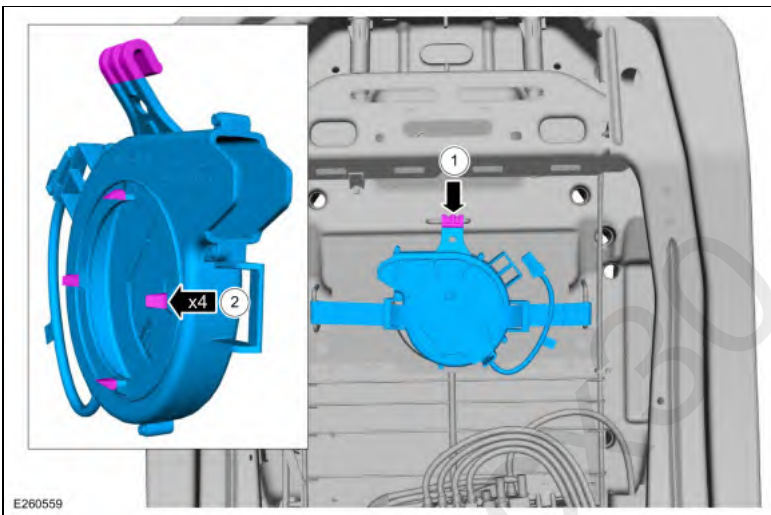

Installation

1. To install, reverse the removal procedure.
2. Repower the SRS.
Refer to: Supplemental Restraint System (SRS) Repowering (501-20B Supplemental Restraint System, General Procedures).