

Front Seat Cushion Cover


Removal

NOTE: Driver seat shown, passenger seat similar.

NOTE: Removal steps in this procedure may contain installation details.

All seats

1. Remove the front seat.
Refer to: Front Seat (501-10A Front Seats, Removal and Installation).
2. Remove the front seat side shield screws.


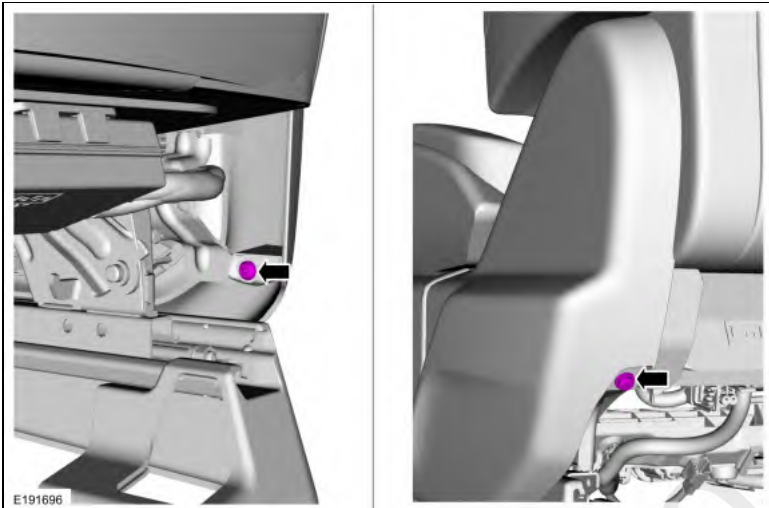


Manual seat

3.
 1. Remove the clip and the front seat recline handle.
 2. If equipped
Remove the clip and the front seat lumbar handle.




 4. Remove the front seat side shield.
 1. Firmly grasp the front seat side shield, lift up and out, separating the front seat side shield from the recliner bracket.
 2. From underneath, squeeze the retainers together and pull out on the front seat side shield.
 3. Slide the side shield forward.

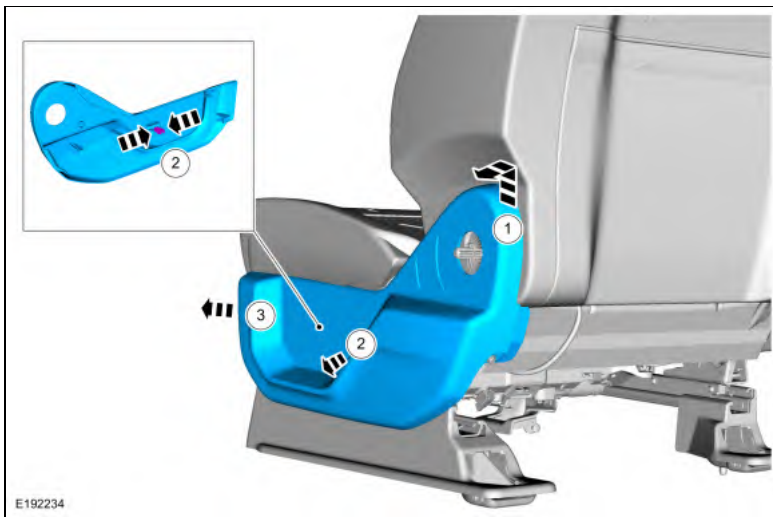


Power Seat

5. If equipped.
Remove the clip and the recline handle.

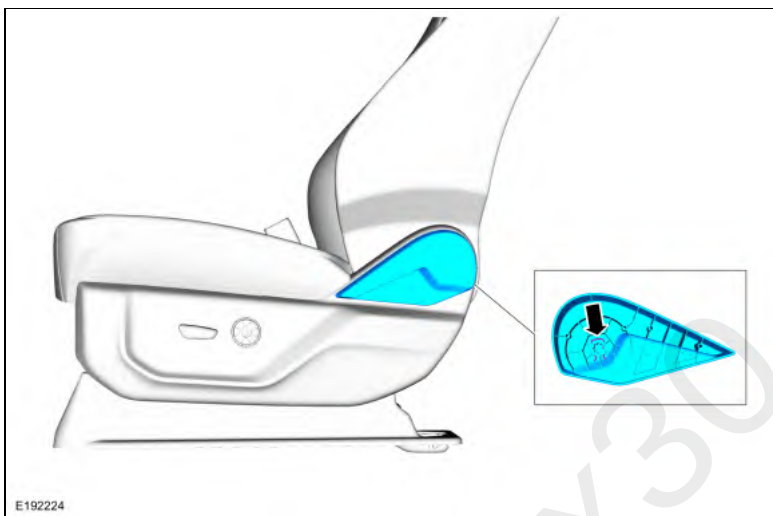


6.
Remove the front seat side shield.
 1. Firmly grasp the front seat side shield, lift up and out, separating the front seat side shield from the recliner bracket.
 2. Slide the front seat side shield forward.
 3. Disconnect the electrical connector.

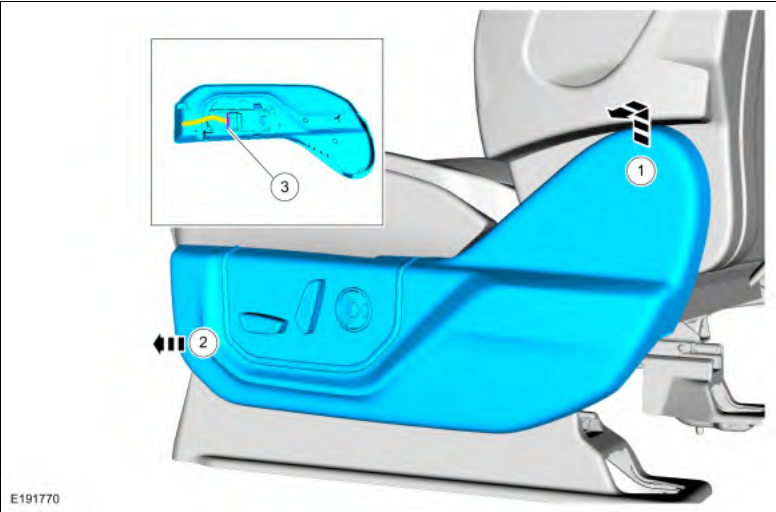

All seats


7. Detach the front seat electrical connector retainers and position the front seat wiring harnesses aside.

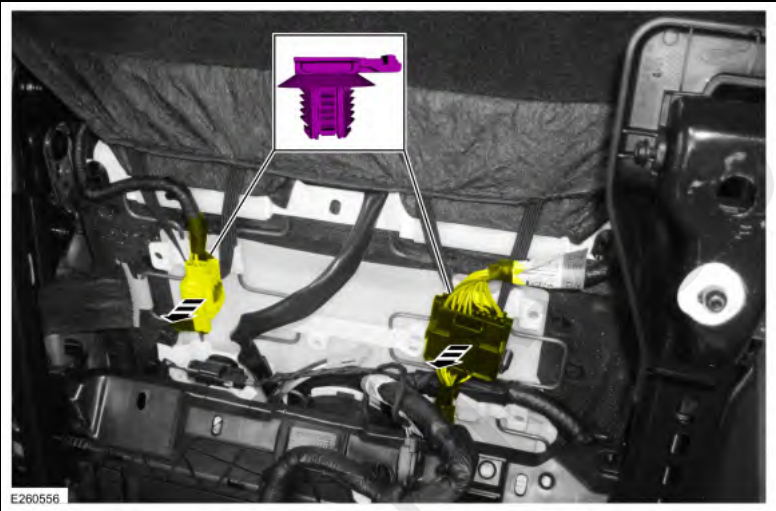

8. Detach the front seat backrest cover straps and position the front seat backrest cover aside.




9. Detach the front seat cushion cover J-clips and position the front seat cushion cover aside.

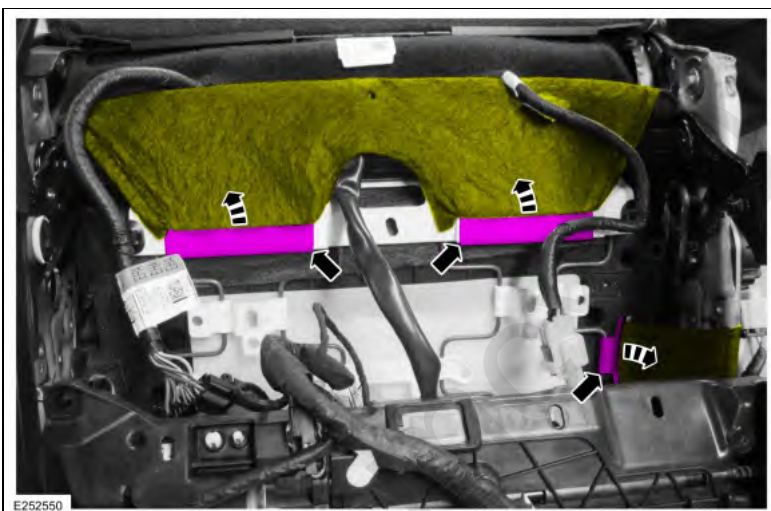

10. If equipped.



Disconnect the front seat cushion heater mat electrical connector.

1. Disconnect the front seat heater mat electrical connector.
2. Detach the wiring harness retainer.

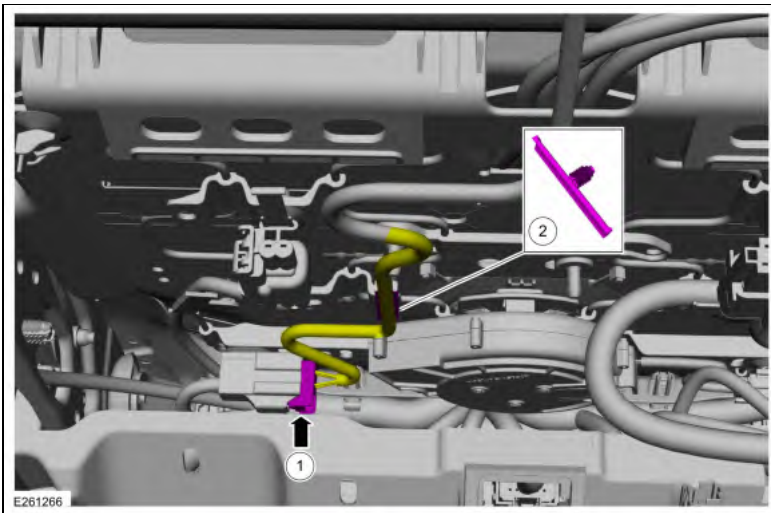



11.

 1. On both sides.
Detach the front seat cushion cover J-clips.
2. Detach the front seat cushion cover J-clip.
3. Remove the strap from around the front seatbelt buckle.

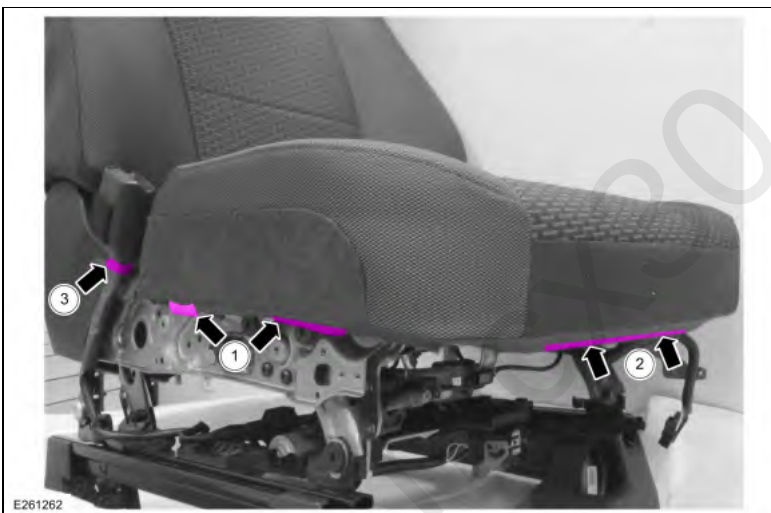


12. If equipped.

 - Detach the front seat cushion heater mat J-clip.

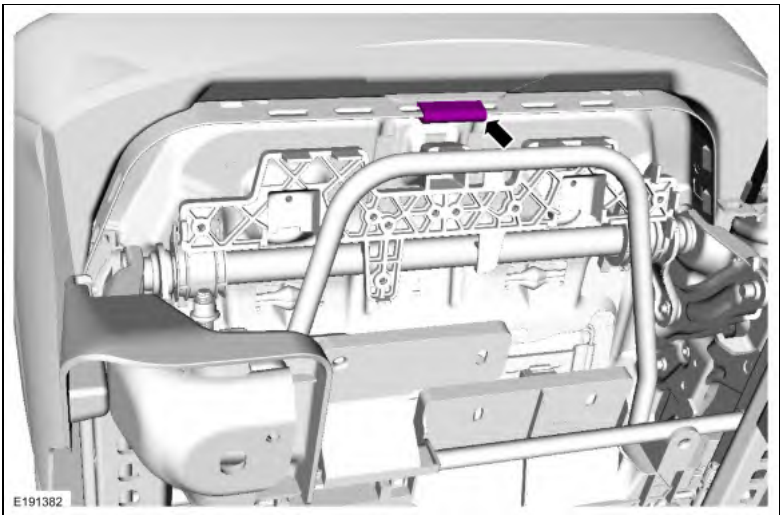

 13. Remove the front seat cushion cover and foam as an assembly.




14. **NOTE:** *This step is only necessary when installing a new component.*
Invert the rear portion of the front seat cushion cover.



15. **NOTICE:** Use care when separating the front seat cushion from the hook-and-arrow or the hook may be torn from the front seat cushion foam pad.
- NOTE:** This step is only necessary when installing a new component.

- Remove the front seat cushion cover.
1. Invert the front seat cushion cover.
 2. Release the front seat hook-and-arrows.

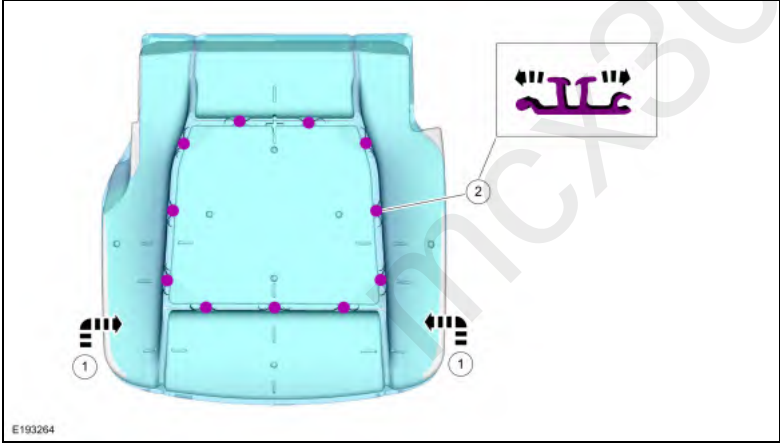

Installation

1. To install, reverse the removal procedure.

