

Front Seat Lumbar Assembly

Removal

NOTE: Driver seat shown, passenger seat similar.


1. Remove the front seat.
Refer to: Front Seat (501-10A Front Seats, Removal and Installation).
2. Adjust the front seat manual lumbar to the fully relaxed position.



3.
 1. Remove the clip and the front seat recline handle.
 2. Remove the clip and the front seat lumbar handle.




4. Remove the front seat side shield screws.

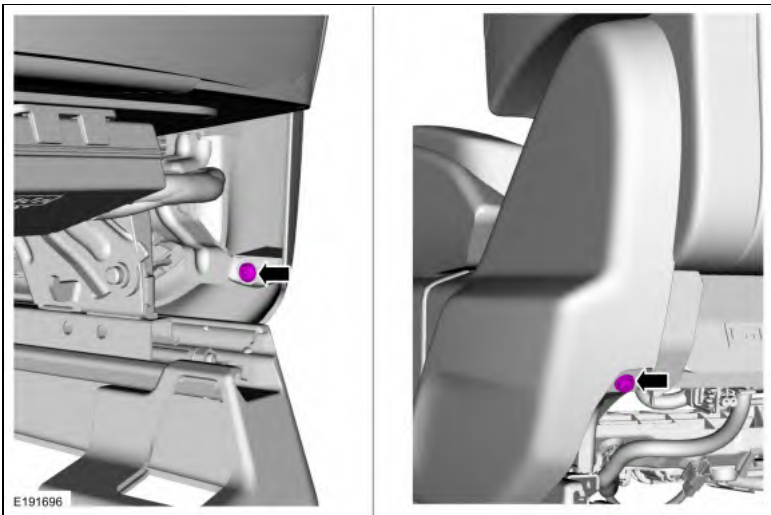


5. **NOTE:** Front seat side shield without manual lumbar shown, front seat side shield with manual lumbar similar.

Remove the front seat side shield.

1. Firmly grasp the front seat side shield, lift up and out, separating the front seat side shield from the recliner bracket.
2. From underneath, squeeze the retainers together and pull out on the front seat side shield.
3. Slide the front seat side shield forward.

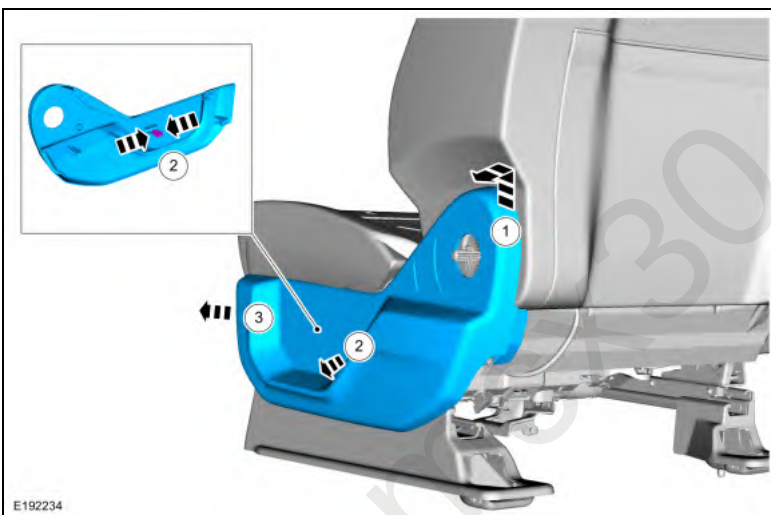


6. Release the electrical connector retainer and position the side airbag wiring harness aside.

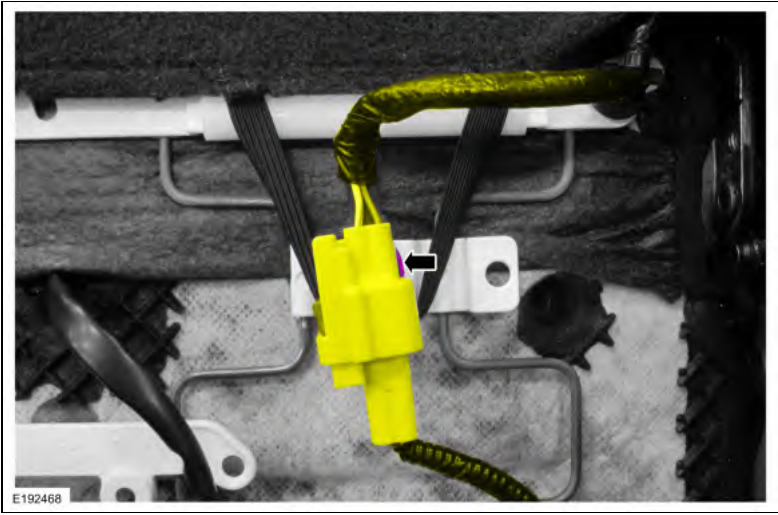



7. Detach the front seat backrest cover straps and position the front seat backrest cover aside.



8. Detach the front seat backrest cover lower J-clip(s).

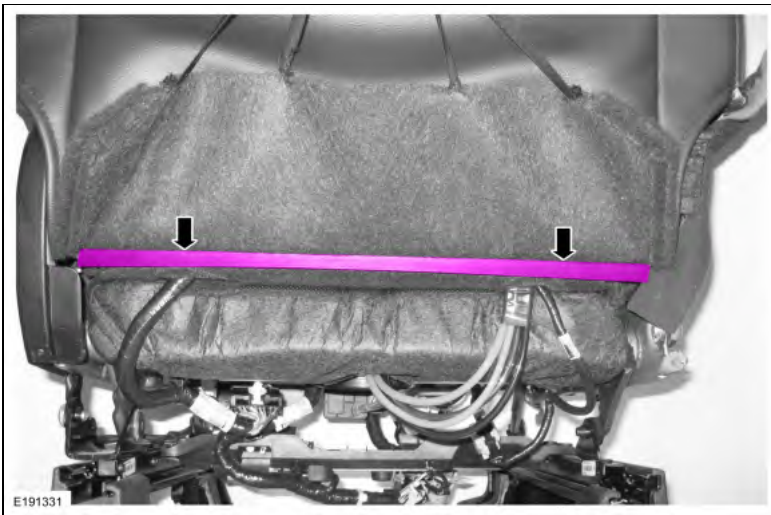


 9. Detach the hook-and-loop retainer and position the front seat backrest cover strap aside.

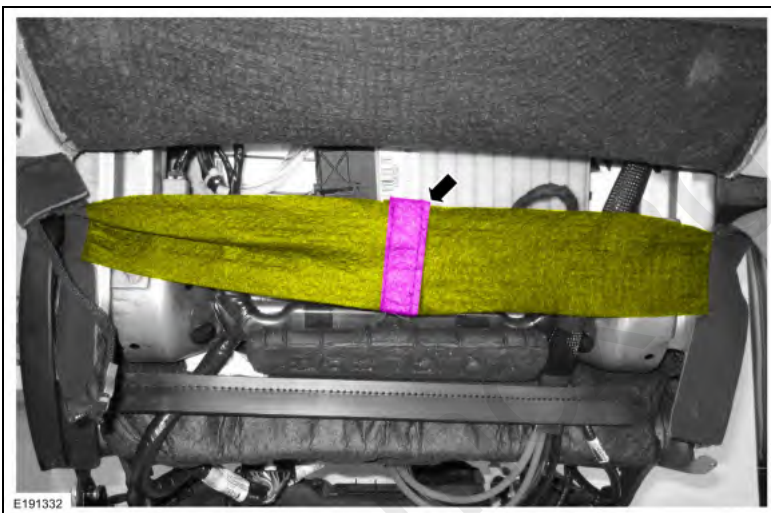

10. **NOTE:** To install, gradually alternate the left and right front seat backrest cover zippers to prevent damage to the seat backrest cover.


1. Unzip the front seat backrest cover zippers.
2. Position the front seat backrest cover upward.
3. Detach the front seat backrest cover J-clips from the front seat lumbar wire.

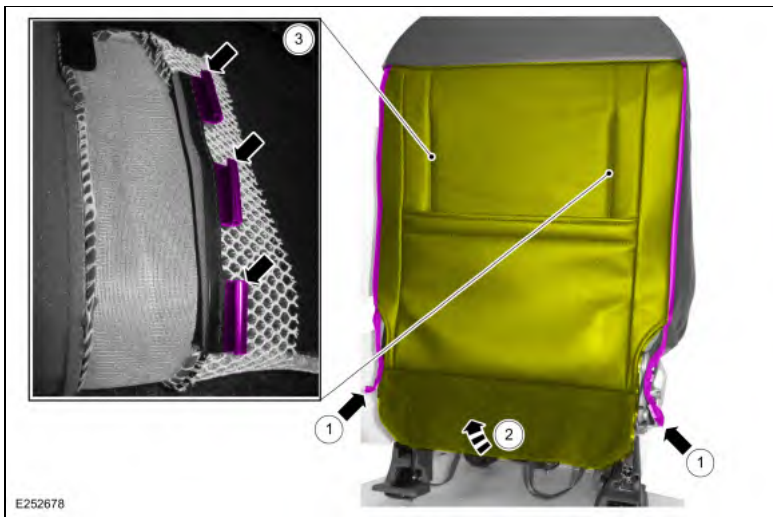

11. **NOTE:** For installation, note the routing of the front seat manual lumbar cable through the front seat backrest cover opening.

Position the front seat lumbar assembly cable away from the seat track.


- Disconnect the cable from the front seat lumbar actuator.
- Detach the cable retainers from the front seat track.

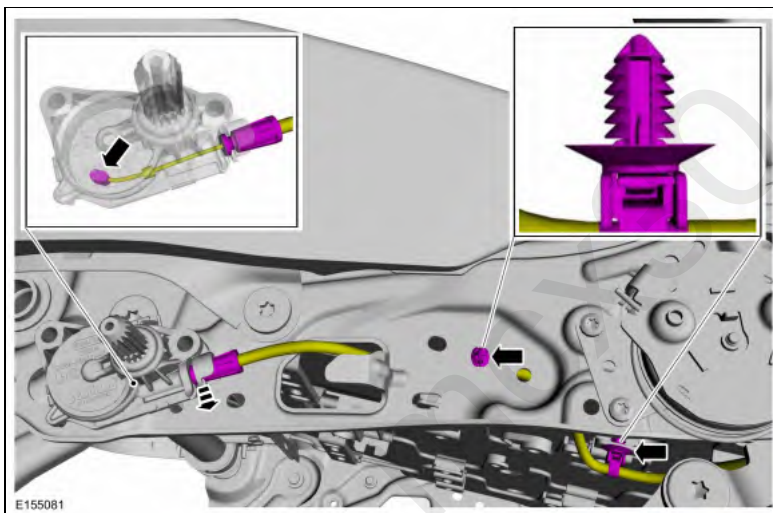


12.

Remove the front seat lumbar assembly.

1. Release the front seat lumbar assembly cable retainer.
2. Detach the front seat lumbar assembly cable.
3. Detach the front seat lumbar assembly J-hooks.
4. Detach the front seat lumbar assembly upper J-hooks.

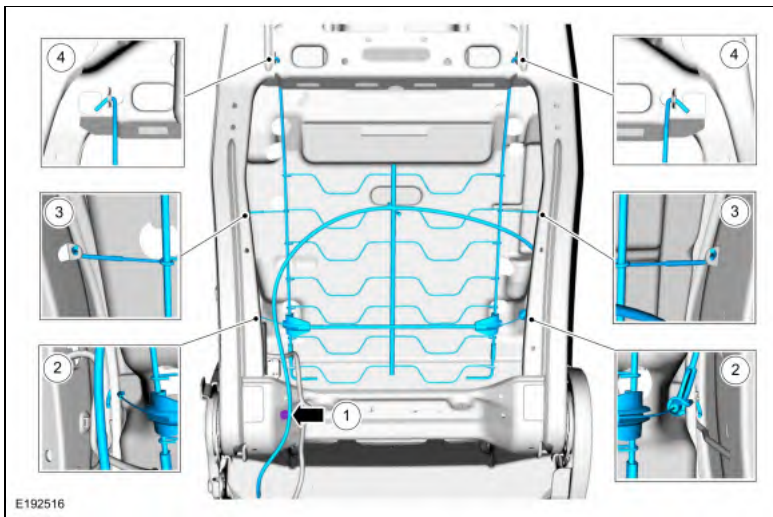

13. If required.
Remove the screws and the front seat lumbar actuator.

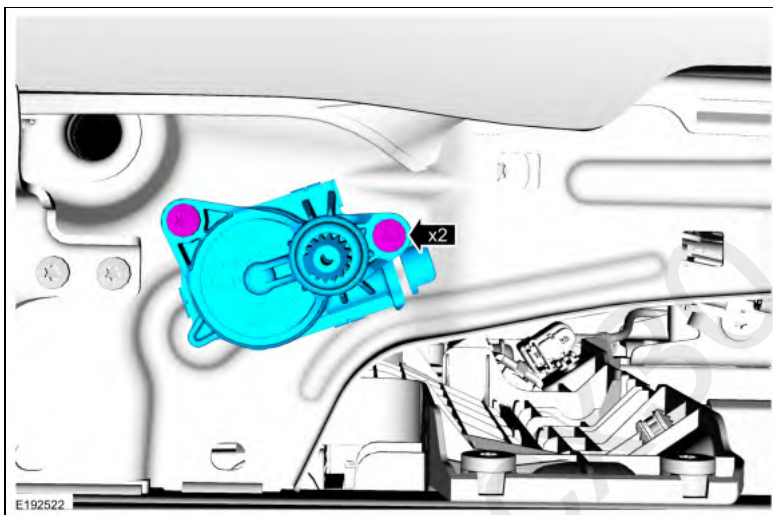

Installation

1. To install, reverse the removal procedure.