

Front Seat Power Lumbar Assembly

Removal

NOTE: Driver seat shown, passenger seat similar.

Regular cab

1. Remove the front seat.
Refer to: Front Seat (501-10A Front Seats, Removal and Installation).

Seats with heated/vented seats

2. Remove the front seat backrest blower motor.
Refer to: Front Seat Backrest Blower Motor (501-10A Front Seats, Removal and Installation).

Super cab and super crew seats without heated/vented seats


3. Move the front seat to the full upward position.



4. Depower the SRS.
Refer to: Supplemental Restraint System (SRS) Depowering (501-20B Supplemental Restraint System, General Procedures).

Seats without heated/vented seat


5. Detach the front seat electrical connector retainers and position the front seat wiring harnesses aside.

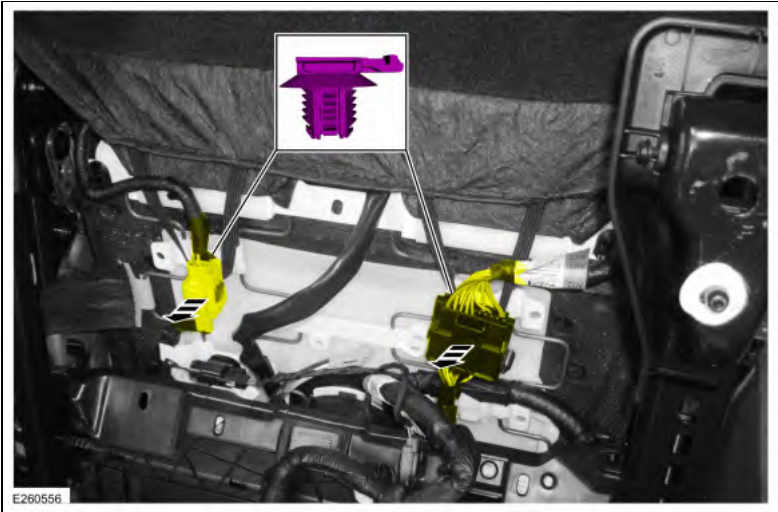



6. Detach the front seat backrest cover straps and position the front seat backrest cover aside.



7. Detach the front seat backrest cover lower J-clip(s).

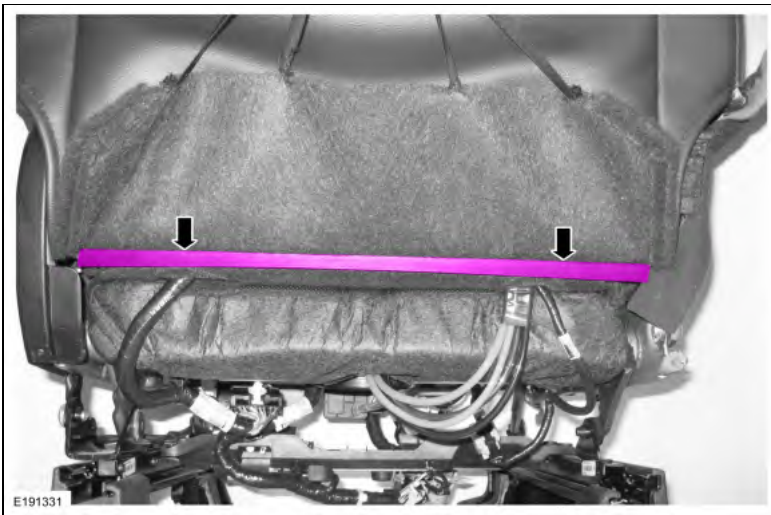


8. Detach the hook-and-loop retainer and position the front seat backrest cover strap aside.

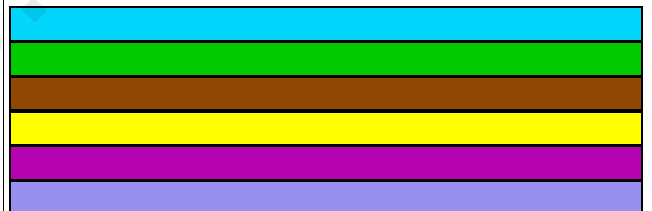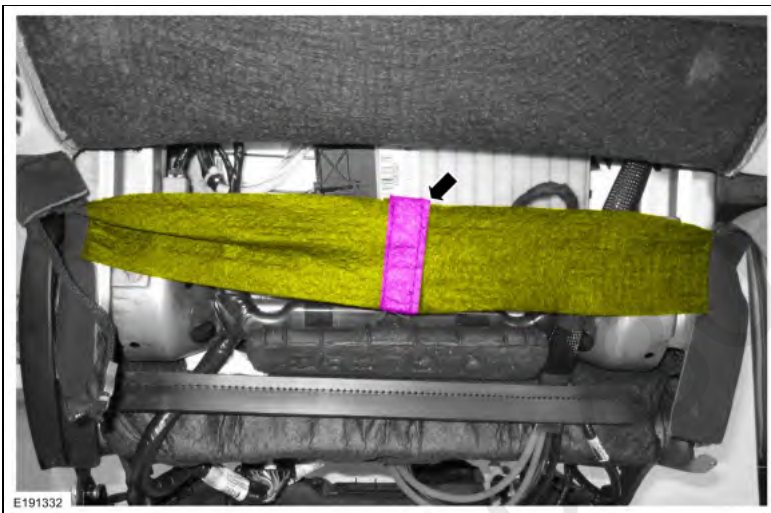


9. **NOTE:** To install, gradually alternate the left and right front seat backrest cover zippers to prevent damage to the front seat backrest cover.

1. Unzip the backrest cover zippers.
2. Position the front seat backrest cover upward.
3. Detach the front seat backrest cover J-clips from the front seat lumbar wire.

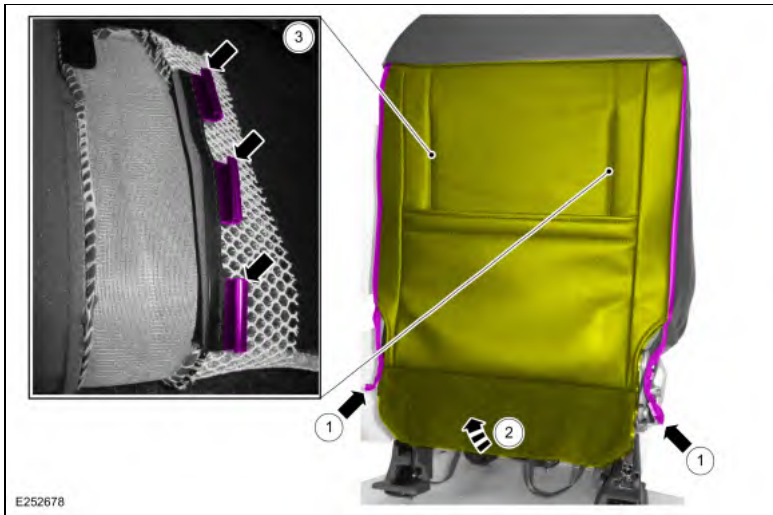

All Seats

10. Disconnect the electrical connector, release the J-hooks, and remove the front seat power lumbar assembly.

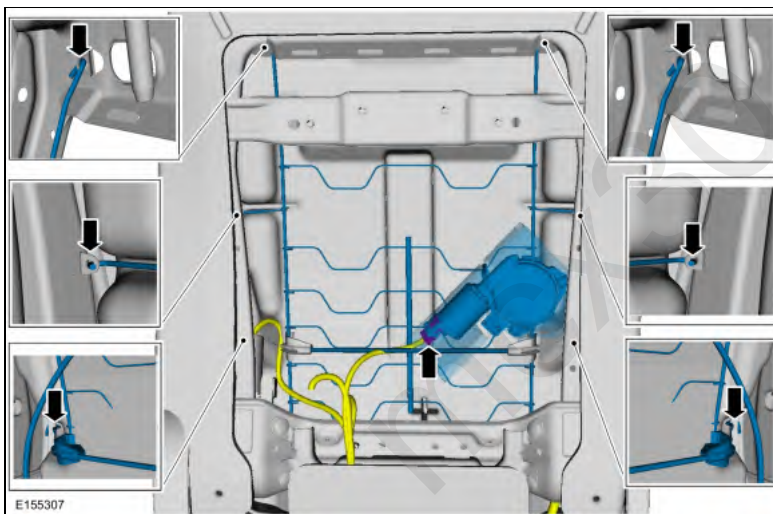

Installation

All seats

1. To install, reverse the removal procedure.

Super cab and super crew seats without heated/vented seats

2. Repower the SRS.
Refer to: Supplemental Restraint System (SRS) Repowering (501-20B Supplemental Restraint System, General Procedures).

