


Front Seat Track

Removal


1. If equipped.
Adjust the front seat manual lumbar to the fully relaxed position.




2. Remove the front seat cushion cover and foam as an assembly.
Refer to: Front Seat Cushion Cover (501-10A Front Seats, Removal and Installation).
3. Release the front seat wiring harness retainer(s) and position aside.

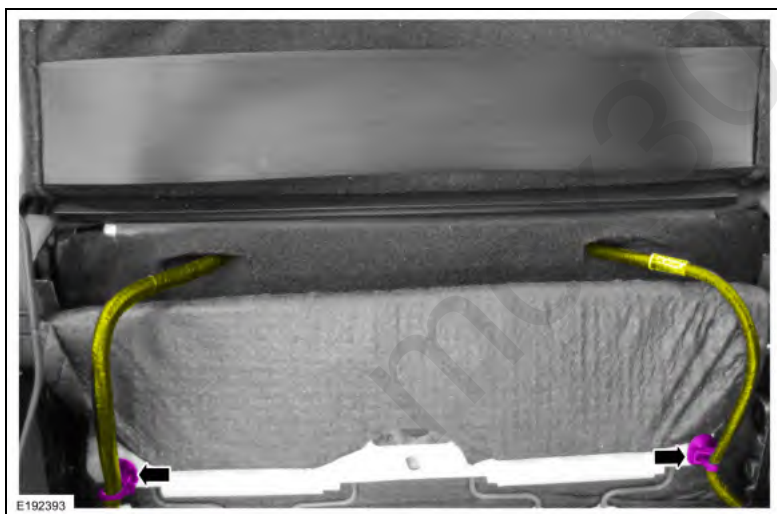


4. If equipped.
Remove the front seat cushion adjuster.
Refer to: Front Seat Cushion Adjuster - Vehicles With: Multi-Contour Seats (501-10A Front Seats, Removal and Installation).
5. If equipped.
Position the cable away from the seat track.
 - Disconnect the cable from the front seat manual lumbar actuator.
 - Detach the cable retainers from the front seat track.

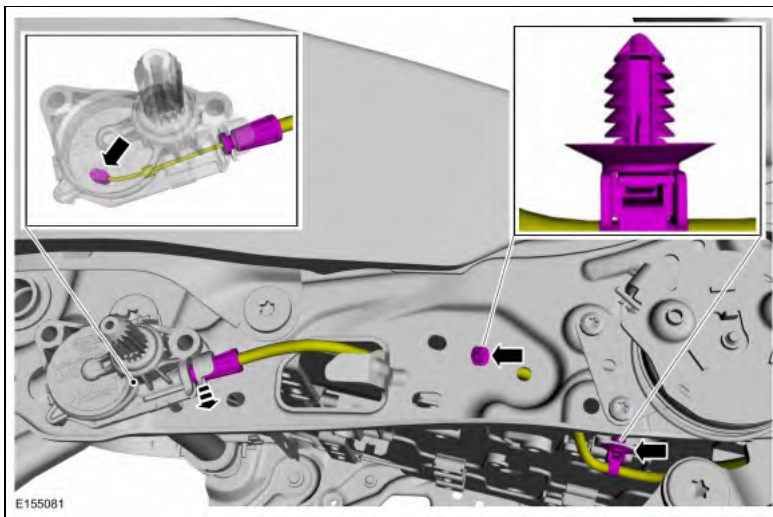

6. Remove the screws and the front seat recline cover.

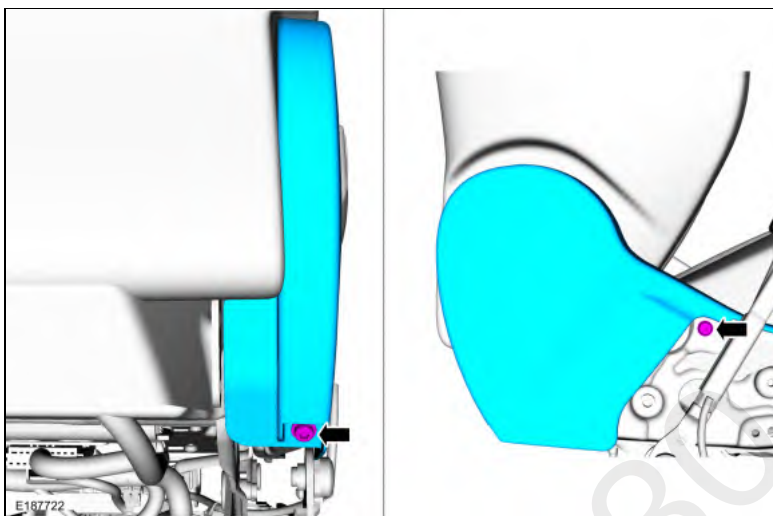

7. Remove the bolts and the front seat backrest.
Torque: 33 lb.ft (45 Nm)

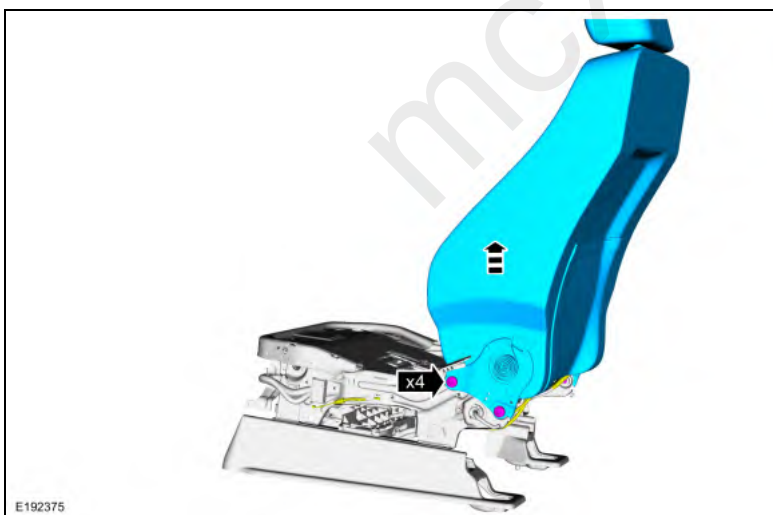

8. Remove the seatbelt buckle.
Refer to: Front Seatbelt Buckle (501-20A Seatbelt Systems, Removal and Installation).



Installation

All seats

- NOTE:** Transfer components to the new seat track as necessary.
To install, reverse the removal procedure.

Driver seat with memory

- NOTE:** This step is only necessary when installing a new component.

Operate the front seat in all directions through the full range of travel to set soft stops and avoid a premature stopping point occurrence after the vehicle is returned to the customer.

mcx30.com