

Heated Rear Seat Module - Crew Cab

Removal


1. **NOTE:** Removal steps in this procedure may contain installation details.

NOTE: The backrest latch is only accessible when the seat cushion is raised.


NOTE: During installation the striker should be in its lowest position for the latch to engage.

Release and lower the LH seat backrest.


1. Raise the seat cushion.
2. Release the seat backrest latch.
3. Lower the backrest.

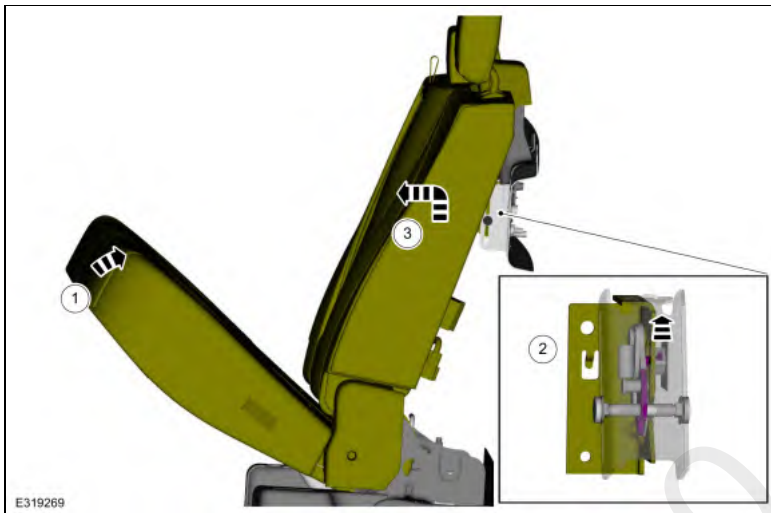

2. Disconnect the electrical connectors. Remove the module fastener.

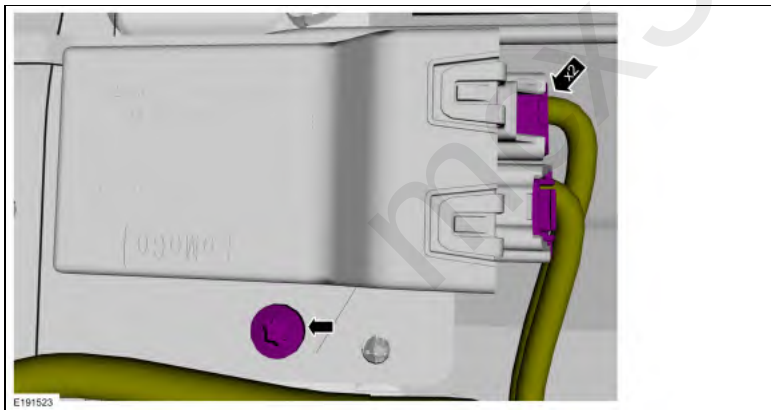

3. Rotate and remove the heated seat module.

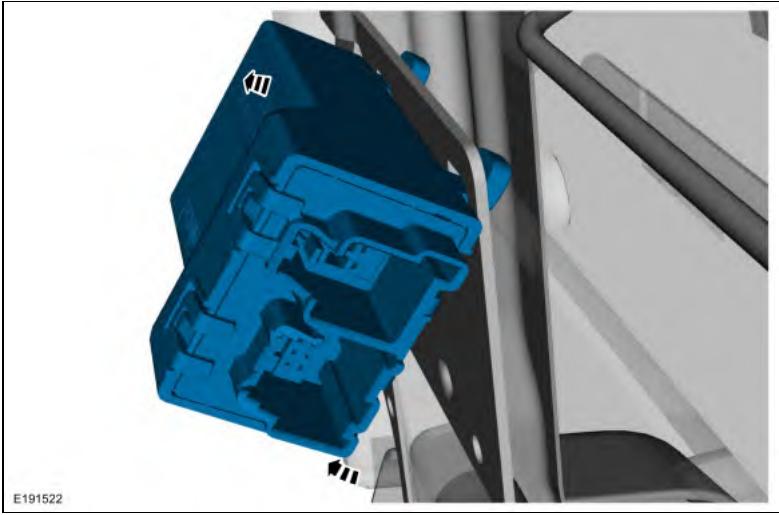

Installation

1. To install, reverse the removal procedure.

mcx30.com