


Heated Rear Seat Switch - Crew Cab

Special Tool(s) / General Equipment


Interior Trim Remover

Removal

1. Lift the cup holder trim and release the locking clips. Remove the cup holder trim.
Use the General Equipment: Interior Trim Remover

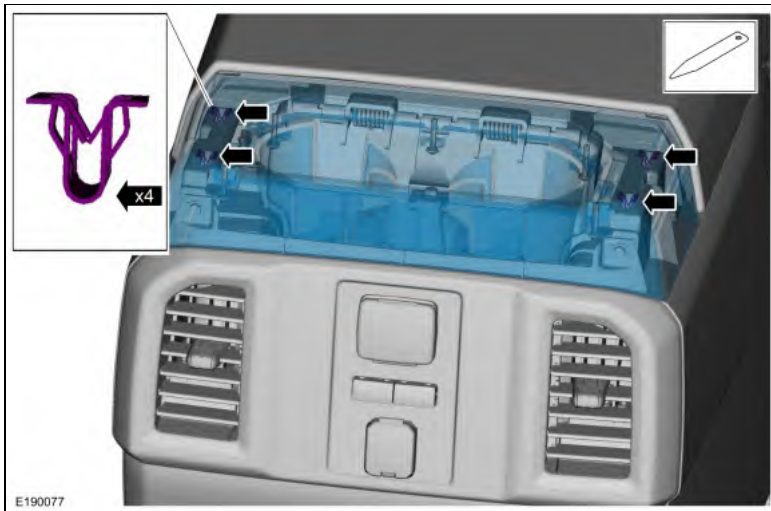

2. Remove the heated seat switch.
 1. Disconnect the power point electrical connector.
 2. Disconnect the heated seat switch electrical connector. Release the switch tabs and slide the switch rearward.

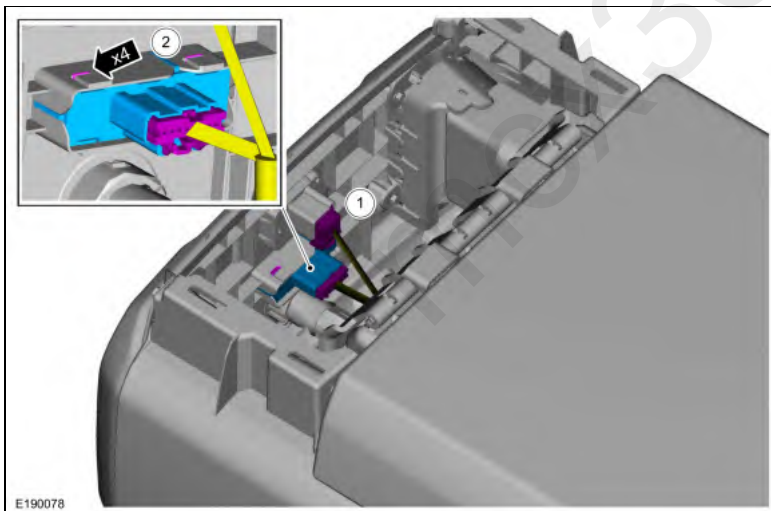

Installation

1. To install, reverse the removal procedure.

