

Rear Seat Armrest - Crew Cab


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Pull the backrest release strap and fold the RH seat backrest down.



2. Remove the armrest.
 1. Through the opening in the backrest cover and foam, remove the armrest bolt.
Torque: 18 lb.ft (25 Nm)
 2. Lift and rotate the armrest to release the guide pins from both sides of the armrest.

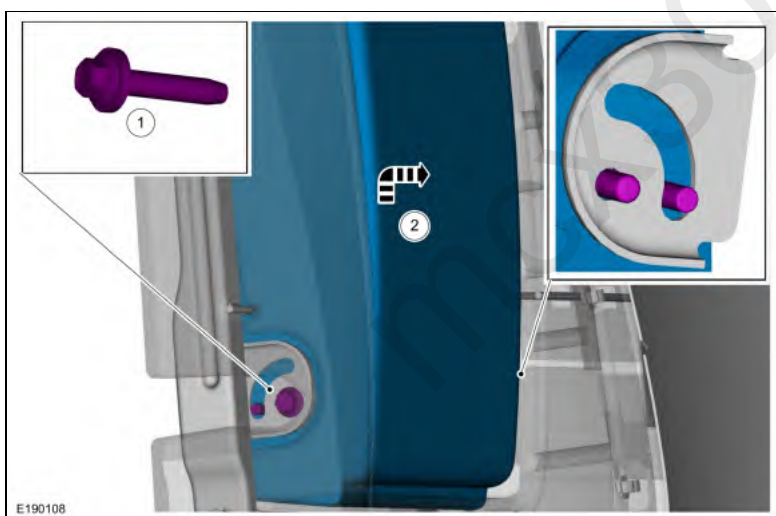

Installation

1. To install, reverse the removal procedure.

