


Rear Seat Backrest - Crew Cab

Removal

NOTE: LH (left-hand) shown, RH (right-hand) similar.


NOTE: Removal steps in this procedure may contain installation details.

1. Remove the seat.
Refer to: Rear Seat LH - Super Cab (501-10B Rear Seats, Removal and Installation).
Refer to: Rear Seat RH - Super Cab (501-10B Rear Seats, Removal and Installation).
2. Remove the rear seat side shield(s).
 1. Remove the screws and the rear seat inboard side shield.
 2. If equipped without rear under seat storage.
Remove the screw and the rear seat outboard side shield.

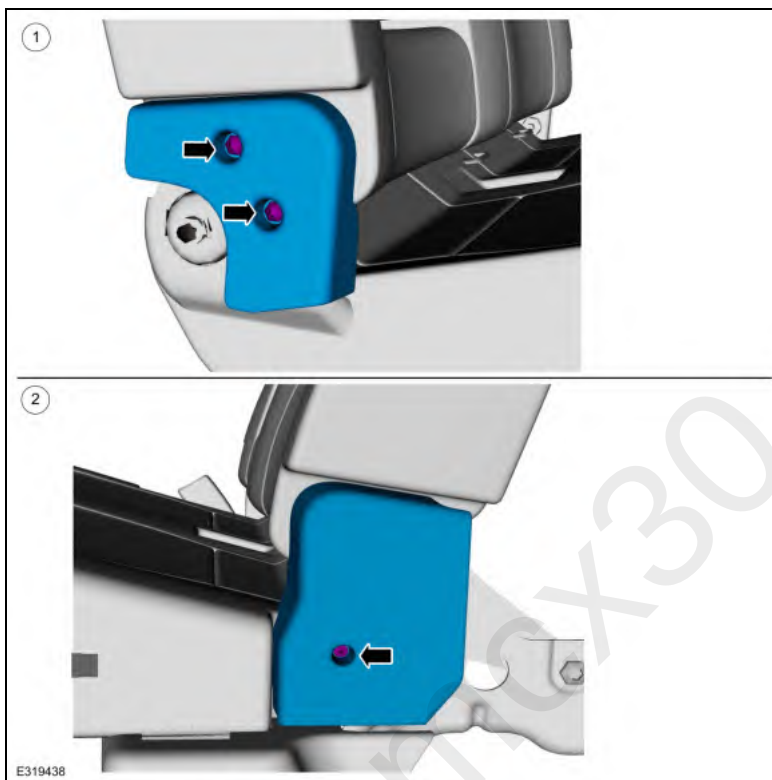


Vehicles with rear under seat storage

3. Remove the rear seat side shield.
 1. Remove the screw.
 2. Release the retainers.

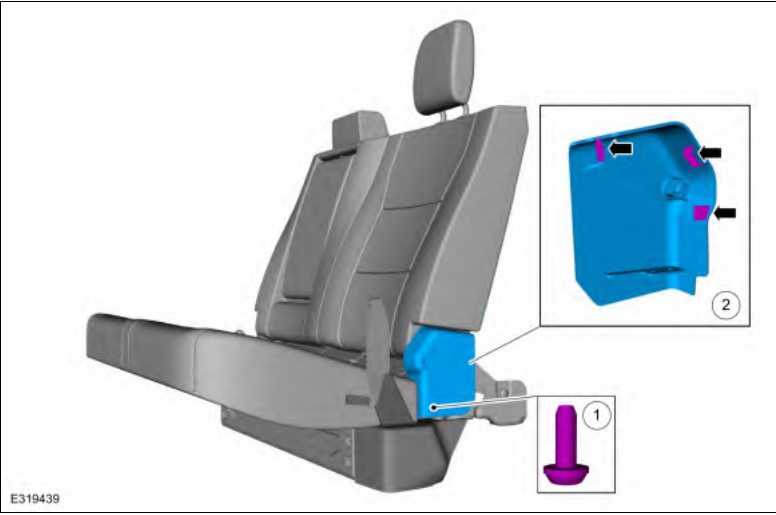


4. Remove the screws and the outboard pivot bolt cover.

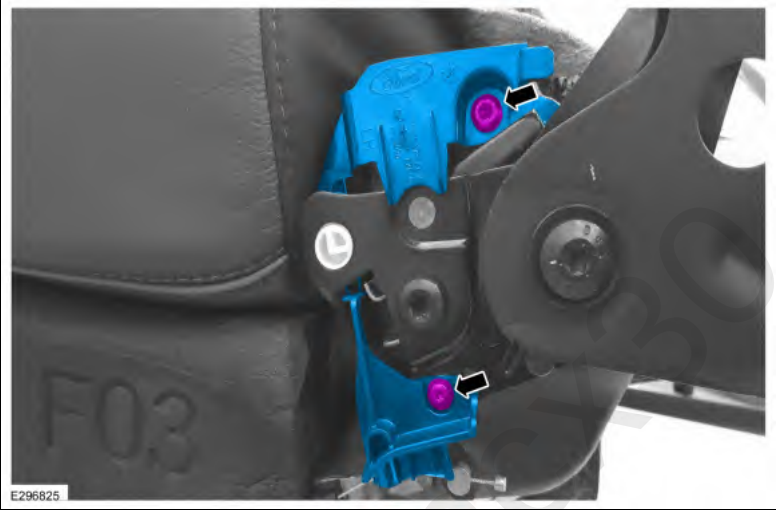


All vehicles


5. Release the backrest cover lower J-clip.

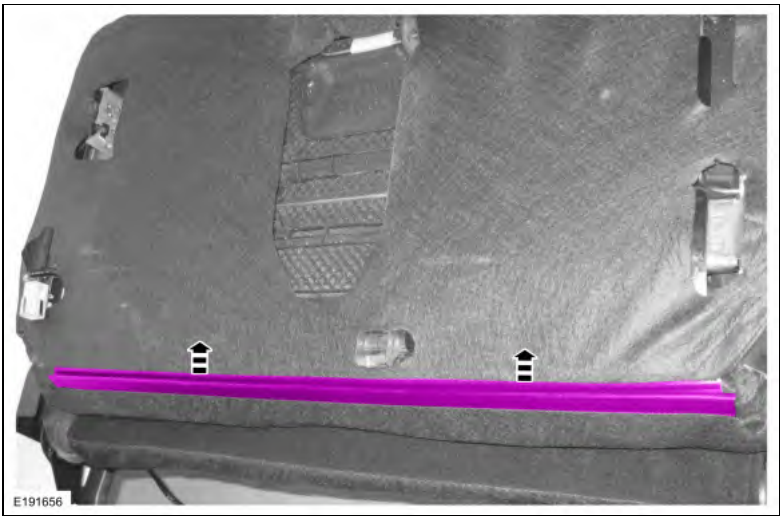



6. On both sides, unzip the backrest cover.

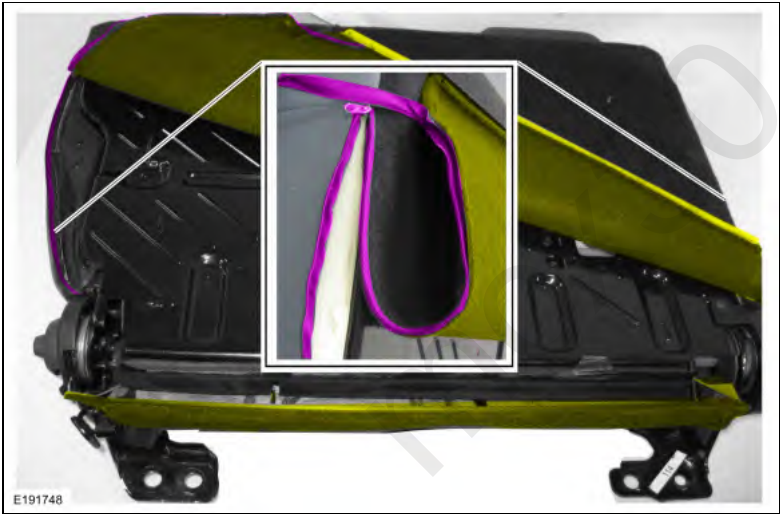


7. Release the backrest cover rear strap and position aside.

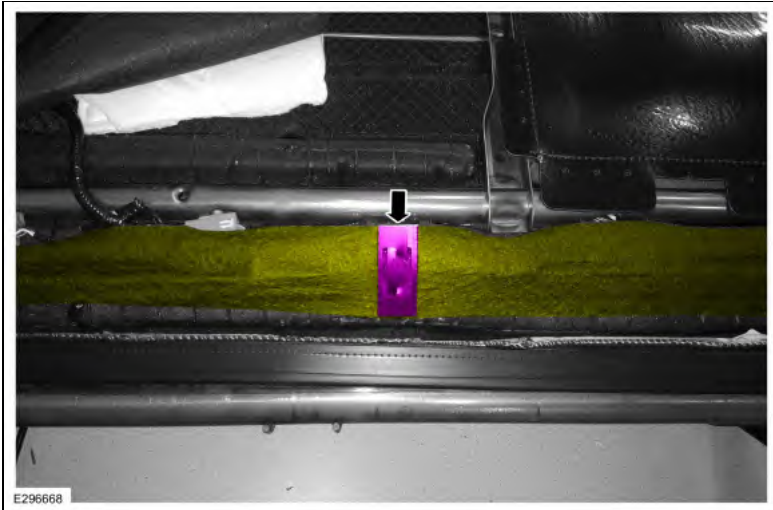

 8. If equipped.
Disconnect the heated seat electrical connectors.

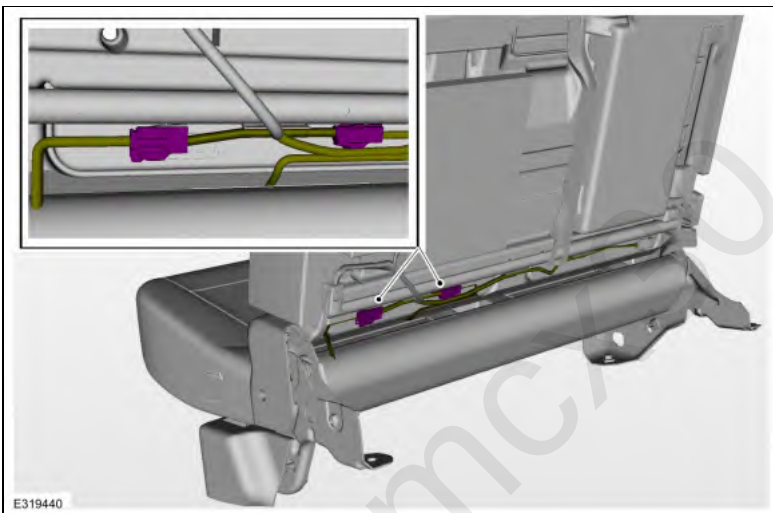

9. Remove the inboard and outboard pivot bolts. Remove the backrest.
Torque: 18 lb.ft (25 Nm)

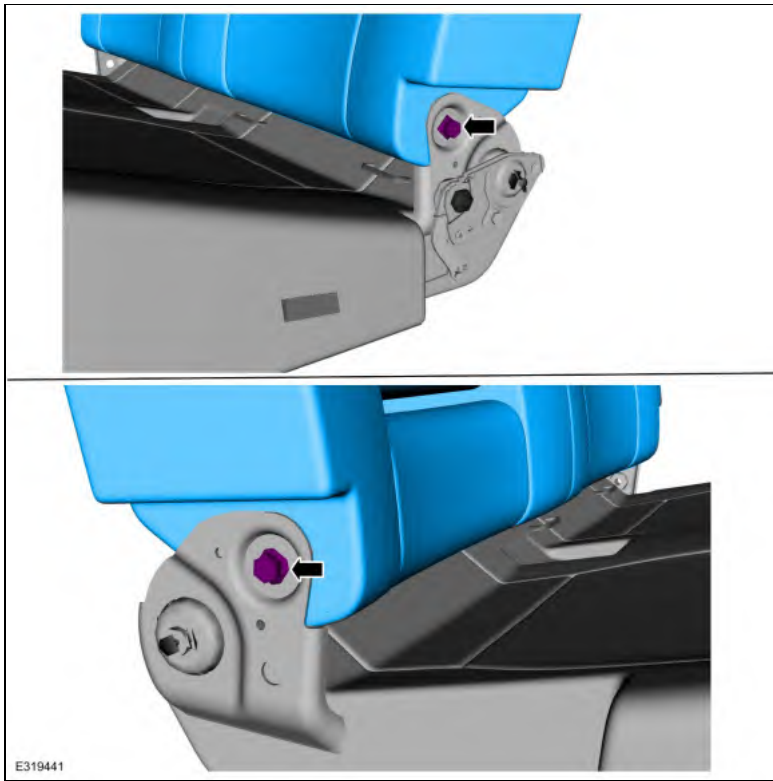

Installation

1. To install, reverse the removal procedure.
-