


Rear Seat Backrest - Super Cab

Removal


NOTE: LH shown, RH similar.

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the rear seat.
Refer to: Rear Seat LH - Crew Cab (501-10B Rear Seats, Removal and Installation).
Refer to: Rear Seat RH - Super Cab (501-10B Rear Seats, Removal and Installation).
2. Remove the inboard and outboard cushion side shield screws and remove the side shields.

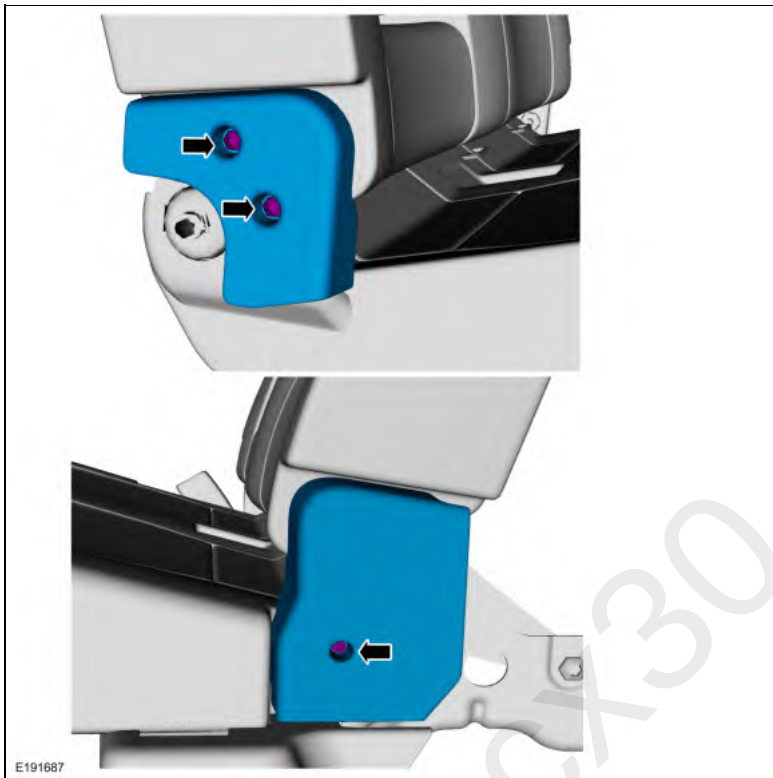

3. Remove the inboard and outboard pivot bolts. Remove the backrest.
Torque: 18 lb.ft (25 Nm)

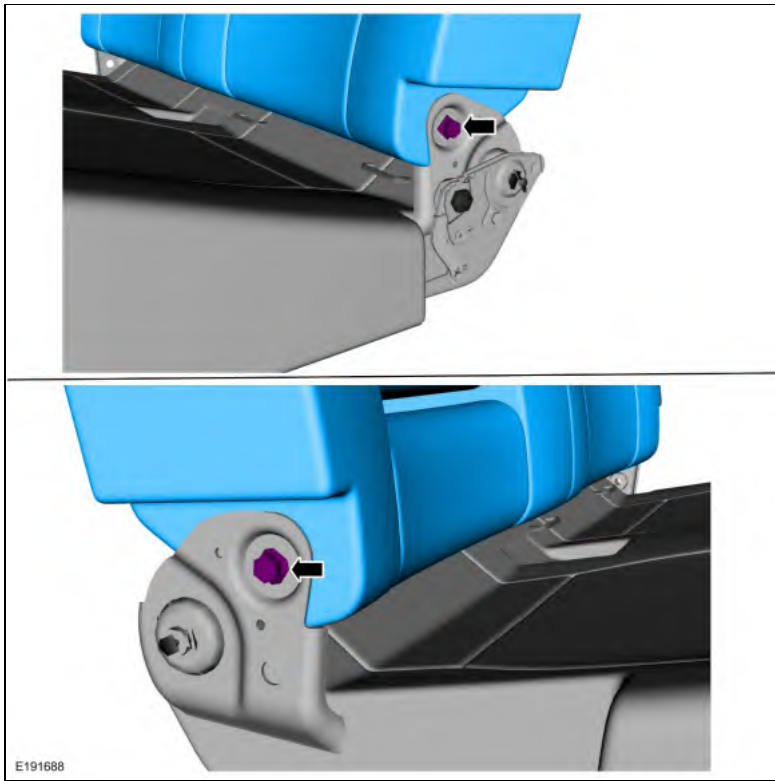

Installation

1. To install, reverse the removal procedure.