


Rear Seat Latch

Removal

NOTE: LH (left-hand) shown, RH (right-hand) similar.


NOTE: Removal steps in this procedure may contain installation details.

1. Remove the rear seat.
Refer to: Rear Seat LH - Crew Cab (501-10B Rear Seats, Removal and Installation).
Refer to: Rear Seat RH - Super Cab (501-10B Rear Seats, Removal and Installation).
Refer to: Rear Seat LH - Crew Cab (501-10B Rear Seats, Removal and Installation).
Refer to: Rear Seat RH - Super Cab (501-10B Rear Seats, Removal and Installation).
2. Open the outboard side of the cushion cover.
 1. Release the cushion lower J-clip.
 2. Release the hook-and-loop strip.
 3. Unzip and open the outboard side of the cushion cover.

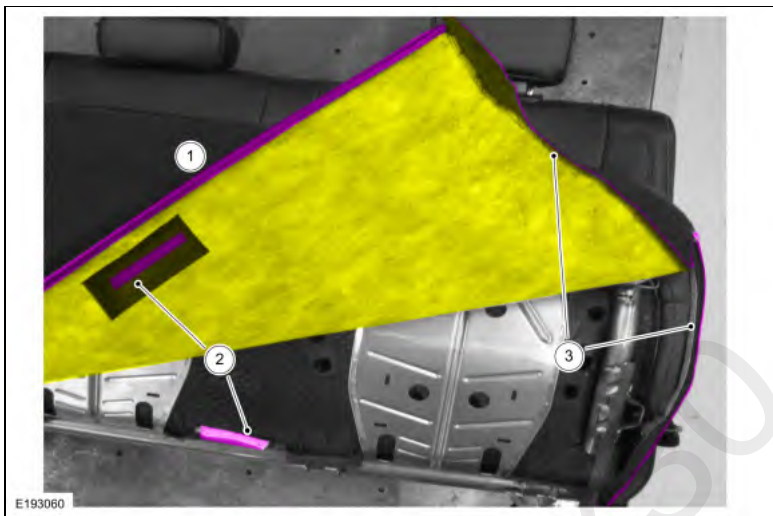


Vehicles with rear under seat storage

3. Remove the rear seat side shield.
 1. Remove the screw.
 2. Release the retainers and remove the side shield.

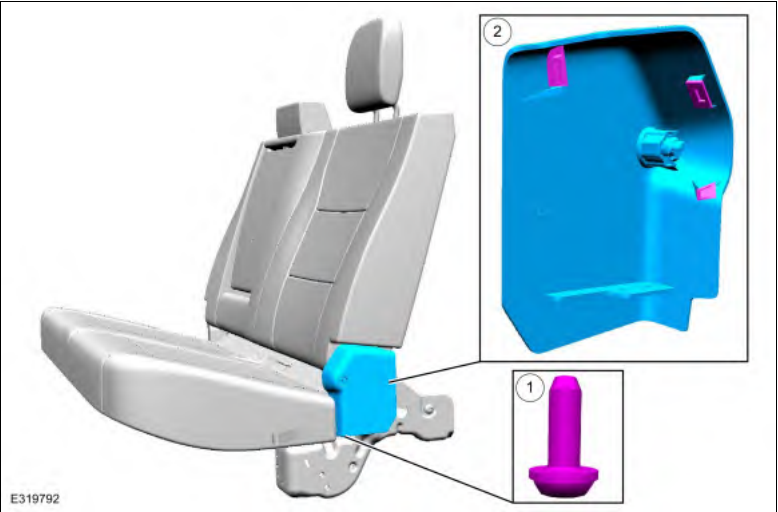


Vehicles without rear under seat storage

4. Remove the screw and the rear seat side shield.

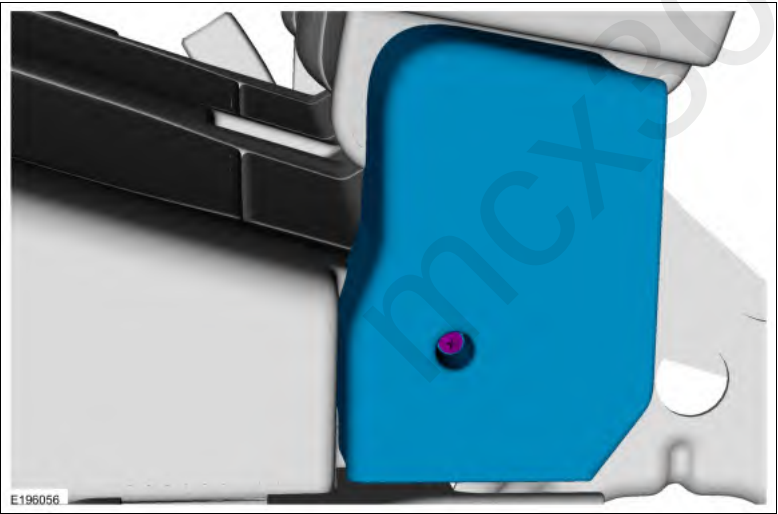


All vehicles

5. Remove the bolts and the outboard riser.
Torque: 24 lb.ft (32 Nm)

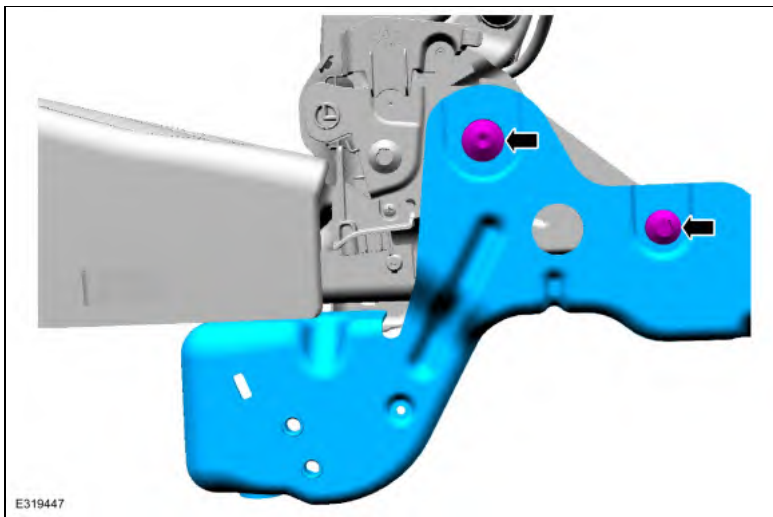

6. Remove the bolt and the cushion latch assembly.
Torque: 24 lb.ft (32 Nm)

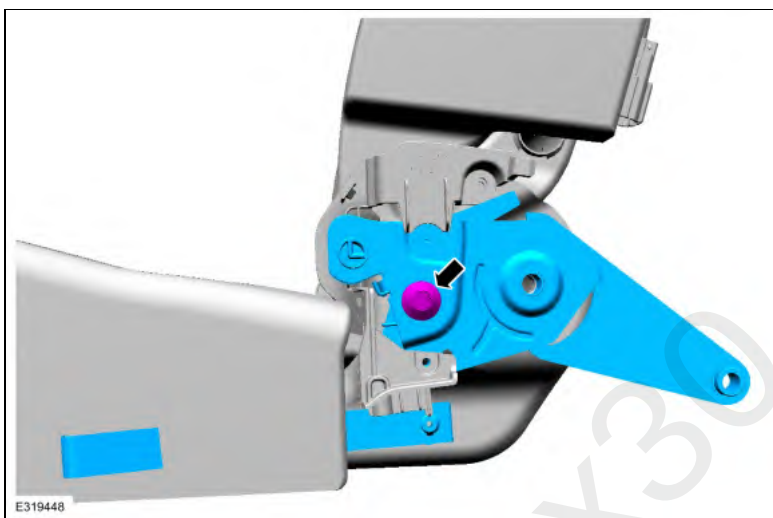

Installation

NOTE: During installation, make sure the seatbelt webbing is not twisted and the seatbelts and buckles are accessible to the occupants.

1. To install, reverse the removal procedure.