


## Rear Seat LH - Super Cab


### Removal

**NOTE:** Removal steps in this procedure may contain installation details.

1. Remove the RH seat.  
Refer to: Rear Seat RH - Super Cab (501-10B Rear Seats, Removal and Installation).
2. Remove the bolt and position the seatbelt aside.  
*Torque: 30 lb.ft (40 Nm)*

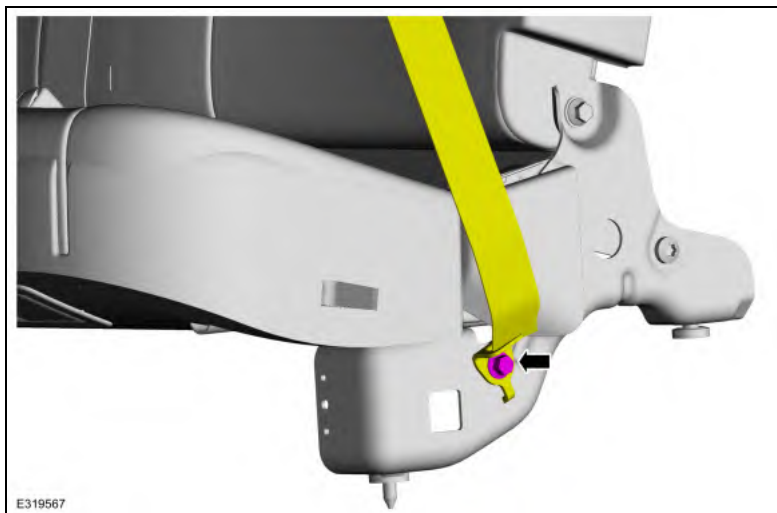


3. Remove the seat front bolts.
  1. Raise the seat cushion.
  2. Remove the bolts.  
*Torque: 26 lb.ft (35 Nm)*

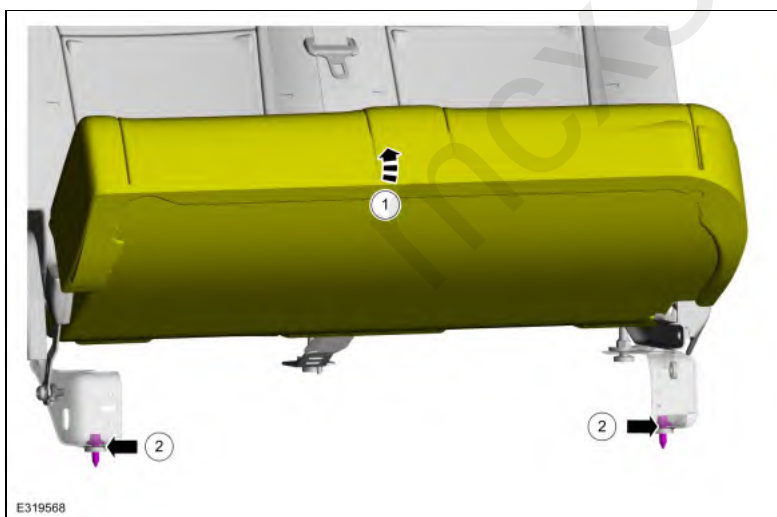


4. **NOTE:** During installation the striker should be in its lowest position for the latch to engage.

Lower the LH backrest.


1. Pull the backrest release strap and release the latch from the striker.
2. Lower the backrest.

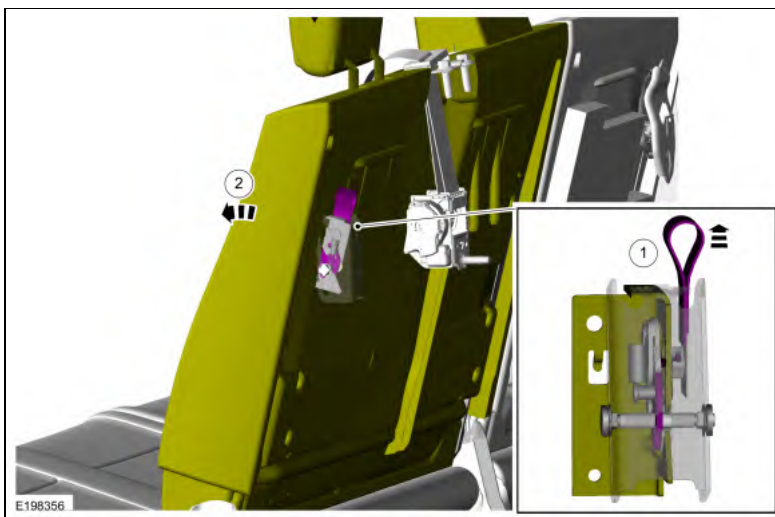

5. If equipped.  
Disconnect the subwoofer electrical connector, remove the fasteners and the subwoofer.  
*Torque: 62 lb.in (7 Nm)*

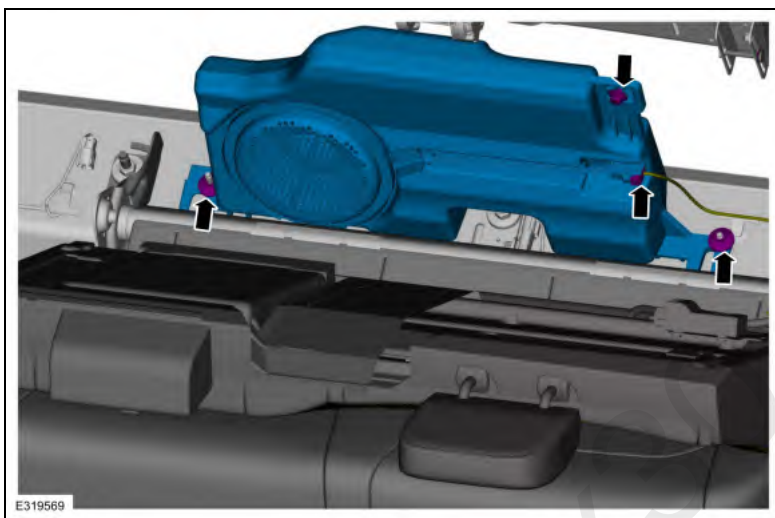

6. Remove the seat rear bolts.  
*Torque: 59 lb.ft (80 Nm)*

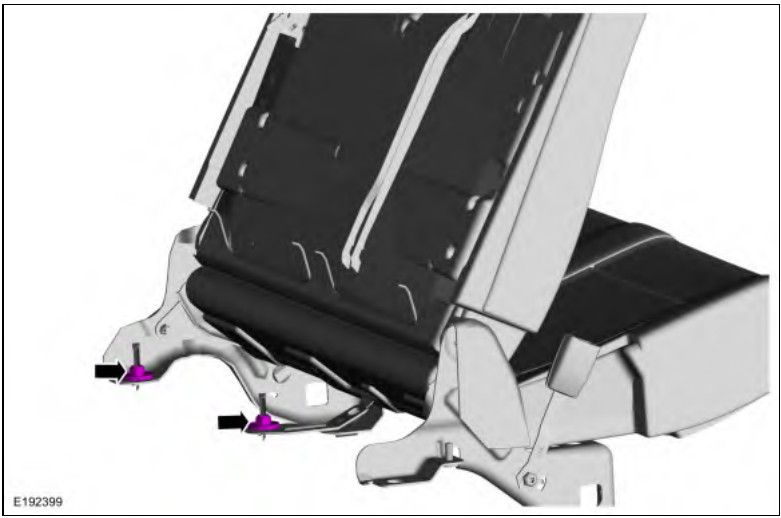

7. Remove the seat.
  1. Route the center seatbelt through the cushion opening.
  2. Remove the seat.



**Installation**

**NOTE:** During installation, make sure the seatbelt webbing is not twisted and the seatbelts and buckles are accessible to the occupants.

1. To install, reverse the removal procedure.

