


Rear Seat LH - Crew Cab

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Remove the RH seat.
Refer to: Rear Seat RH - Super Cab (501-10B Rear Seats, Removal and Installation).
2. Remove the bolt and position the seatbelt aside.
Torque: 30 lb.ft (40 Nm)

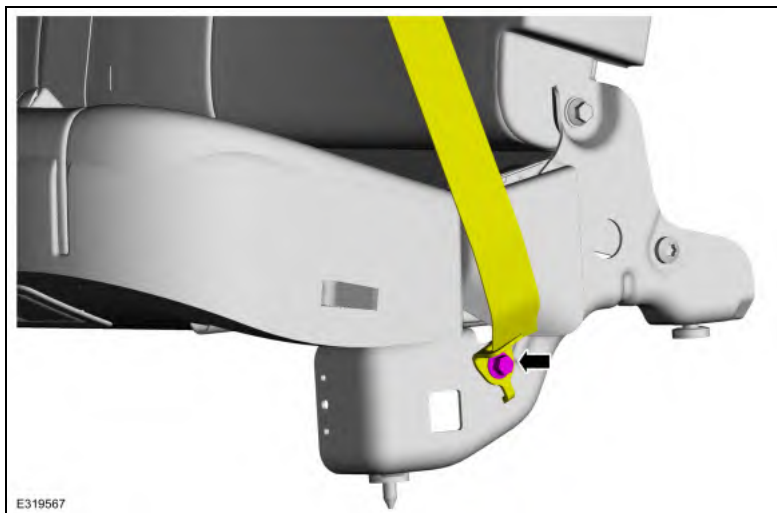


3. **NOTE:** The rear seat cushion must be unlocked to perform this step if vehicle has rear under seat storage.

Raise the rear seat cushion.

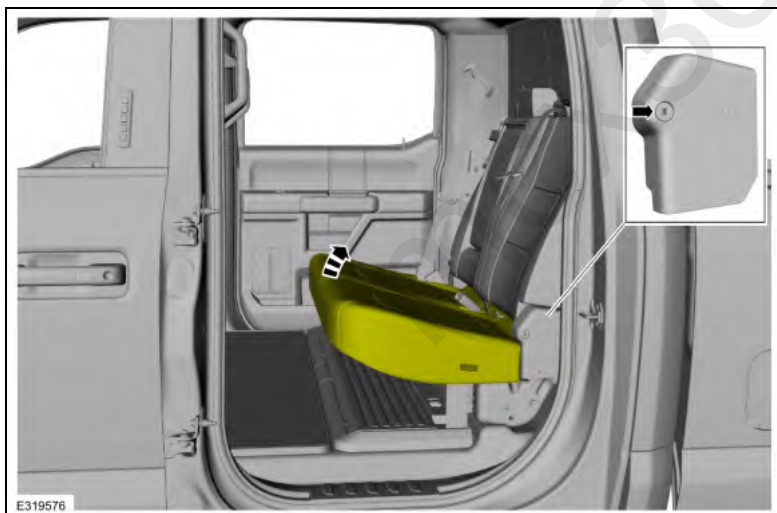

4. Remove the rear seat front bolts.
Torque: 35 lb.ft (47 Nm)

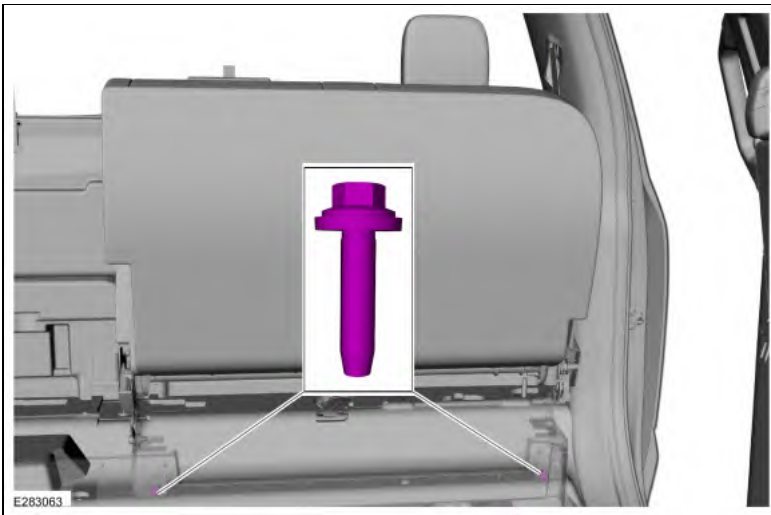


5. **NOTE:** The seat backrest latch is only accessible when the seat cushion is raised.

NOTE: During installation the striker should be in its lowest position for the latch to engage.

Fold the LH rear seat backrest down.


1. Raise the seat cushion.
2. Release the backrest latch.
3. Fold the backrest down.

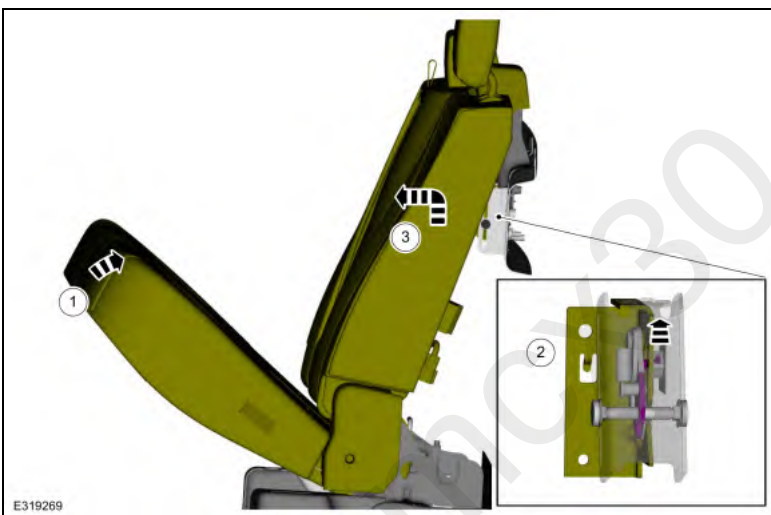


6. If equipped.

Remove the subwoofer.

1. Disconnect the electrical connector.
2. Remove the bolt.
Torque: 62 lb.in (7 Nm)
3. Remove the nuts.
Torque: 62 lb.in (7 Nm)

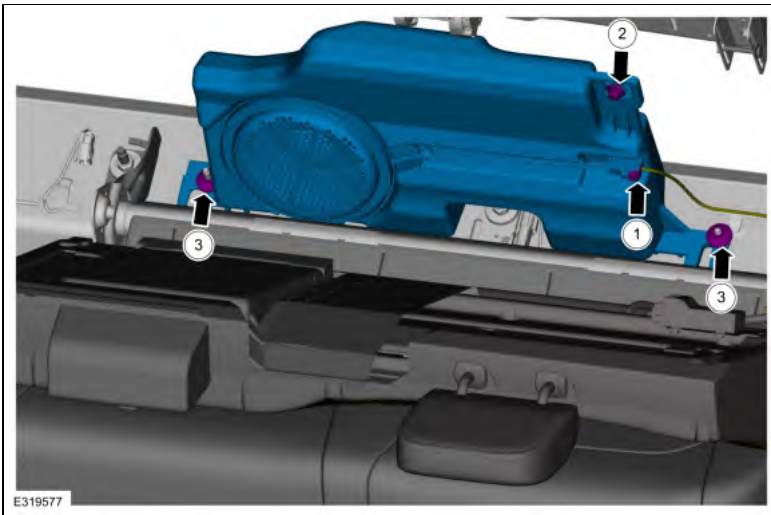

7. Disconnect the heated seat electrical connector (if equipped) and remove the seat rear bolts.
Torque: 59 lb.ft (80 Nm)

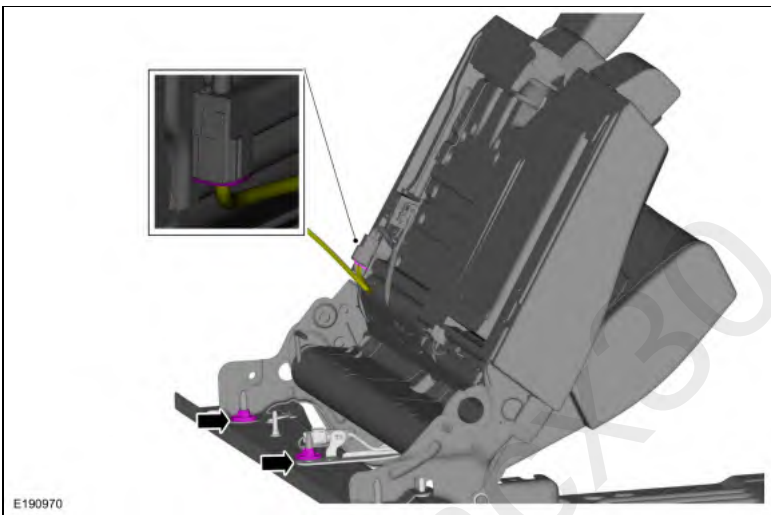

8. Remove the seat.
1. Route the center seatbelt through the cushion opening.
2. Remove the seat.



Installation

NOTE: During installation, make sure the seatbelt webbing is not twisted and the seatbelts and buckles are accessible to the occupants.

1. To install, reverse the removal procedure.