


Rear Seat RH - Crew Cab

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the bolt and position the seatbelt aside.
Torque: 30 lb.ft (40 Nm)

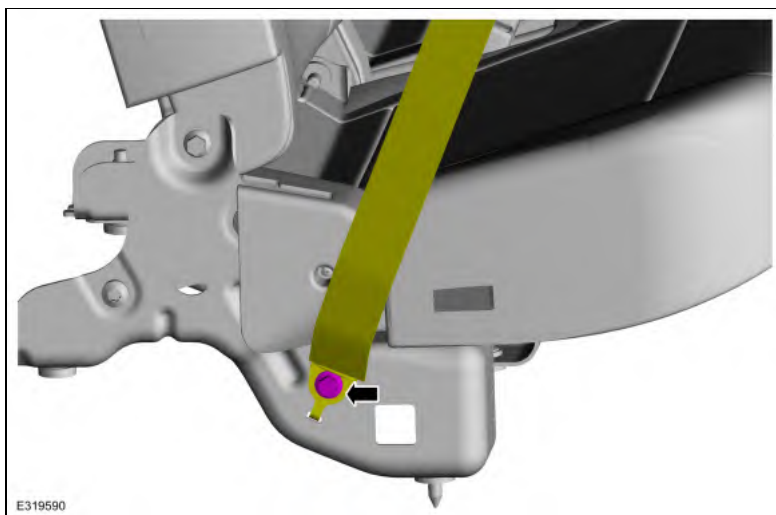


2. **NOTE:** The rear seat cushion must be unlocked to perform this step if the vehicle has rear under seat storage.


Raise the rear seat cushion.



3. Remove the rear seat front bolts.
Torque: 35 lb.ft (47 Nm)

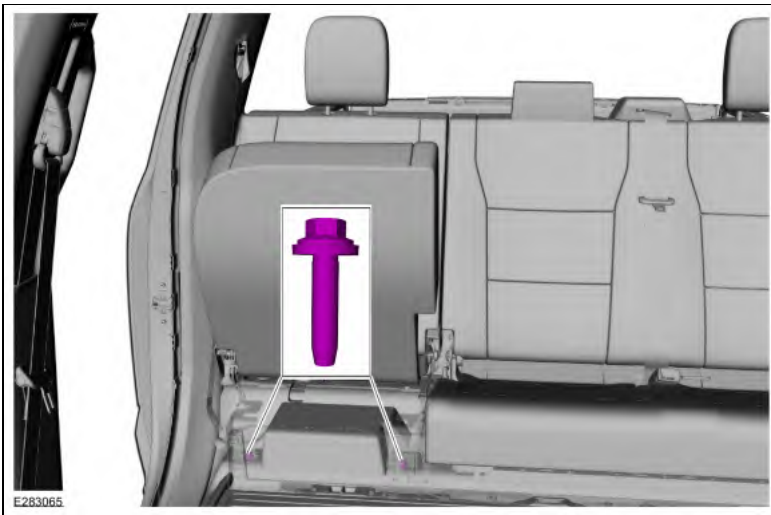

4. Fold the rear seat backrest down.
 1. Release the backrest latch.
 2. Fold the rear seat backrest down.

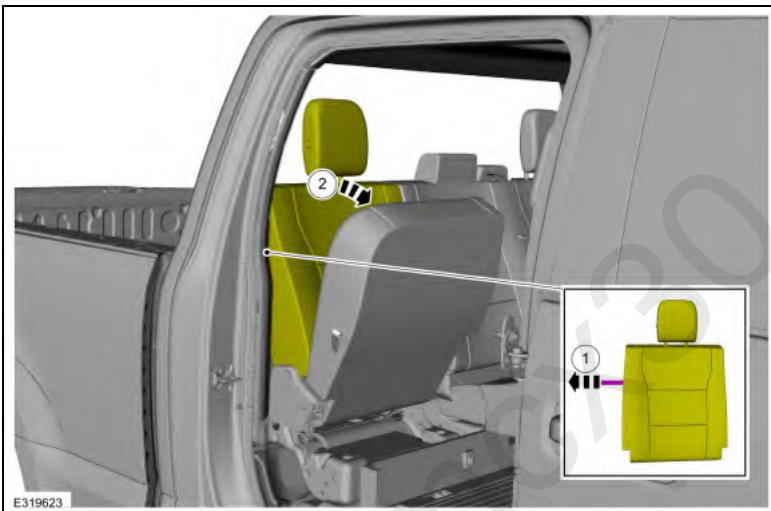


5. If equipped.
 - Disconnect the heated seat electrical connector and detach the wiring harness retainer.





6. Remove the seat rear nuts. Remove the seat.
Torque: 59 lb.ft (80 Nm)

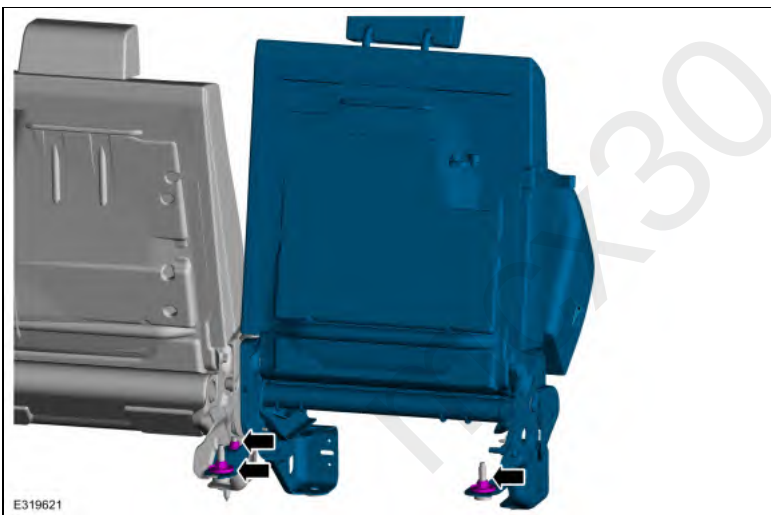



Installation

NOTE: During installation, make sure the seatbelt webbing is not twisted and the seatbelts and buckles are accessible to the occupants.

1. To install, reverse the removal procedure.

