


Rear Seat RH - Super Cab


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Remove the bolt and position the seatbelt aside.
Torque: 30 lb.ft (40 Nm)

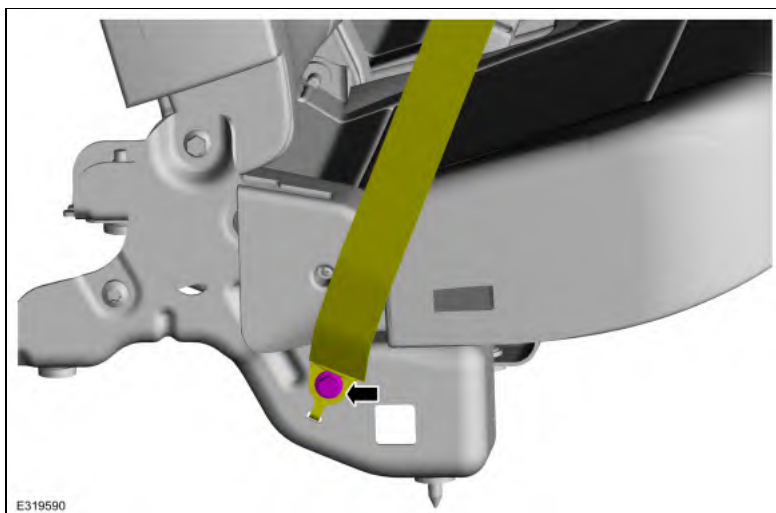


2.
 - Raise the seat cushion.
 - Remove the bolts.Torque: 19 lb.ft (26 Nm)

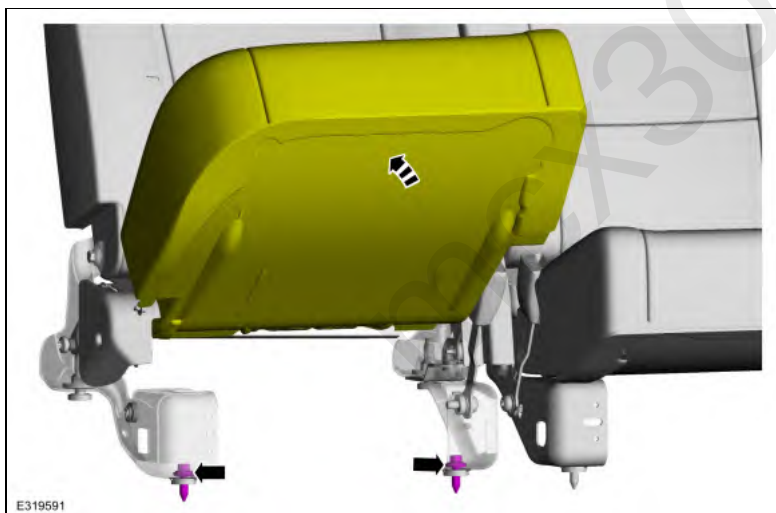

3. Pull the backrest release strap and fold the seat backrest down.

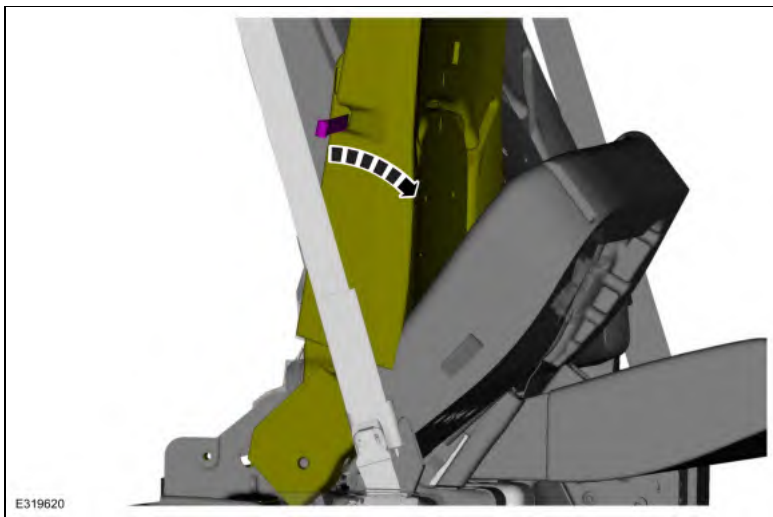

4. Remove the seat rear nuts. Remove the seat.
Torque: 59 lb.ft (80 Nm)

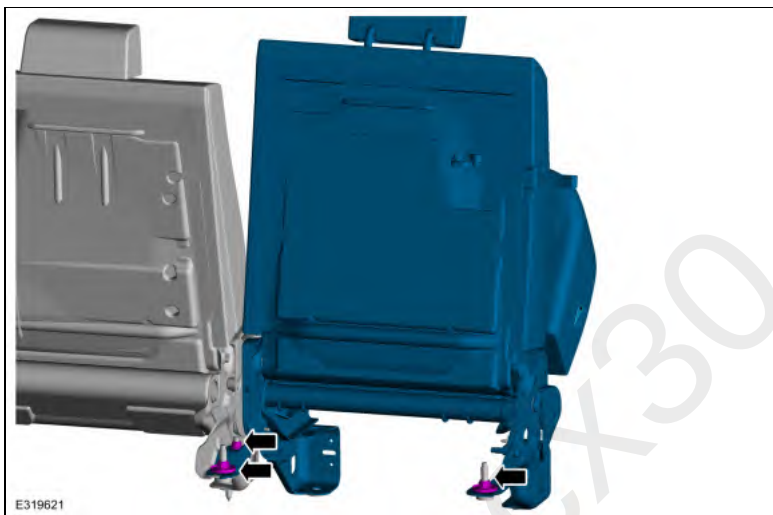

Installation

NOTE: During installation, make sure the seatbelt webbing is not twisted and the seatbelts and buckles are accessible to the occupants.

1. To install, reverse the removal procedure.