


Rear Seat Backrest Cover - Crew Cab

Removal

NOTE: LH shown, RH similar.


1. Remove the seat.
Refer to: Rear Seat RH - Super Cab (501-10B Rear Seats, Removal and Installation).
Refer to: Rear Seat LH - Crew Cab (501-10B Rear Seats, Removal and Installation).
2. Remove the backrest.
Refer to: Rear Seat Backrest - Super Cab (501-10B Rear Seats, Removal and Installation).
3. Remove the head restraint guide sleeves.
Refer to: Rear Head Restraint Guide Sleeve (501-10B Rear Seats, Removal and Installation).
4. If equipped.
Remove the armrest.
Refer to: Rear Seat Armrest - Crew Cab (501-10B Rear Seats, Removal and Installation).
5. Release the backrest cover lower J-clip.

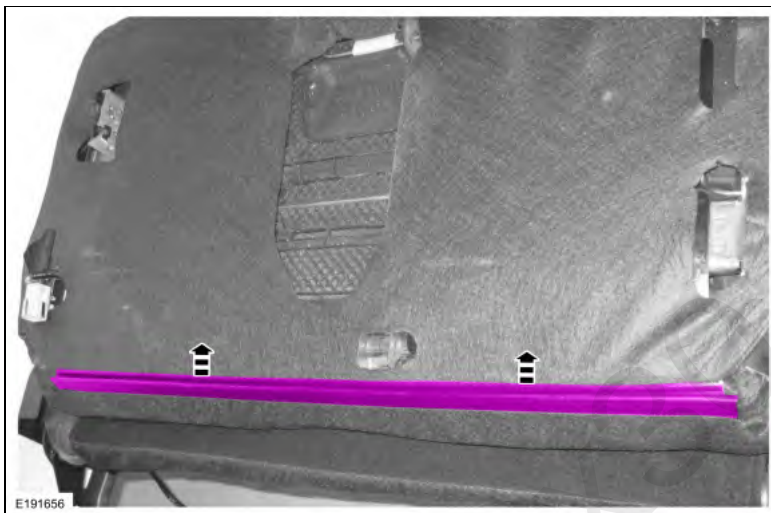

6. On both sides, unzip the backrest cover.




7. Release the backrest cover rear strap and position aside.

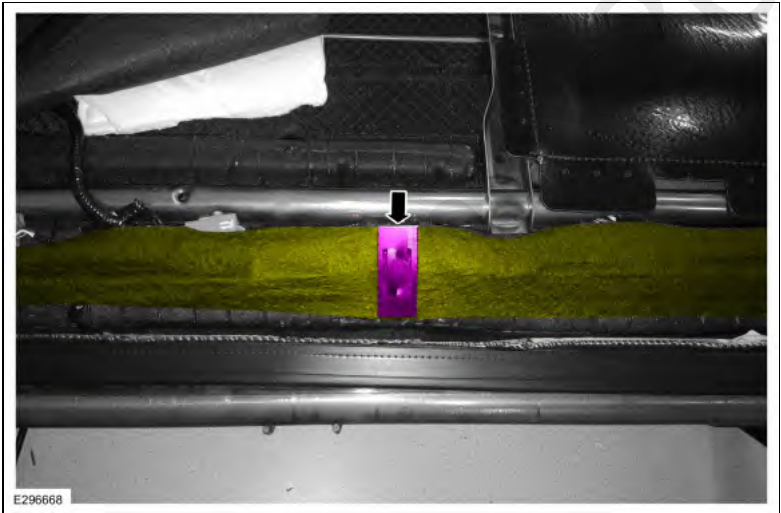

LH seat

8. Release the center backrest J-clip and armrest cavity retainers.

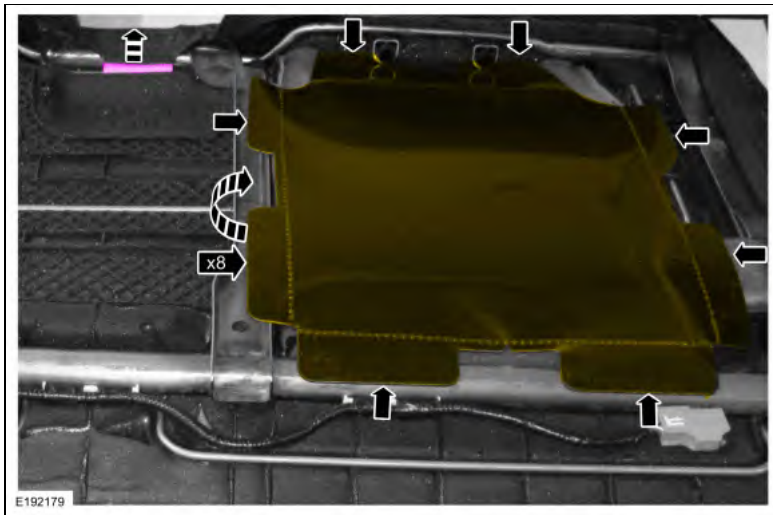

All seats

9. **NOTICE:** Use care when separating the seat backrest cover from the hook-and-loop strip or the hook-and-loop strip can be torn from the foam.

NOTICE: Use care when separating the backrest cover from the hook-and-loop strip or the hook can be torn from the foam.

 

Remove the backrest cover from the foam.

1. Release the hook-and-loop strip.
2. Release the hook-and-loop strip.



NOTE: This step is only necessary when installing a new component.

10. Remove the backrest foam.

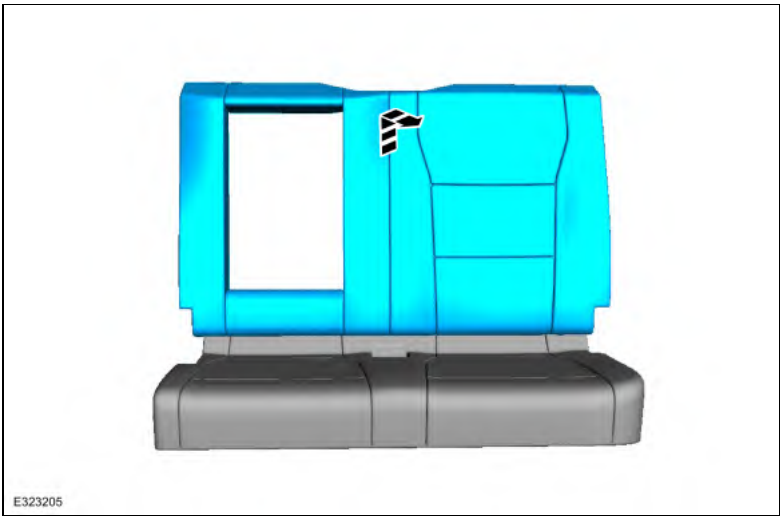

Installation

1. To install, reverse the removal procedure.

mcx30.com