


Rear Seat Backrest Cover - Super Cab


Removal

NOTE: LH shown, RH similar.


1. Remove the rear seat backrest.
Refer to: Rear Seat Backrest - Super Cab (501-10B Rear Seats, Removal and Installation).
2. Remove the head restraint guide sleeves.
Refer to: Rear Head Restraint Guide Sleeve (501-10B Rear Seats, Removal and Installation).
3. Release the backrest cover lower J-clip.

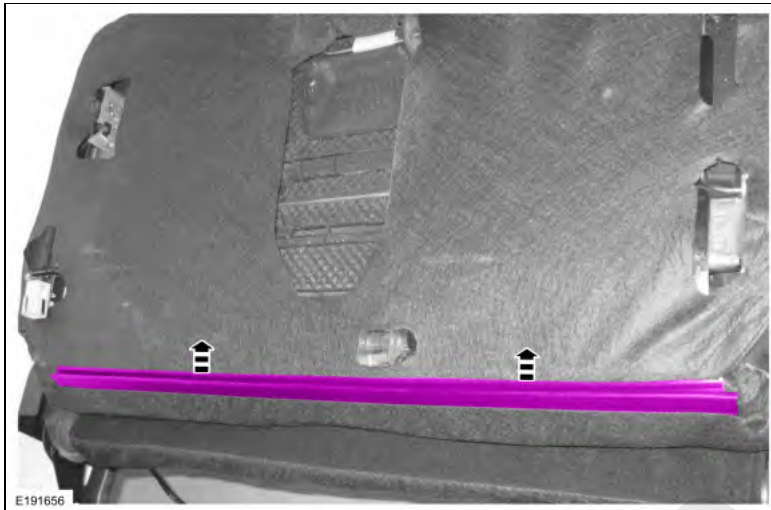

4. On both sides, unzip the backrest cover.

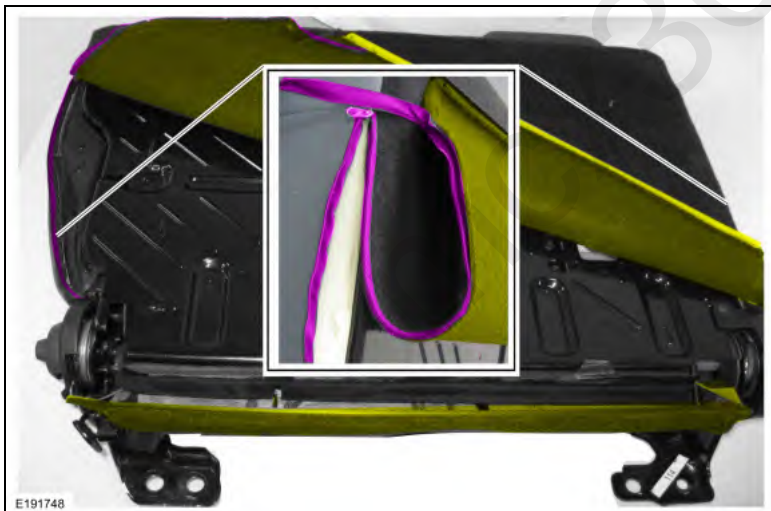

5. **NOTICE:** Use care when separating the backrest cover from the hook-and-arrow strip or the hook can be torn from the foam.
Release the hook-and-arrows and remove the backrest cover from the foam.

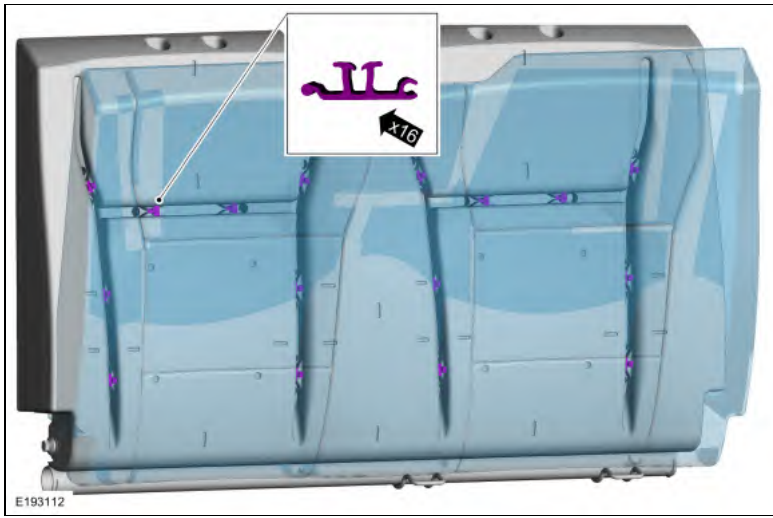

Installation

- 1. To install, reverse the removal procedure.