


Rear Seat Cushion Cover - Crew Cab

Removal

NOTE: LH (left-hand) shown, RH (right-hand) similar.


NOTE: Removal steps in this procedure may contain installation details.

1. Remove the rear seat.
Refer to: Rear Seat RH - Super Cab (501-10B Rear Seats, Removal and Installation).
Refer to: Rear Seat LH - Crew Cab (501-10B Rear Seats, Removal and Installation).
2. Release the lower cushion cover.
 1. Release the cushion cover lower J-clip.
 2. Unzip the cushion cover.

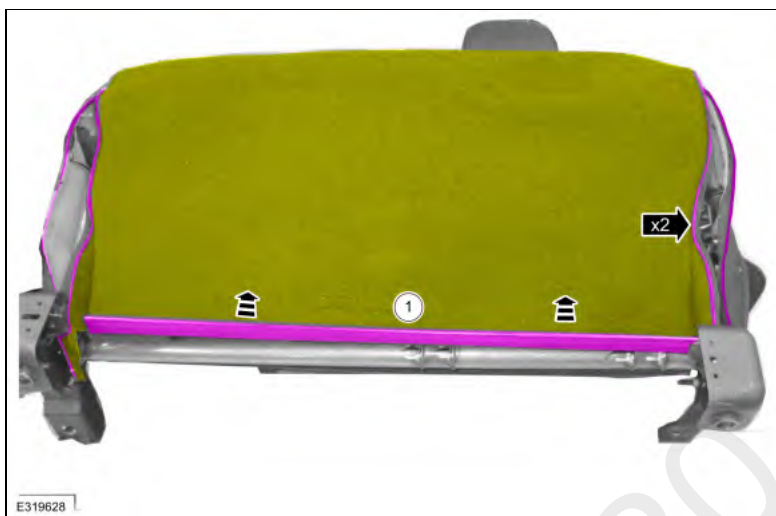


Vehicles with heated seats


3. Release the backrest cover lower J-clip.

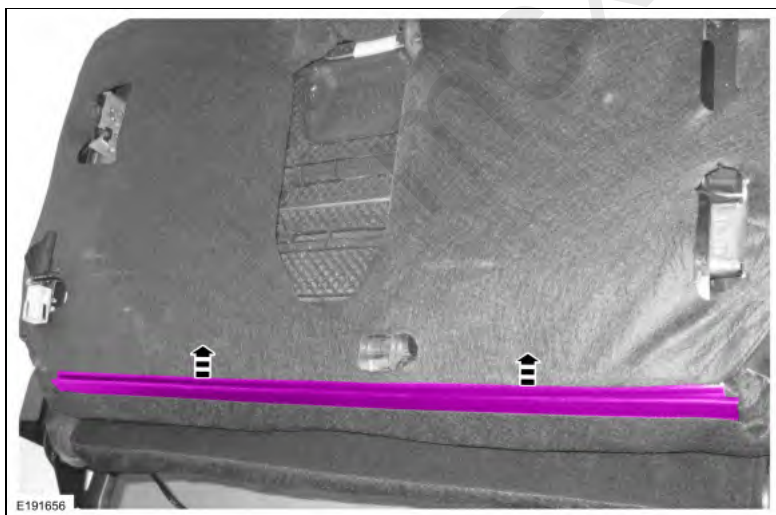

4. Release the backrest cover rear strap and position aside.

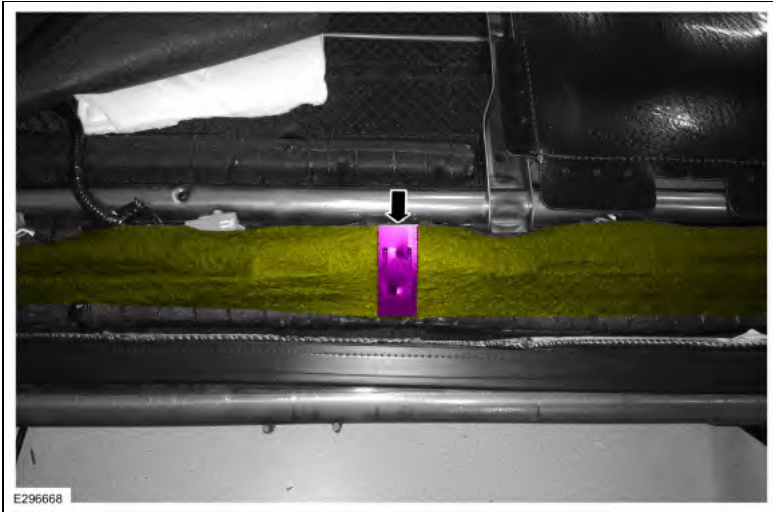

5. Disconnect the heated seat electrical connector.

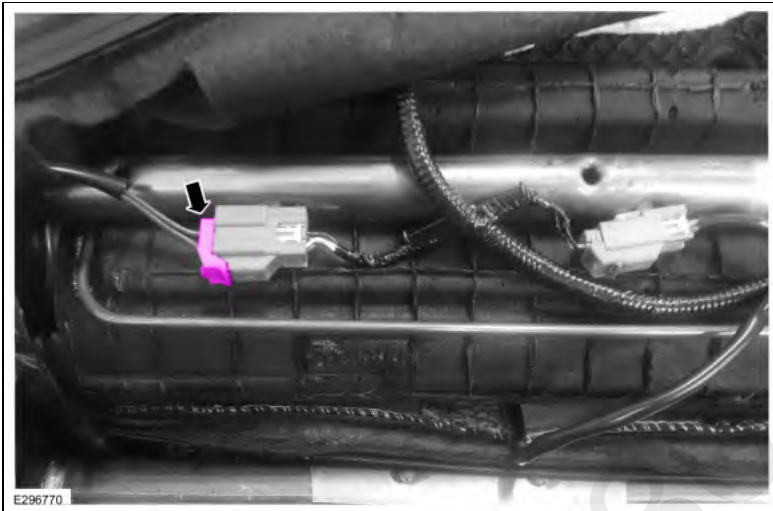


All vehicles


6. **NOTICE:** Use care when separating the seat cushion cover from the hook-and-arrow strip or the hook can be torn from the foam.

Remove the cushion cover from the foam.

1. Release the hook-and-arrows.
2. Release the hook-and-loop strips.

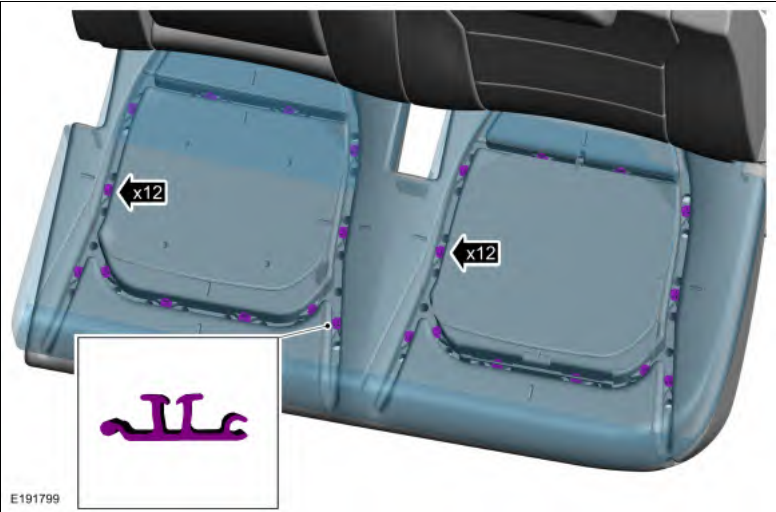

7. **NOTE:** This step is only necessary when installing a new component.
Remove the cushion foam.

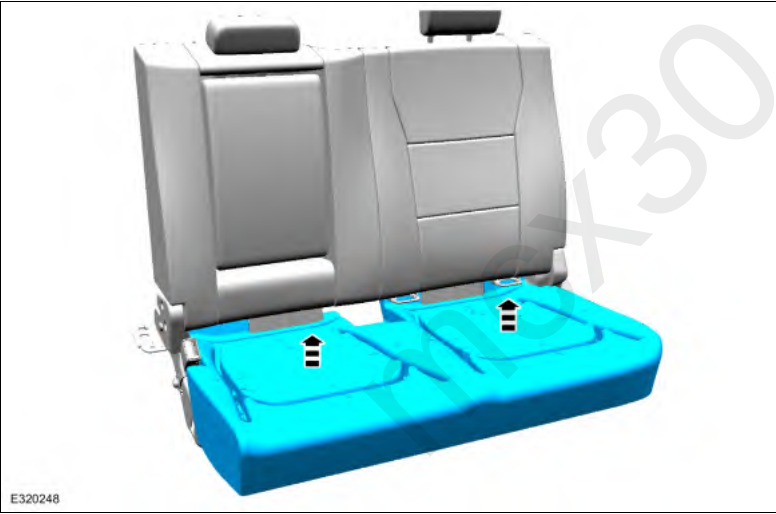

Installation

1. To install, reverse the removal procedure.

