

Rear Seat Cushion Cover - Super Cab

Removal


NOTE: LH (left-hand) shown, RH (right-hand) similar.

1. Remove the rear seat.
Refer to: Rear Seat RH - Super Cab (501-10B Rear Seats, Removal and Installation).
Refer to: Rear Seat LH - Crew Cab (501-10B Rear Seats, Removal and Installation).
2. Release the seat cushion cover lower J-clip.



3. **NOTICE:** Use care when separating the seat cushion cover from the hook-and-loop strip or the hook-and-loop strip can be torn from the foam.


Unzip and open the cushion cover. Release the hook-and-loop strips.

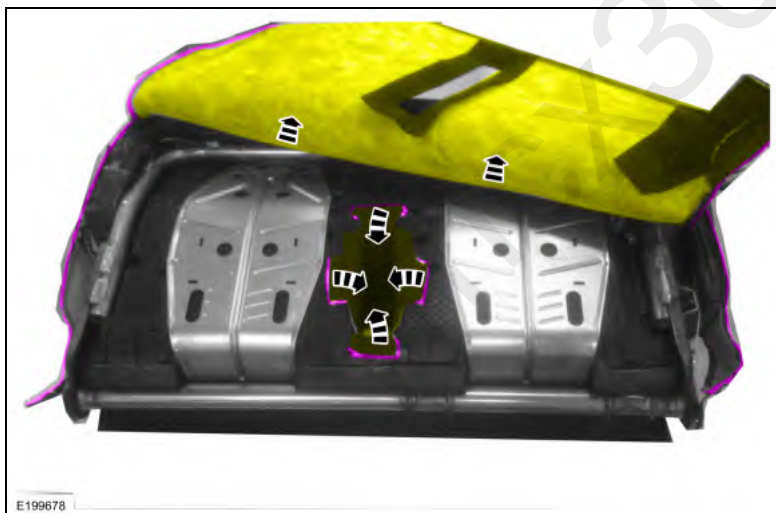

4. **NOTICE:** Use care when separating the seat cushion cover from the hook-and-loop strip or the hook can be torn from the foam.


NOTICE: Use care when separating the seat cushion cover from the hook-and-loop strips or the hook-and-loop strips may be torn from the foam.

Release the hook-and arrows from the foam and remove the cushion cover.

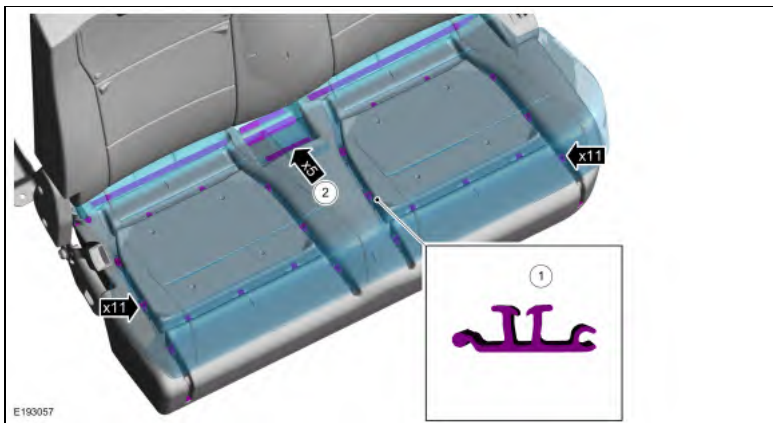

5. **NOTE:** This step is only necessary when installing a new component.

Remove the cushion foam.

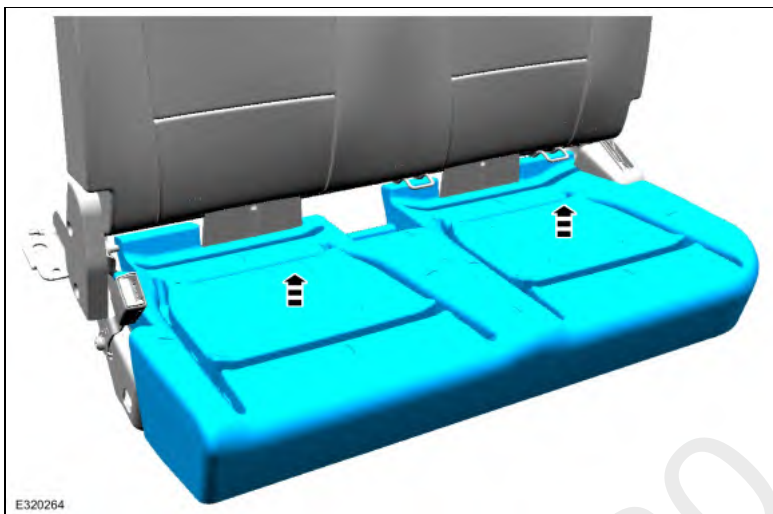

Installation

1. To install, reverse the removal procedure.