

Power Door Window Initialization

Initialization

NOTE:

1. **NOTE:** Initialization is required to learn both the full UP and full DOWN positions and the profile of the glass as it travels through the glass channel. Once initialized, obstacle detection is enabled.

NOTE: A new door module or de-initialized window does not operate in one-touch up mode until it has been initialized.

Turn the ignition ON.

2. **NOTE:** The following step de-initializes the window (door module). **If a new door module has been installed, proceed to Step 3.**

Operate the window control switch in one-touch mode and remove power from the window by momentarily disconnecting the vehicle battery ground cable(s) **while the window is moving**.

Refer to: Battery Disconnect and Connect (414-01 Battery, Mounting and Cables, General Procedures).

3. Place the window in the full down position.

4. **WARNING:** Keep objects and body parts clear of the glass panel when carrying out the initialization procedure. During the initialization procedure, the glass panel closes with high force and cannot detect objects in its path. Failure to follow this instruction may result in serious personal injury.

Activate and hold the window control switch in the UP position at the second detent until the window glass stalls for at least one second into the glass top run and release the switch.

5. Activate and hold the window control switch in the DOWN position at the second detent until the window glass stalls for at least one second at the bottom of its travel and release the switch.
 6. Test for correct window operation by carrying out the one-touch down and one-touch up features.
-