


Front Door Glass Top Run

Removal

NOTE: LH side shown, RH side similar.

1. Lower the front door glass to full down position.

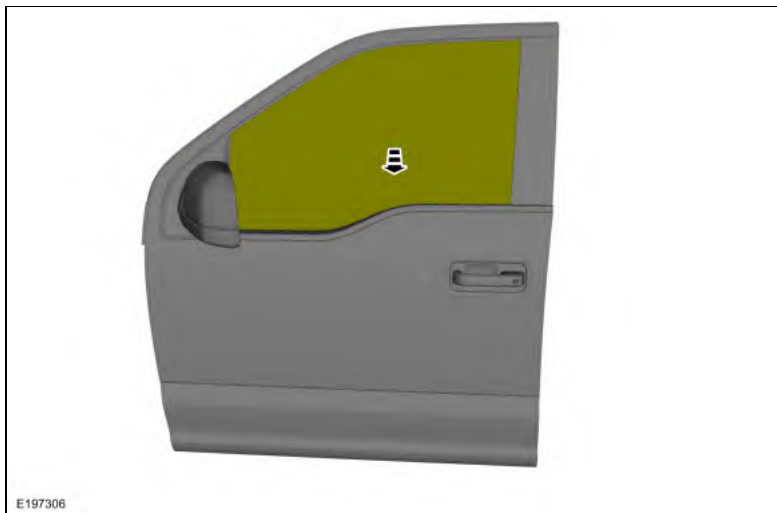

2. Remove the front door trim panel.
Refer to: Front Door Trim Panel (501-05 Interior Trim and Ornamentation, Removal and Installation).
3. Remove the inner belt moulding.



4. Remove the front door glass top run.



Installation

All vehicles

- 1. To install, reverse the removal procedure.

Vehicles with power windows

- 2. Carry out the power door window initialization.
Refer to: Power Door Window Initialization (501-11 Glass, Frames and Mechanisms, General Procedures).