

Rear Door Window Regulator and Motor - Crew Cab, Vehicles With: Rear Power Windows

Removal

NOTE: LH side shown, RH side similar.

NOTE: Removal steps in this procedure may contain installation details.


1. Remove the rear door window control switch
Refer to: Rear Door Window Control Switch - Crew Cab, Vehicles With: Rear Power Windows (501-11 Glass, Frames and Mechanisms, Removal and Installation).
2. Remove the watershield.




3. **NOTE:** For non-functional rear door window regulators and motors with the window in the 40 mm open to full closed position, cut the rear door window regulator cables to allow window movement.

Lower the rear door window glass.



1. Install the rear door window control switch.
2. Lower the rear door window glass.

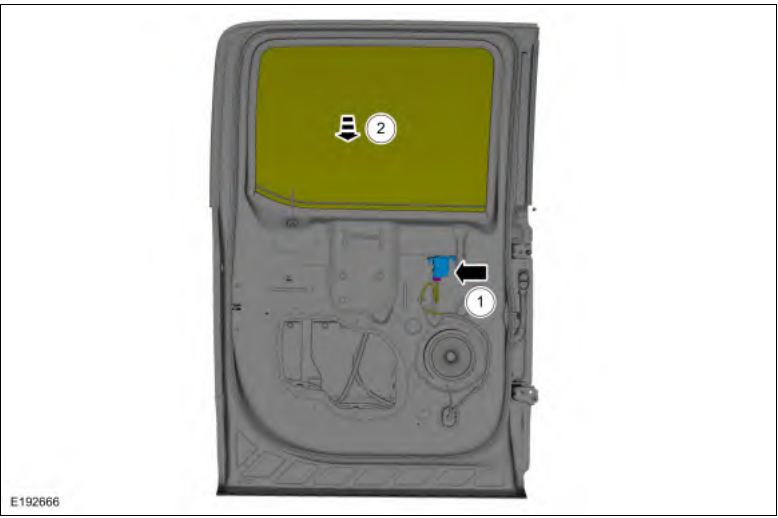


4. Release the clips from rear door window glass.

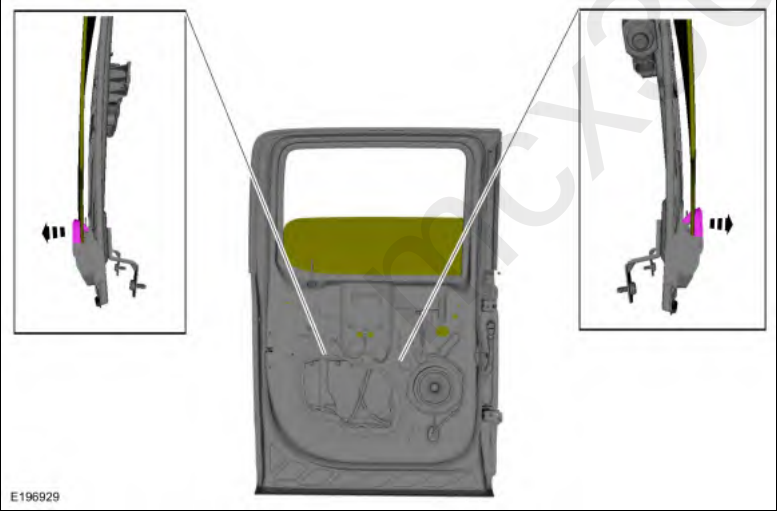

 5. Remove the rear door speaker.
Torque: 22 lb.in (2.5 Nm)

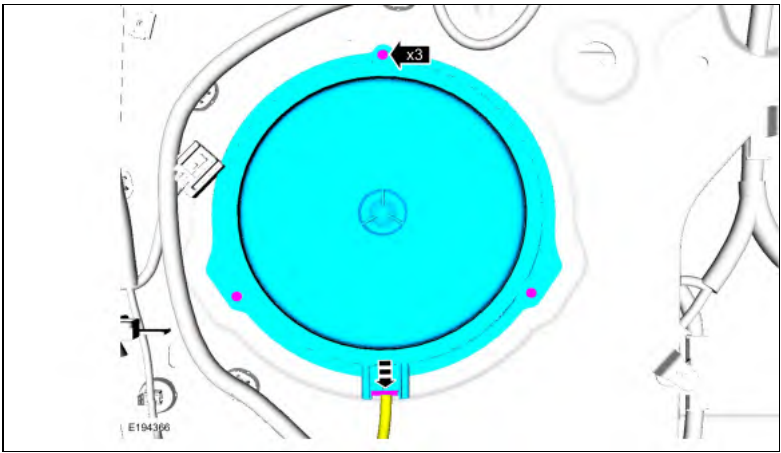


6. Raise the rear door window glass and tape in place.
1. Raise the rear door window glass.
 2. Tape the rear door window glass in place.

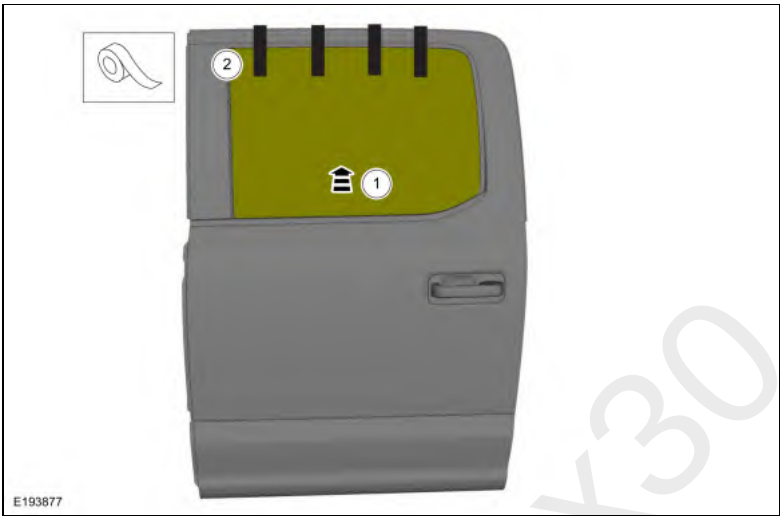

7. Remove the rear door window regulator bolts and nuts.
Torque: 93 lb.in (10.5 Nm)



8. Disconnect the rear door window regulator motor electrical connector.

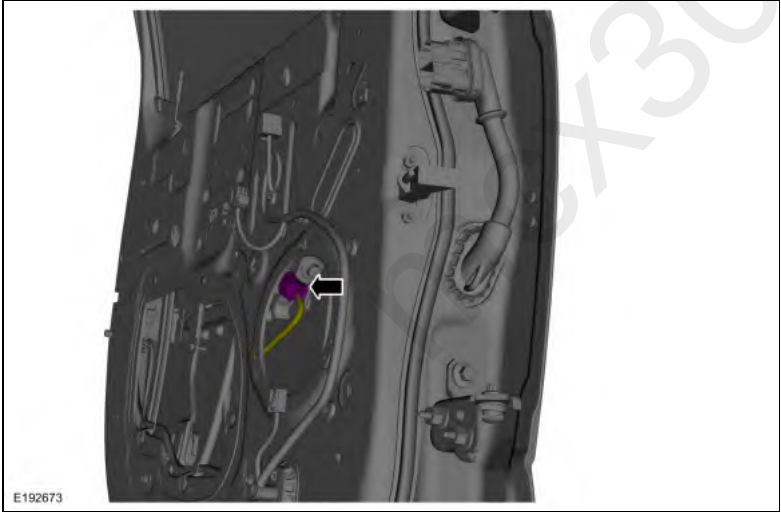

9. Remove the rear door window regulator and motor.



Installation

1. To install, reverse the removal procedure.

mcx30.com