

Auxiliary Power Point

Special Tool(s) / General Equipment




Removal


1. Open the power point cover.




2. Position the power point extractor so that it engages in the adjacent slots in the power point socket.
Use Special Service Tool: 501-194 Remover, Power Point.

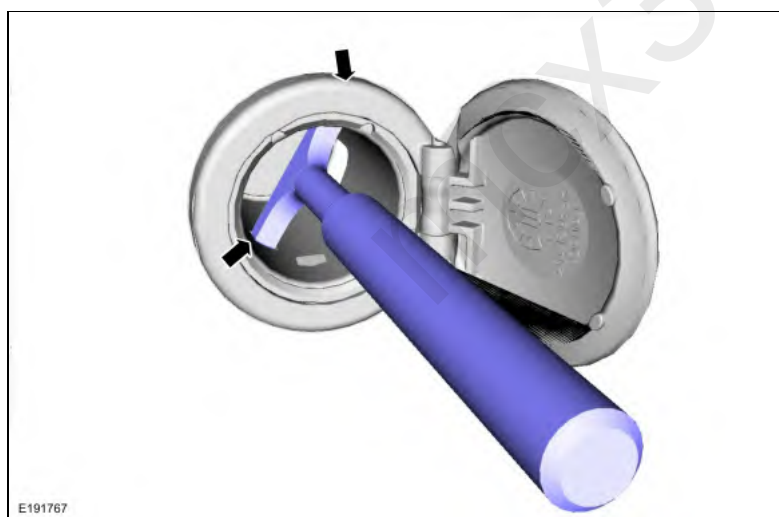


3.
 1. Install the receiver cup.
 2. Install and tighten the wing nut.
Use Special Service Tool: 501-194 Remover, Power Point.

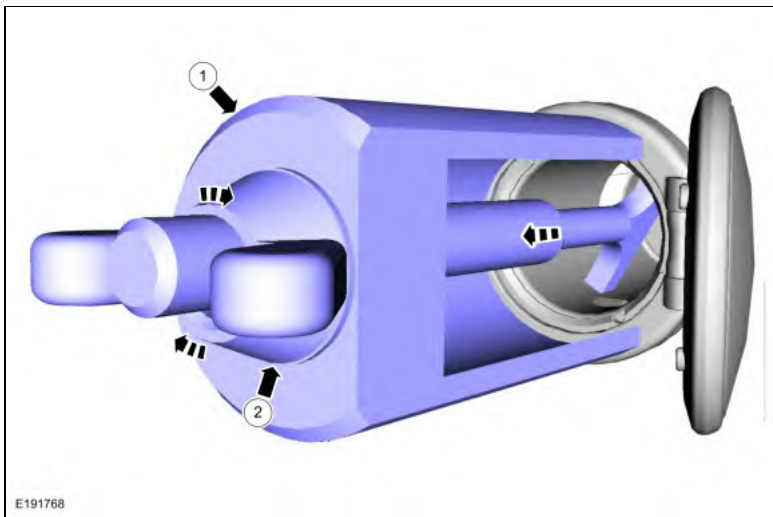

4. Tighten the wing nut to pull the power point socket out of the retainer.
Use Special Service Tool: 501-194 Remover, Power Point.

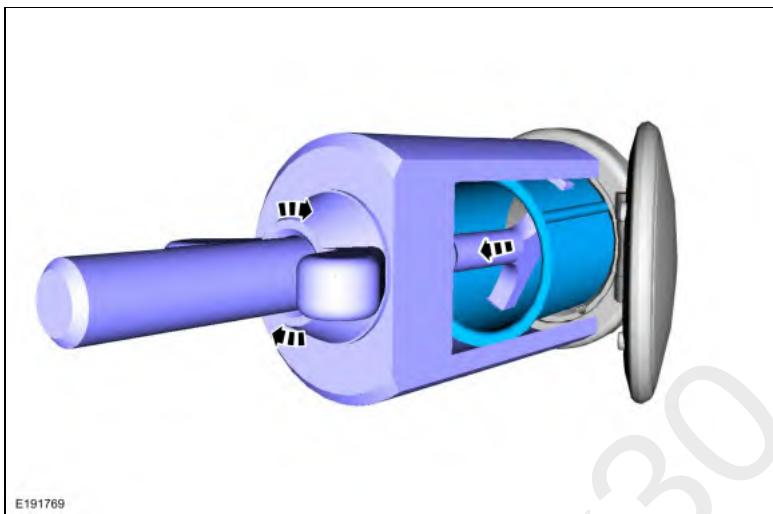

5. Disconnect the electrical connector.

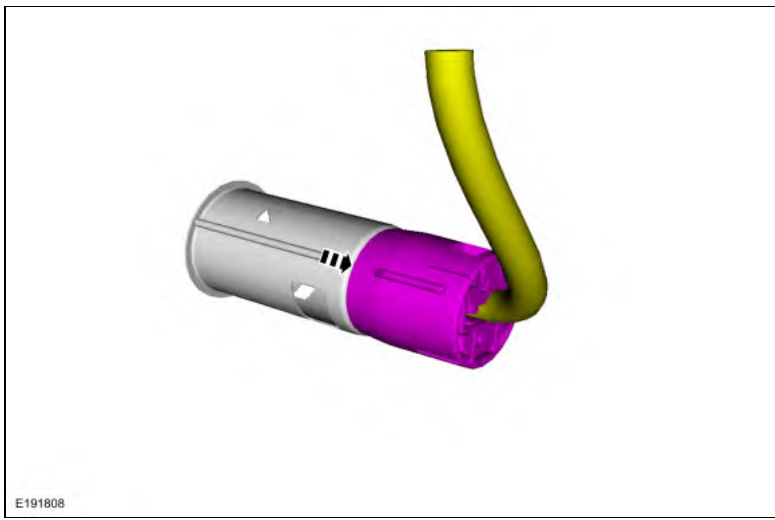

Installation

1. Connect the electrical connector and push the new power point socket into the retainer.
-