

Floor Console


Special Tool(s) / General Equipment

Interior Trim Remover


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Release the clips and remove the RH lower floor console trim panel.
Use the General Equipment: Interior Trim Remover

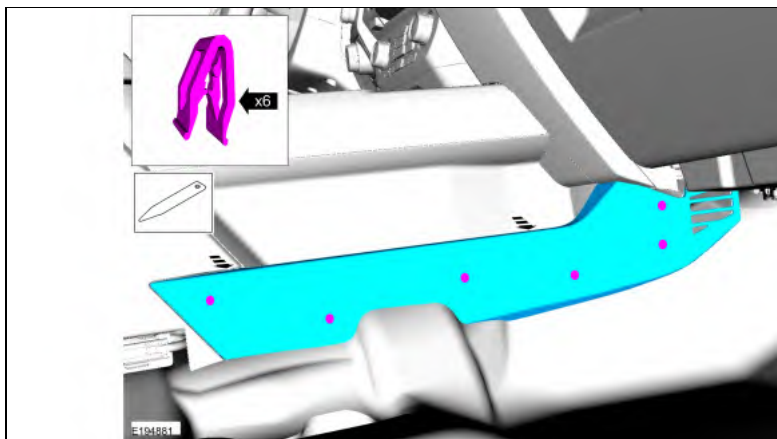

2. Remove the screw, release the clips and remove the LH lower floor console trim panel.
Use the General Equipment: Interior Trim Remover
Torque: 22 lb.in (2.5 Nm)

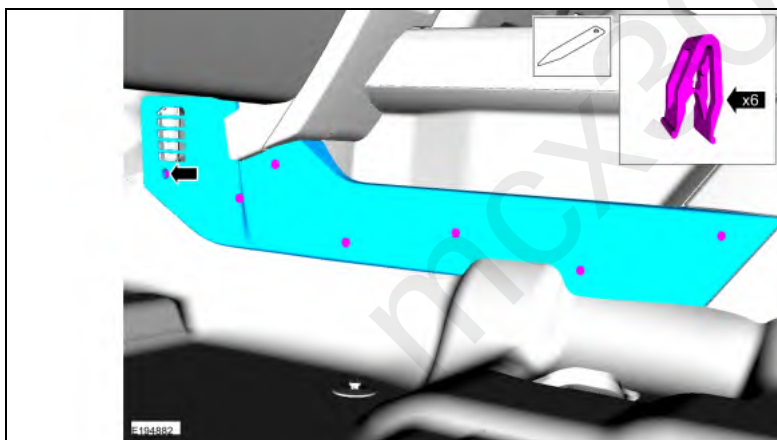


3. Remove the RH finish panel.
Use the General Equipment: Interior Trim Remover

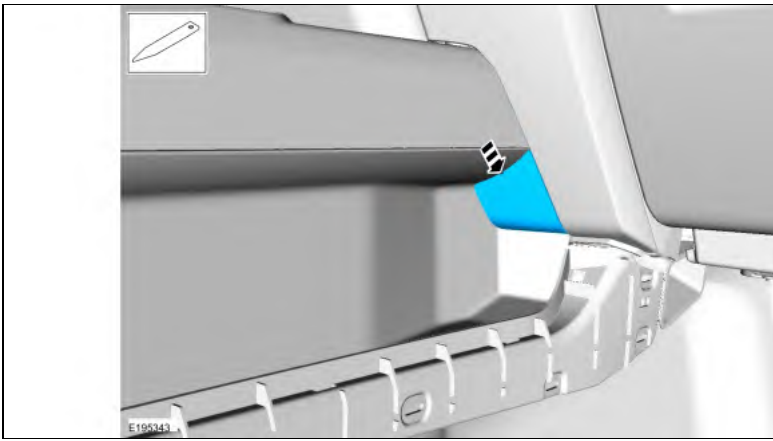

4. Remove the LH finish panel.
Use the General Equipment: Interior Trim Remover




- 5.
1. Release the 6 clips working from the rear of the trim panel forward.
 2. Release the 2 clips that attach to the instrument panel by pulling rearward and remove the trim panel.

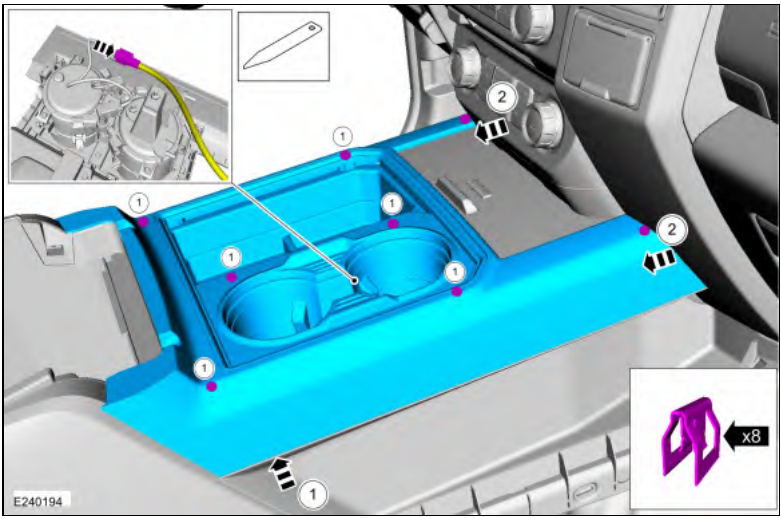


6. **NOTE:** Position the front seats forward to access the rear bolts, and position the front seats rearward to access the center bolts.

- Remove the bolts and position the floor console rearward.
- Disconnect the electrical connector.
- Torque: 48 lb.in (5.4 Nm)

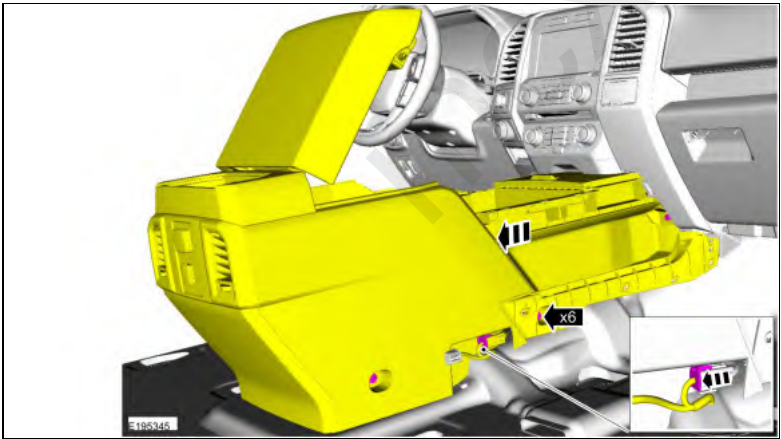

7. Disconnect the electrical connectors and remove the floor console.

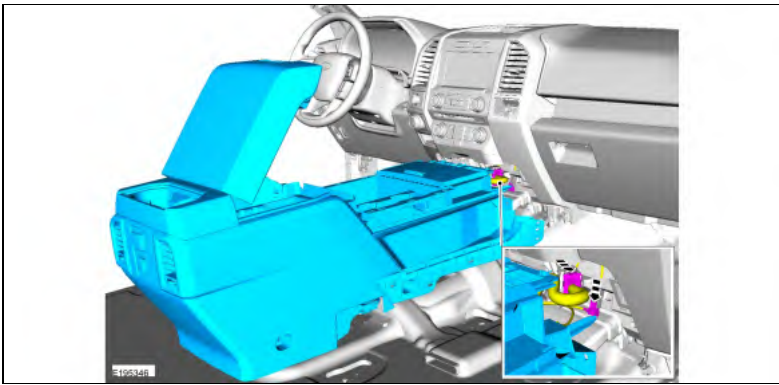

Installation

- 1. To install, reverse the removal procedure.