

Hood Latch


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. **NOTE:** If reinstalling the original hood latch, mark around the bolts to aid in alignment during installation.

Remove the hood latch.

1. Mark the hood latch.
2. Remove the bolts from the hood latch.
3. If equipped.
Disconnect the hood ajar switch.
4. Disconnect the hood latch release cable end and detach the cable from the mounting bracket.

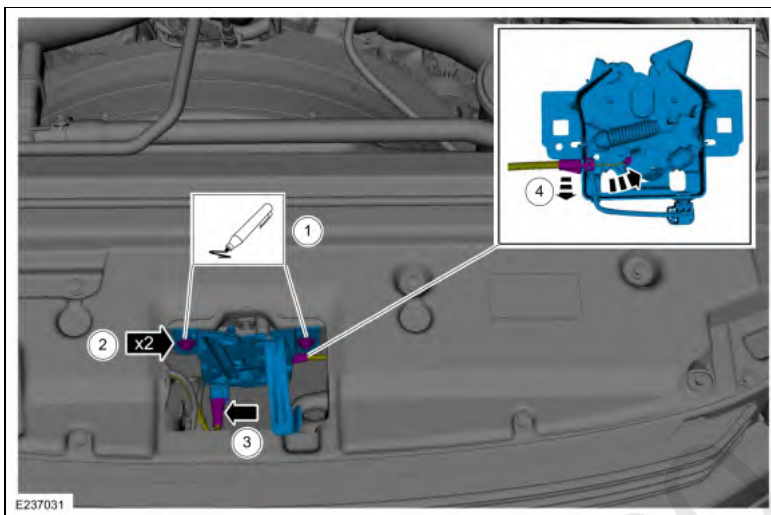


Installation

1. To install, reverse the removal procedure.
2. **NOTE:** If reinstalling the original hood latch, use the marks made during removal to aid in alignment.

Install the bolts and align the hood latch.

1. Align the hood latch.
2. Tighten the hood latch bolts.
Torque: 26 lb.ft (35 Nm)

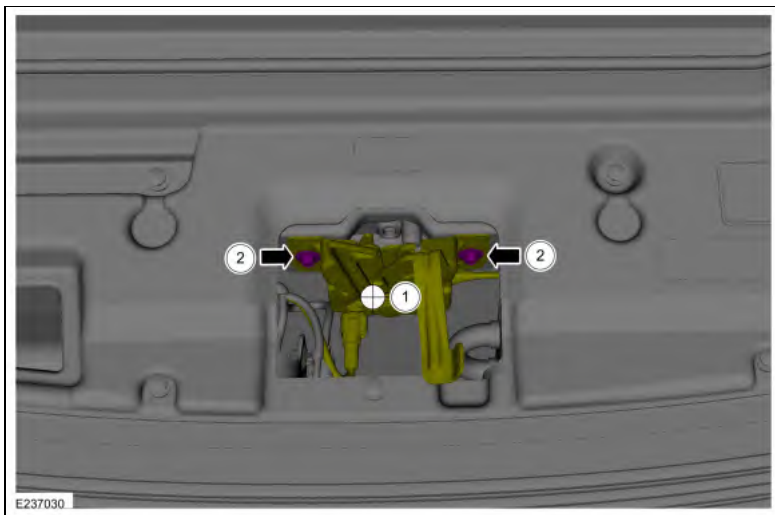

mcx30.com