

Hood Latch Release Cable

Removal

6.7L Power Stroke Diesel


1. If equipped.
Remove LH fender splash shield.
Refer to: Fender Splash Shield (501-02 Front End Body Panels, Removal and Installation).

All vehicles


2. Remove the hood latch.
Refer to: Hood Latch (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).
3. **NOTE:** Diesel engine shown, Gas engines similar.

Remove the radiator sight shield.

1. Remove the pin type retainer and position the air cleaner inlet duct aside .
2. Remove the pin type retainers and remove the radiator sight shield.

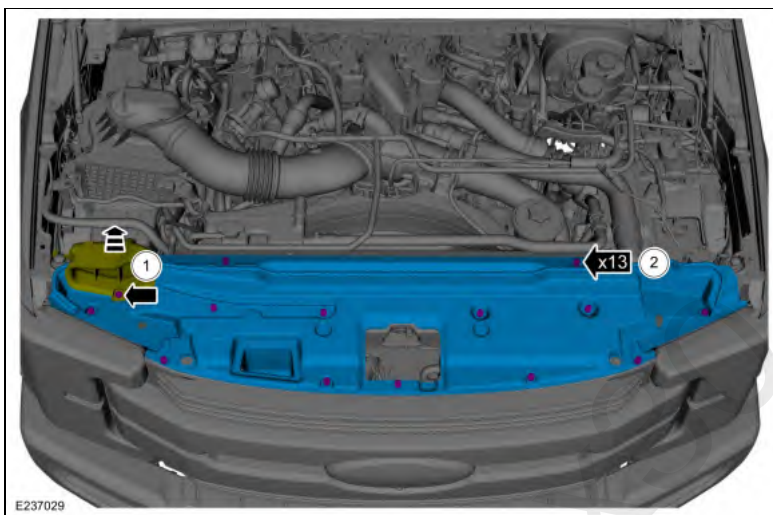


4. Remove the hood latch release handle.
Refer to: Hood Latch Release Handle (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).
5. Route the hood latch release cable through the cowl.
 1. Release the cable routing clip.
 2. Route the hood latch release cable through the cowl.

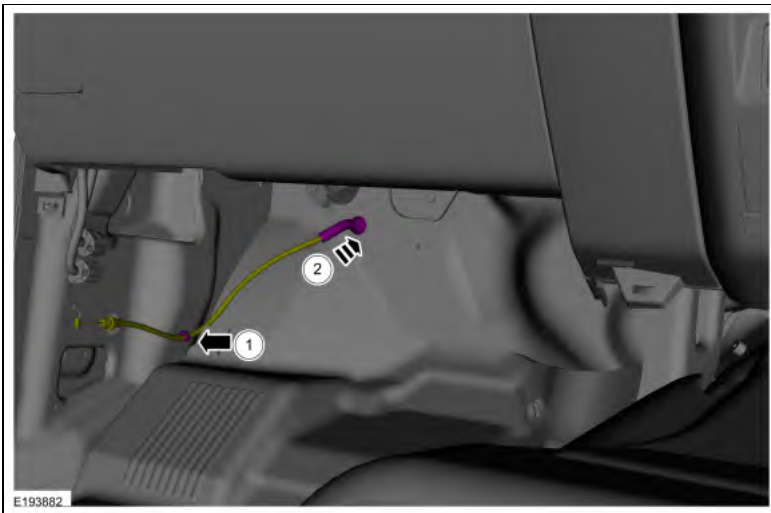

6. **NOTE:** Diesel engine shown, Gas engines similar.

Route the hood latch release cable through the cowl.


1. Route the hood latch release cable through the cowl.
2. Release the cable routing clip.

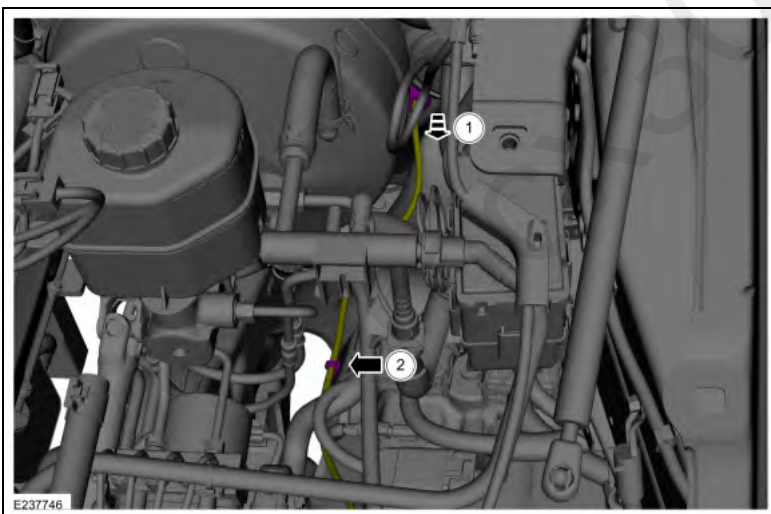

7. **NOTE:** Radiator support shown transparent for clarity.

Route the hood latch release cable through the radiator support.


1. Release the cable routing clip.
2. Route the hood latch release cable through the radiator support.

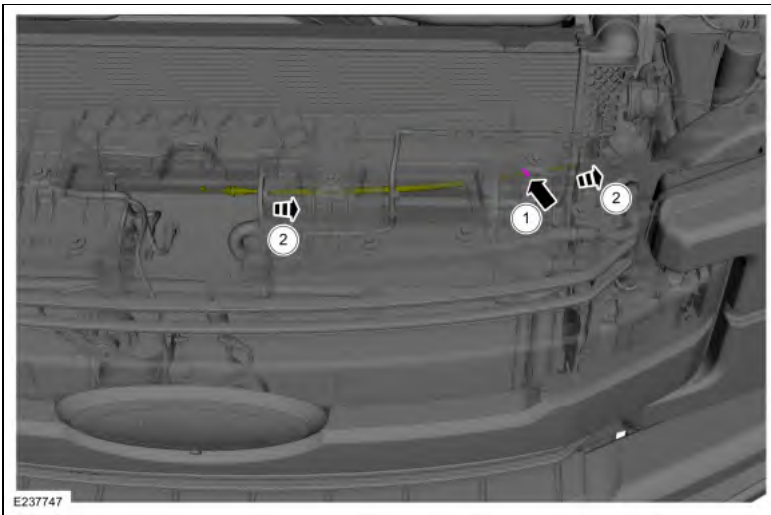

8. **NOTE:** Diesel engine shown, Gas engines similar.

Remove the hood latch release cable.

1. Release the cable routing clips.
2. Remove the hood latch release cable.

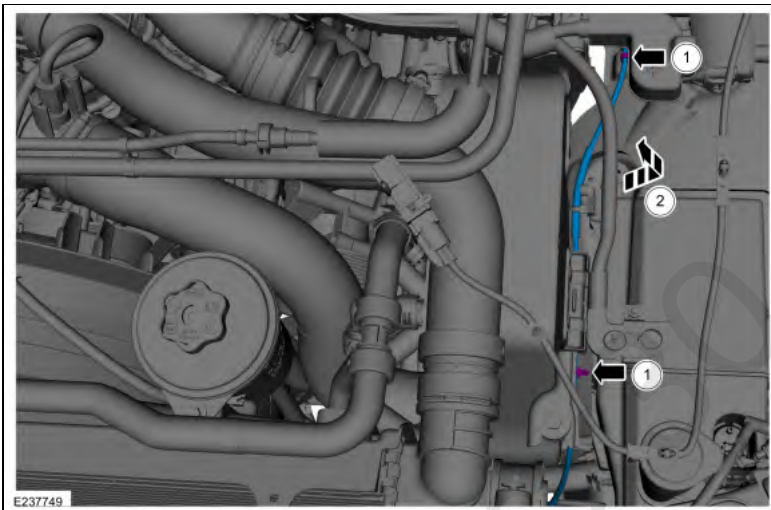

Installation

1. To install, reverse the removal procedure.