

Hood Latch Release Handle

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. **NOTE:** Regular cab shown, all others similar.


Release the clips and remove the scuffplate trim panel.



2. Remove the cowl side trim panel.



3. Remove the hood latch release handle.
 1. Remove the bolt from the hood latch release handle.
Torque: 80 lb.in (9 Nm)
 2. Remove the hood latch release cable from the hood latch release handle retaining bracket.
 3. Remove the hood latch release cable end from the hood latch release handle.

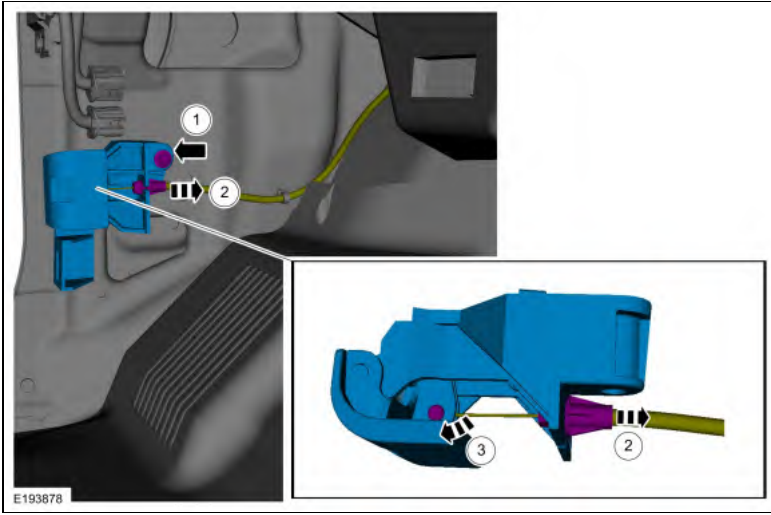

Installation

1. To install, reverse the removal procedure.

mcx30.com