


Tailgate Latch Actuator

Removal

1. Remove the tailgate latch control assembly.
Refer to: Tailgate Latch Control Assembly (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).

2. **NOTE:** This step is only necessary when installing a new component.

Remove the tailgate latch actuator.

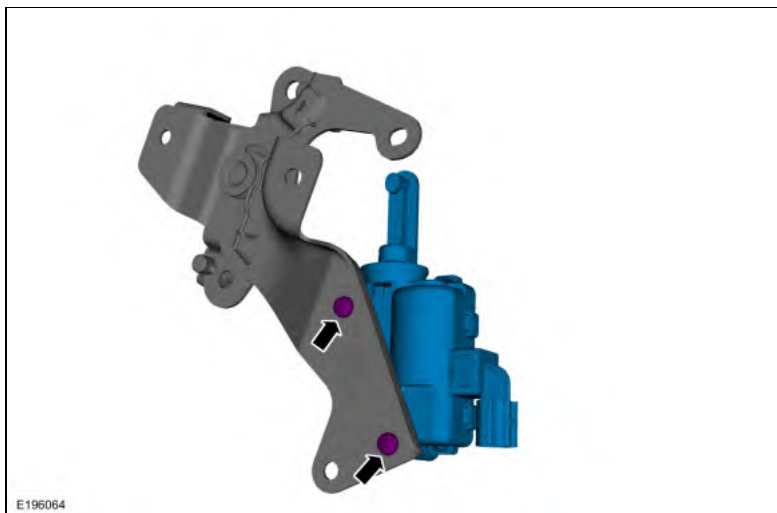

Installation

1. To install, reverse the removal procedure.