


Tailgate Release Switch

Removal

1. Remove the tailgate release handle.
Refer to: Tailgate Release Handle (501-14 Handles, Locks, Latches and Entry Systems, Removal and Installation).
2. **NOTE:** This step is only necessary when installing a new component.

Remove the tailgate release switch.

1. Disconnect the tailgate release switch electrical connector.
2. Remove the tailgate release switch from the tailgate release handle.

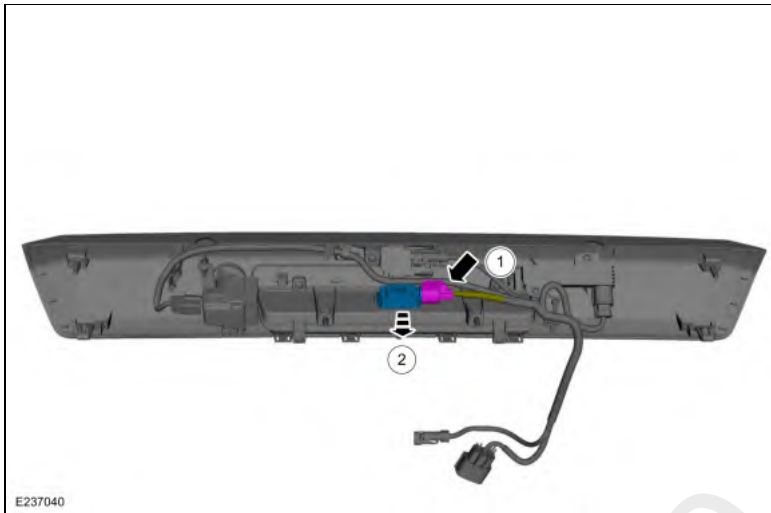

Installation

1. To install, reverse the removal procedure.
2. If equipped with 360 degree view camera, align the rear camera.
Refer to: 360 Degree View Camera Alignment (413-13B Parking Aid - Vehicles With: Parking Aid Camera, General Procedures).