

Windshield Washer Fluid Level Sensor

Special Tool(s) / General Equipment

Fluid Container


Materials

Name	Specification
Motorcraft® Premium Windshield Wash Concentrate with Bitterant ZC-32-B2	WSS-M14P19-A

Removal

1. Remove the windshield washer reservoir.
Refer to: Windshield Washer Reservoir (501-16 Wipers and Washers, Removal and Installation).
2. **NOTE:** *Be prepared to collect escaping fluid.*

Remove the windshield washer fluid level sensor.
Use the General Equipment: Fluid Container

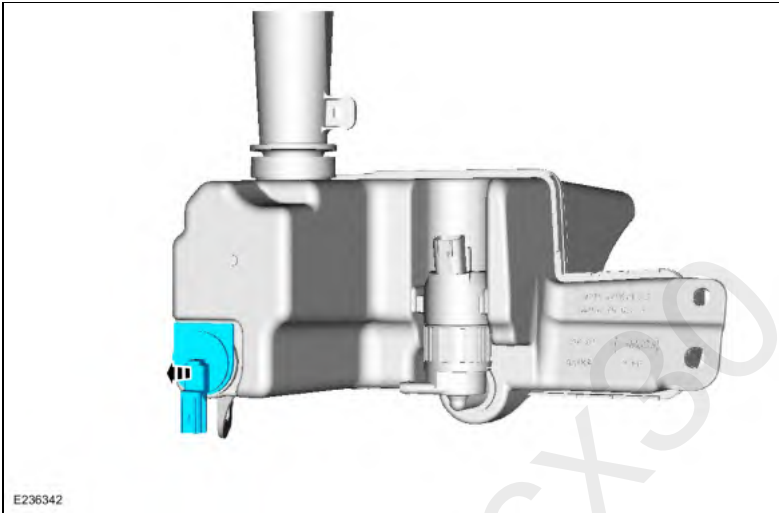

Installation

1. **NOTICE:** Do not operate the washer pump prior to filling the windshield washer reservoir. Failure to follow this instruction may result in premature pump failure.

To install, reverse the removal procedure.
Material: Motorcraft® Premium Windshield Wash Concentrate with Bitterant / ZC-32-B2 (WSS-M14P19-A)