

Windshield Washer Pump

Special Tool(s) / General Equipment

Fluid Container


Materials

Name	Specification
Motorcraft® Premium Windshield Wash Concentrate with Bitterant ZC-32-B2	WSS-M14P19-A

Removal

1. Remove the windshield washer reservoir.
Refer to: Windshield Washer Reservoir (501-16 Wipers and Washers, Removal and Installation).
2. **NOTE:** *Be prepared to collect escaping fluid.*

Remove the windshield washer pump.
Use the General Equipment: Fluid Container

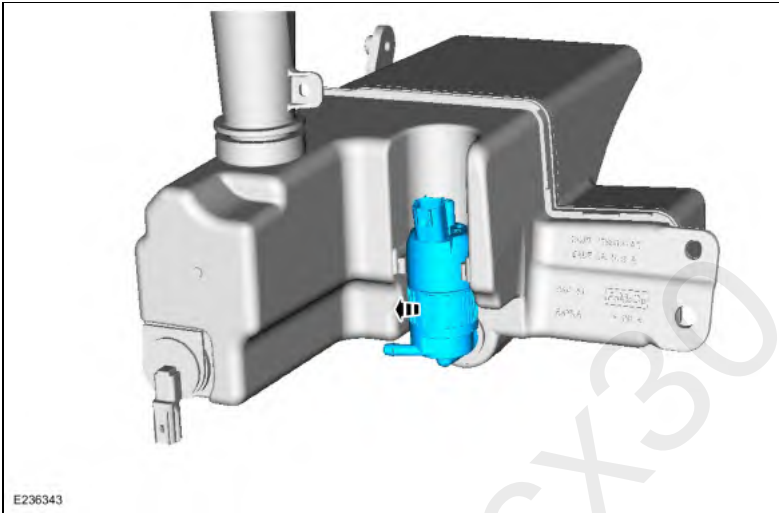

Installation

NOTICE: Do not operate the washer pump prior to filling the windshield washer reservoir. Failure to follow this instruction may result in premature pump failure.

1. To install, reverse the removal procedure.
Material: Motorcraft® Premium Windshield Wash Concentrate with Bitterant / ZC-32-B2 (WSS-M14P19-A)