

Windshield Washer Reservoir

Special Tool(s) / General Equipment

Fluid Suction Gun
Fluid Container


Materials

Name	Specification
Motorcraft® Premium Windshield Wash Concentrate with Bitterant ZC-32-B2	WSS-M14P19-A


Removal

NOTE: Removal steps in this procedure may contain installation details.


- 1. Remove the cap and siphon the windshield washer fluid from the reservoir.
Use the General Equipment: Fluid Suction Gun

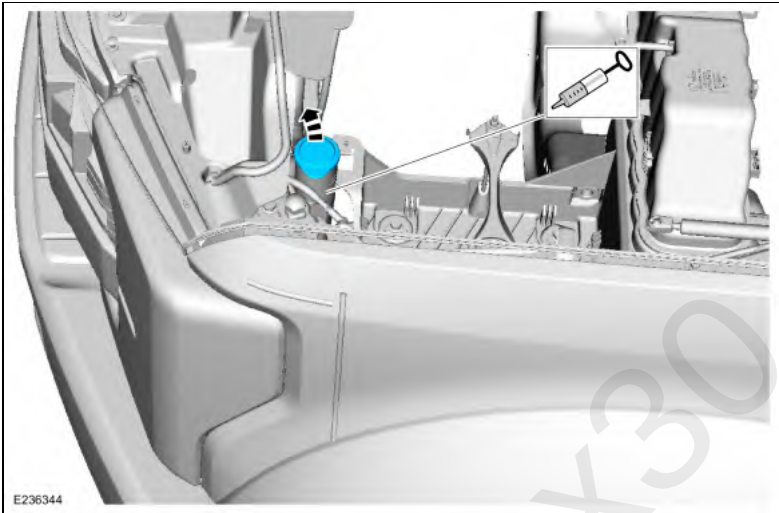


- 2. Remove the pin-type retainer.

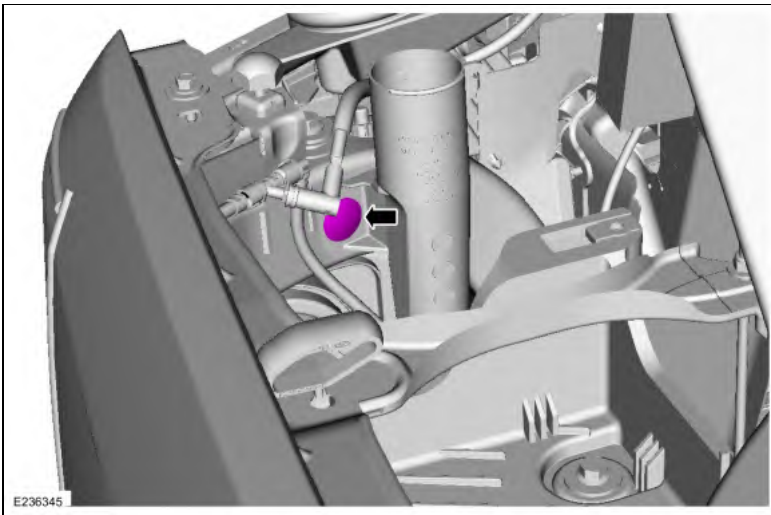

3.
 1. Disconnect the windshield washer hose.
 2. Detach the pin-type retainer and position aside the windshield washer hose.

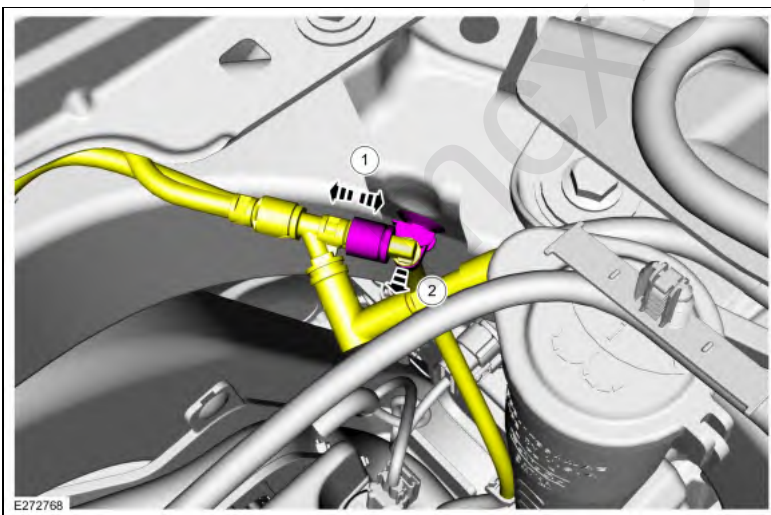


4. Remove the LH front fender splash shield
 Refer to: Fender Splash Shield (501-02 Front End Body Panels, Removal and Installation).
5. Disconnect the electrical connectors.

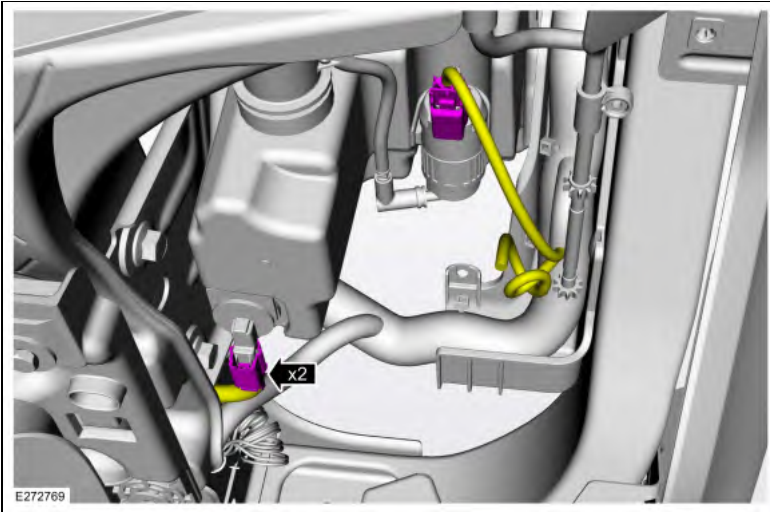


6. **NOTE:** Be prepared to collect escaping fluid.

Remove the retainers and the windshield washer reservoir.
Use the General Equipment: Fluid Container

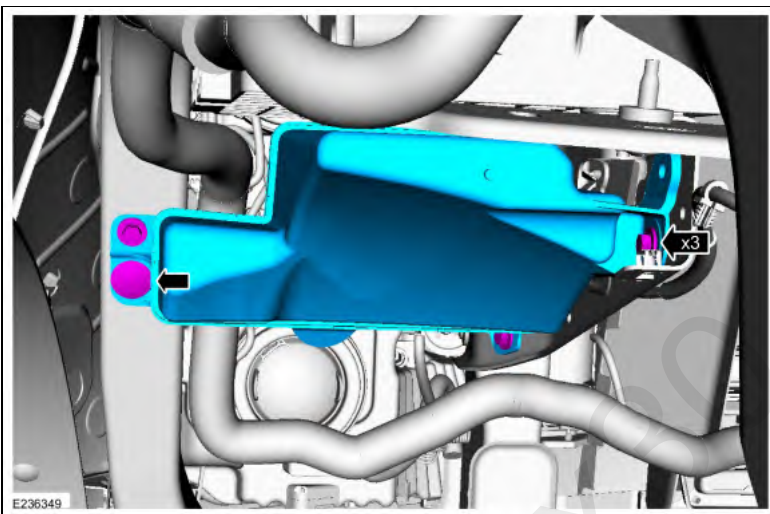

7. Disconnect the windshield washer hose from the windshield washer pump, detach the pin-type retainer and remove the windshield washer hose.

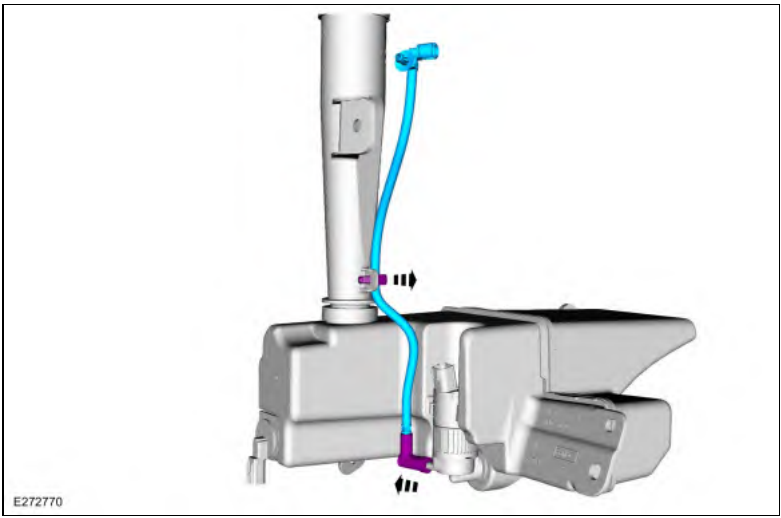

Installation

NOTICE: Do not operate the washer pump prior to filling the windshield washer reservoir. Failure to follow this instruction may result in premature pump failure.

- 1. To install, reverse the removal procedure.
Material: Motorcraft® Premium Windshield Wash Concentrate with Bitterant / ZC-32-B2 (WSS-M14P19-A)