

Roof Opening Panel Fixed Glass

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Remove the roof opening panel frame.
Refer to: Roof Opening Panel Frame (501-17 Roof Opening Panel - Vehicles With: Vista Roof Opening Panel, Removal and Installation).

2. **NOTE:** Position the roof opening panel frame upside down on a suitable workbench.

Remove the the roof opening panel fixed glass bolts and with the aid of an assistant, separate the frame from the glass.

Torque: 35 lb.in (4 Nm)

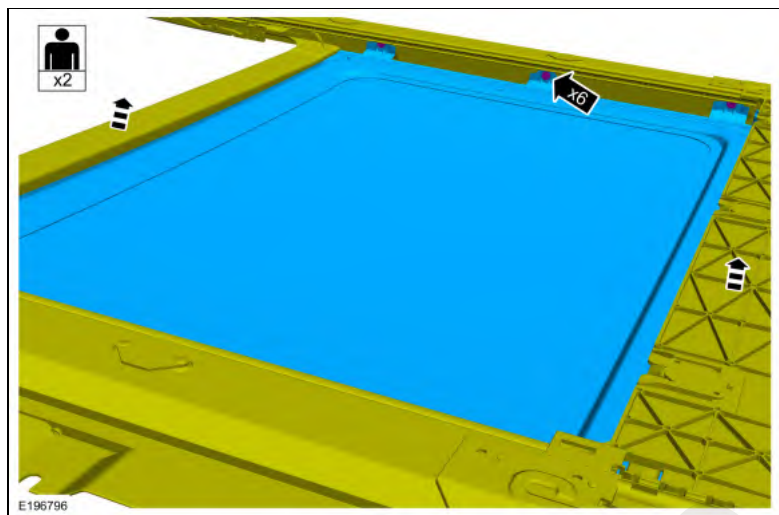

Installation

1. To install, reverse the removal procedure.