


Front Bumper


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Remove the front wheels and tires.
Refer to: Wheel and Tire - Vehicles With: Single Rear Wheels (204-04A Wheels and Tires, Removal and Installation).
Refer to: Wheel and Tire - Vehicles With: Dual Rear Wheels (204-04A Wheels and Tires, Removal and Installation).
2. On both sides.
Remove the bumper extension bolts.
Torque: 35 lb.ft (48 Nm)

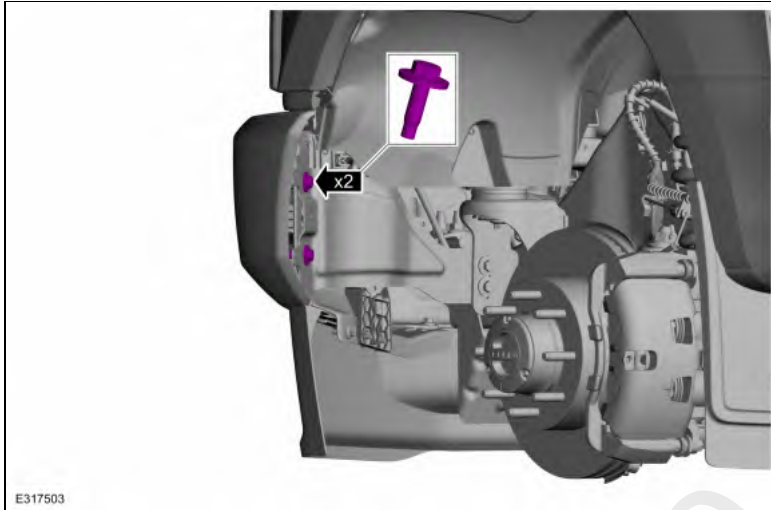


3. **NOTE:** The location of electrical connector and number of wiring harness retainer may vary based on vehicle application.
If equipped.
Disconnect the engine block heater electrical connector and the wiring harness retainer.

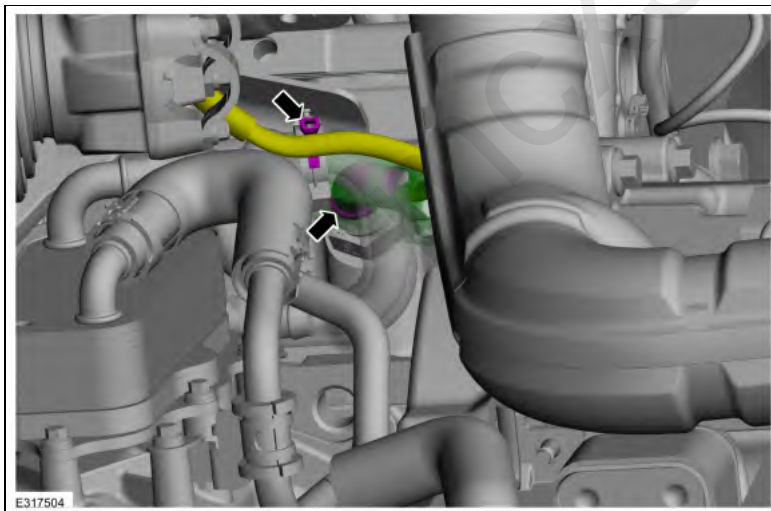


4. **NOTE:** The location and number of wiring harness retainers may vary based on vehicle application.
If equipped.
Disconnect the engine block heater wiring harness retainers.

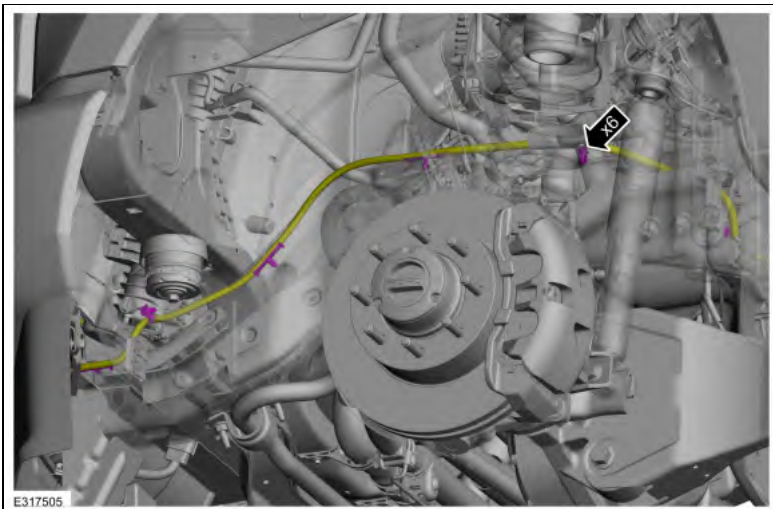


5. If equipped.
Disconnect the front bumper harness electrical connector.

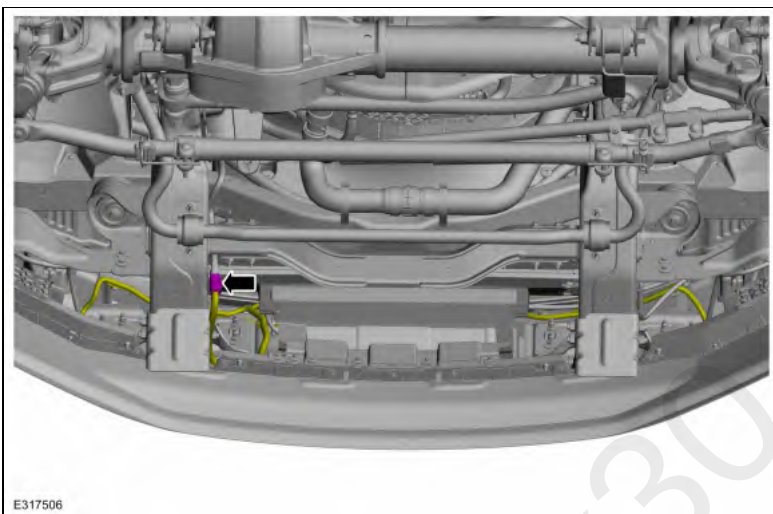

6. Release the clips, the tabs and remove the front tow hook covers.

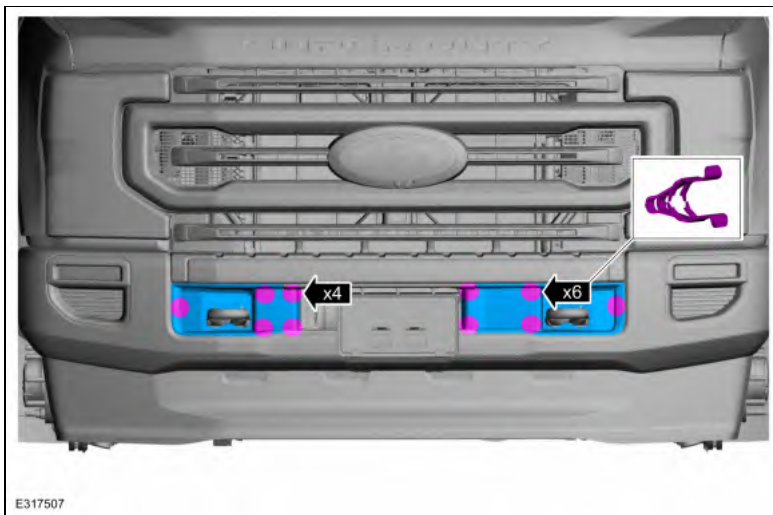

7. If equipped.
Remove the CCM.
Refer to: Cruise Control Module (CCM) (419-03B Cruise Control - Vehicles With: Adaptive Cruise Control, Removal and Installation).
8. With the help of an assistant.
Remove the bolts and the front bumper assembly.
Torque: 76 lb.ft (103 Nm)

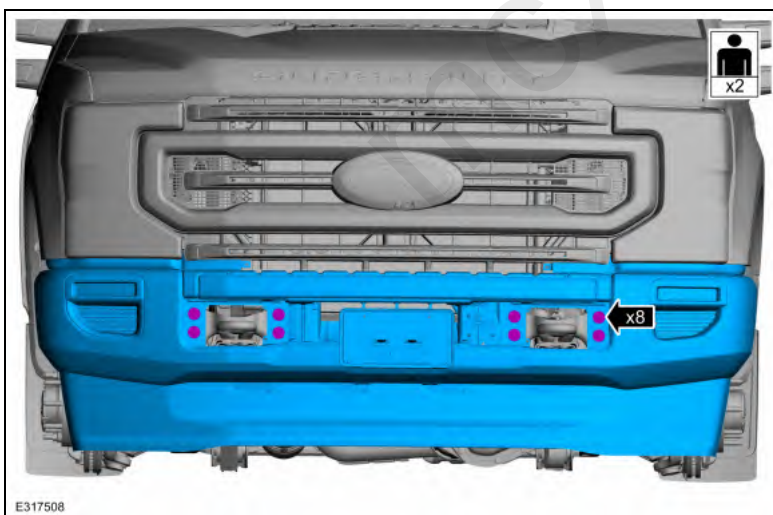

Installation

1. To install, reverse the removal procedure.

